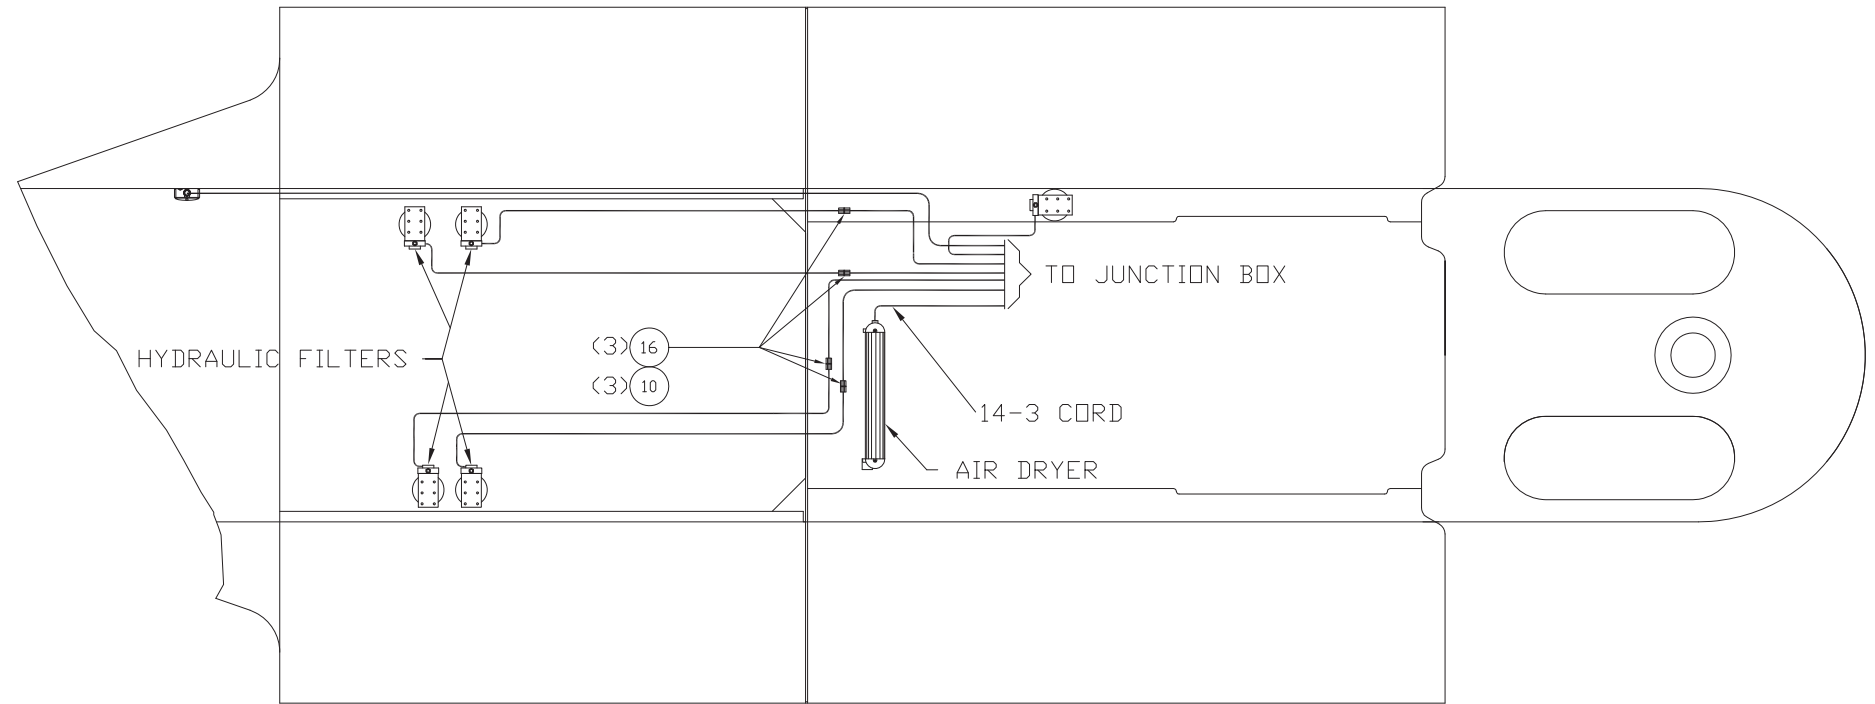

Wiring Diagram, Chassis

Wiring Diagram, Chassis


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	587195		Wiring Diagram, Chassis				
1	200220	2	. Battery	11	221966	1	. Terminal
2	249106	1	. Switch, Battery Disconnect	12	200248	6	. Terminal Ring
3	586479	1	. Wire Harness,Battery	13	221181	5	. Boot,Rubber
4	526544	1	. Wire Assembly,Ground	14	223872	20	. Tie Strap
5	526535	1	. Wire Assembly,Ground	15	200499	14	. Hose Clamp
6	560516	1	. Bracket	16	221963	9	. Terminal
8	219386	60'	. Wire	19	200247	1	. Terminal Ring
9	230729	1	. Sending Unit	20	219410	20'	. Wire
10	221964	9	. Terminal				



FUEL SENDER CALIBRATION:

MANUAL SET EMPTY - WITH SENDER OUT OF THE TANK, IGN. OFF, PUT JUMPER BETWEEN SEND + NEG. TURN ON IGN THEN REMOVE JUMPER AFTER 2 SECONDS. (GAUGE MUST BOUNCE SEVERAL TIMES AND LAND AT EMPTY).

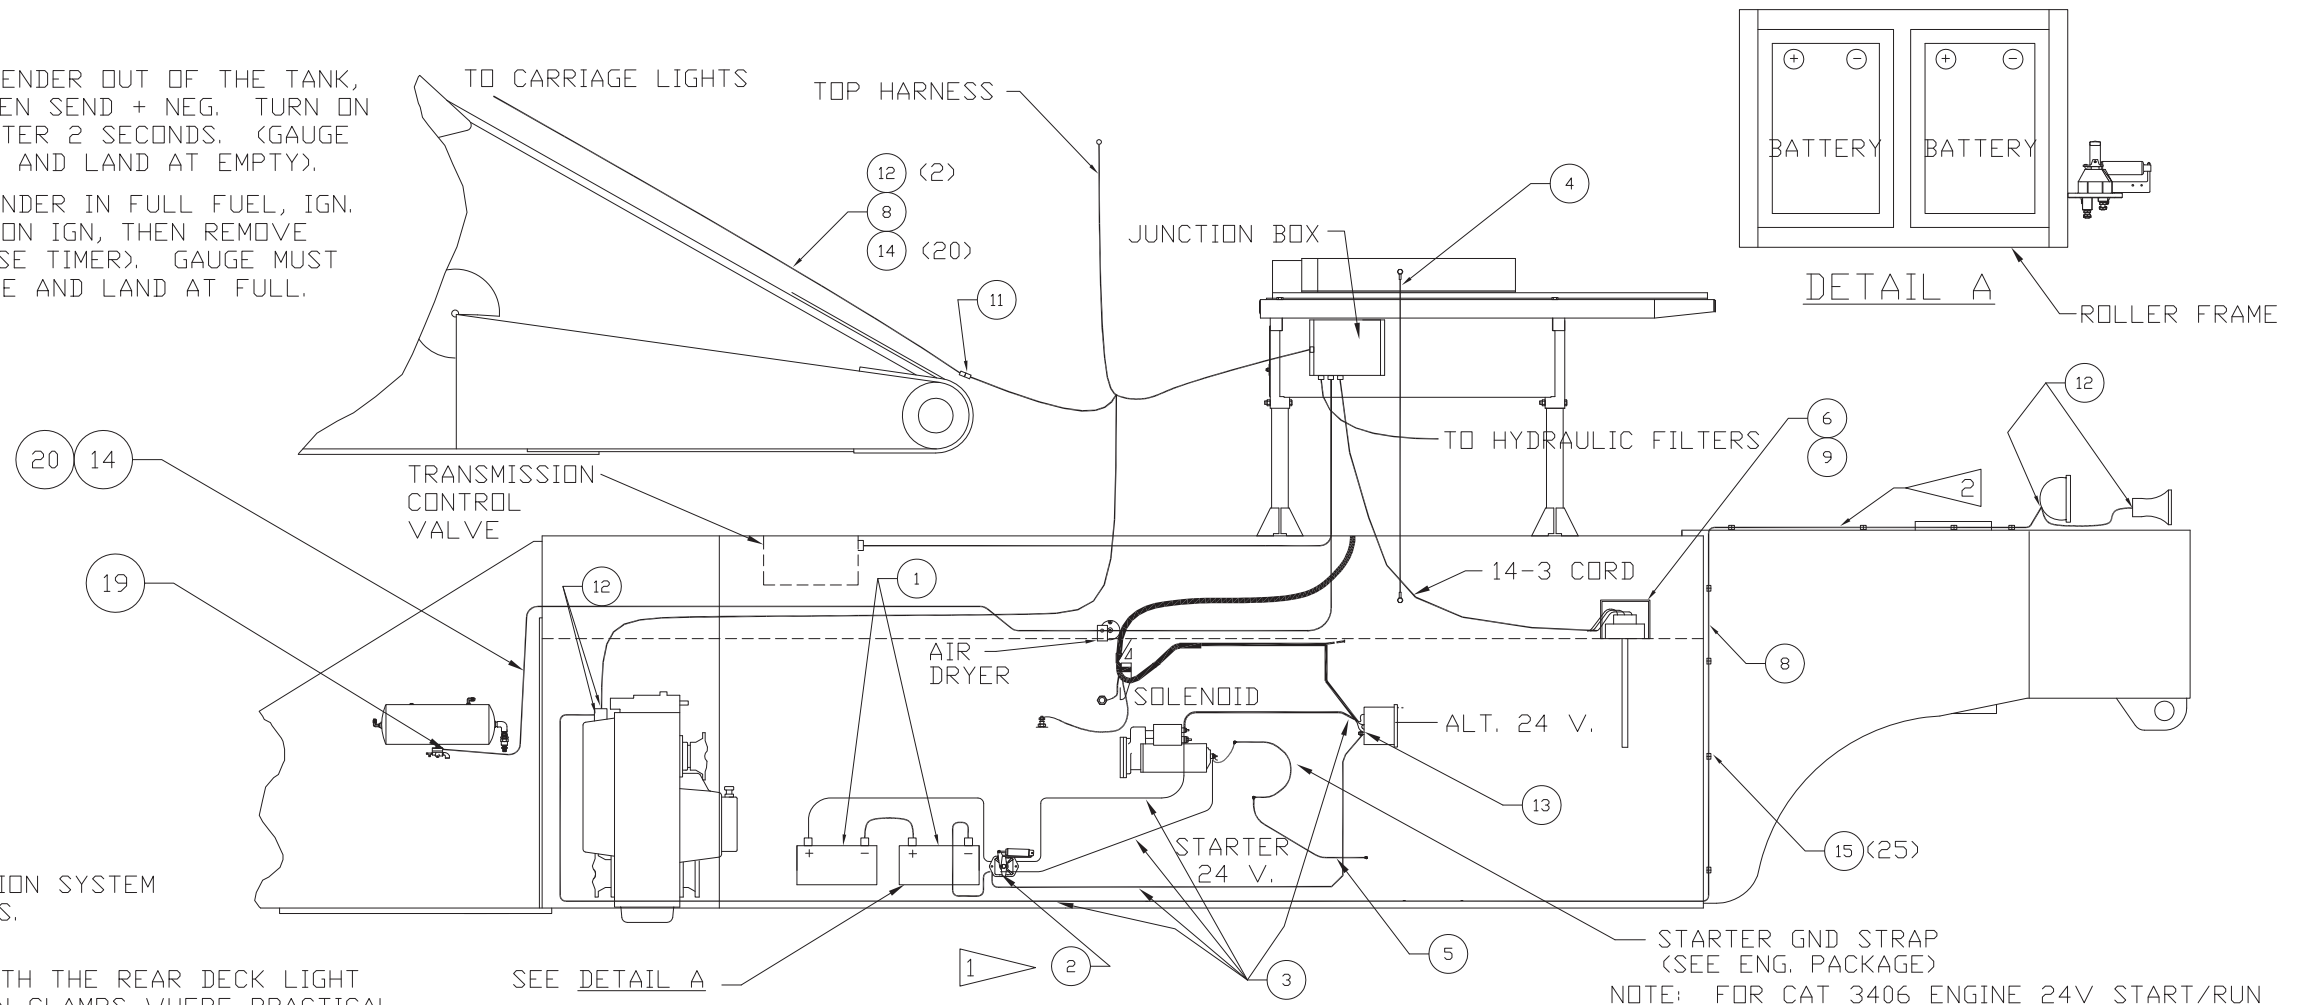MANUAL SET FULL - WITH SENDER IN FULL FUEL, IGN. OFF, CONNECT JUMPER, TURN ON IGN, THEN REMOVE JUMPER AFTER 5 SECONDS (USE TIMER). GAUGE MUST BOUNCE MORE THAN ONCE AND LAND AT FULL.



1 SEE FIRE SUPPRESSION SYSTEM ON M/S FOR DETAILS.

2 ROUT THIS WIRE WITH THE REAR DECK LIGHT WIRES. USE COMMON CLAMPS WHERE PRACTICAL. REFER TO THE LIGHT INSTALLATION-REAR CHASSIS ON THE LIGHTS PARTS LIST FOR ROUTING.

NOTE: FOR CAT 3406 ENGINE 24V START/RUN