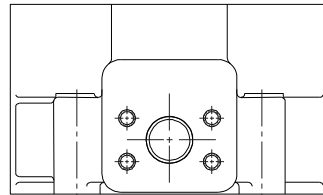
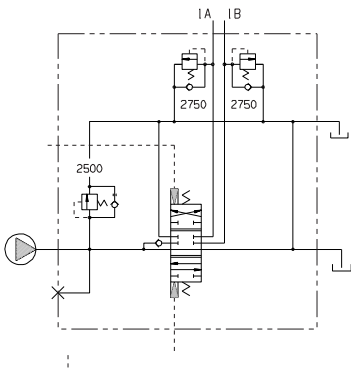
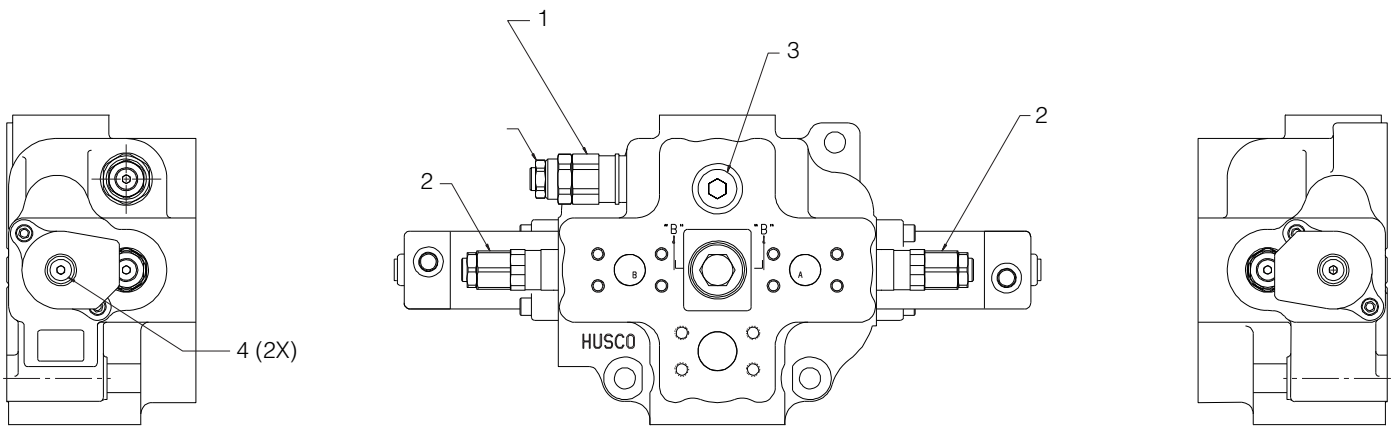
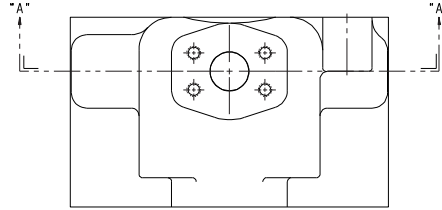

Hoist/Dump Valve Assembly

Hoist/Dump Valve Assembly

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	587574		Hoist/DumpValve Assembly				
1	588592	1	. Valve, Relief	8	206968	1	. Poppet, Check Valve
	588587	1	. . Seal & Spring Kit	9	588607	2	. Cap, Spool
2	250108	2	. Valve, Relief	10	588604	4	. Capscrew
	588588	1	. . Seal & Spring Kit	11	588596	2	. Plug, Shutoff
3	247389	1	. Plug	12	588602	1	. Spring Seat
4	588593	2	. Plug Assy	13	588599	1	. Screw, Shoulder
5	235592	3	. Pipe Plug	14	588598	3	. Spring
	247380	1	. . O-Ring	15	588597	1	. Seat, Spring
6	588608	3	. Plug	16	589886	2	. Spool
7	206979	1	. Spring	17	223836	2	.O-Ring
				18	588586	2	.O-Ring

Hoist/Dump Valve Assembly



Hoist/Dump Valve Assembly

