


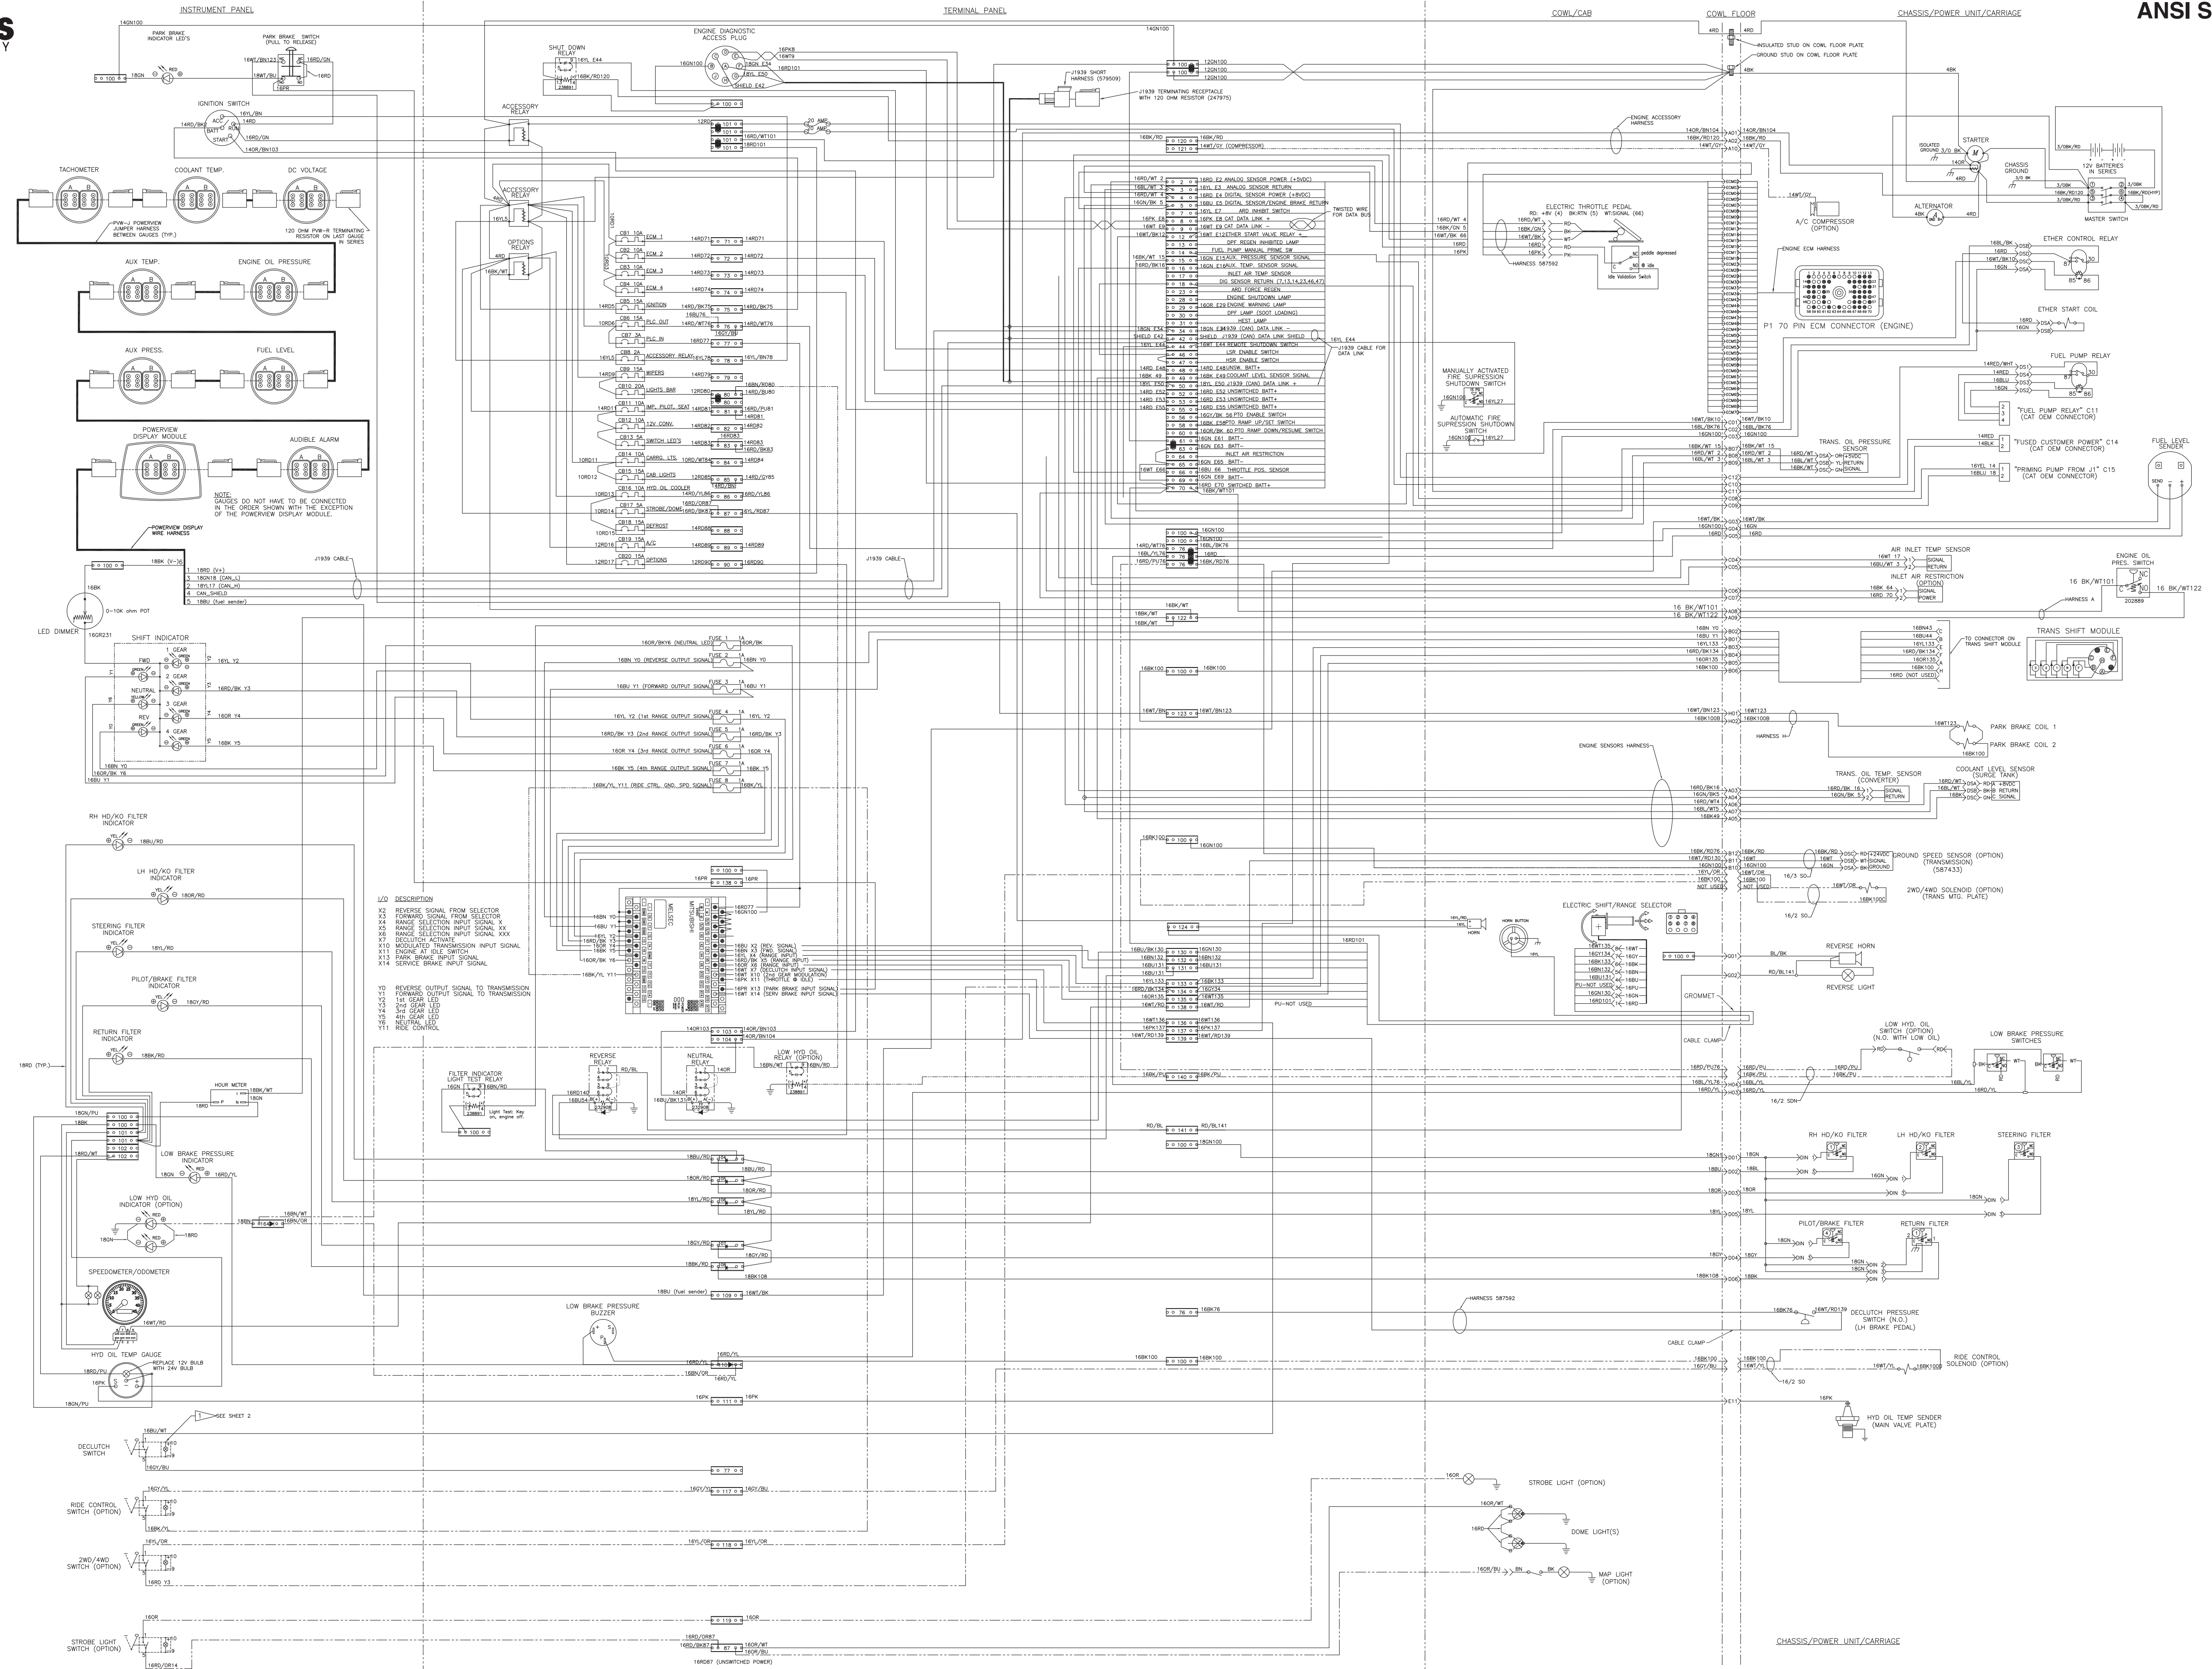

NOTE:
WIRES REPRESENTED WITH PHANTOM LINES INDICATE OPTIONAL EQUIPMENT.
SEE SALES ORDER FOR SPECIFIC OPTIONS FOR EACH MACHINE.

INSTRUMENT PANEL

TERMINAL PANEL

JUNCTION BOX

COWL/CAB

CHASSIS/POWER UNIT/CARRIAGE

