


Door Assembly, RH

Door Assembly, RH

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	596348		Door Assembly, RH				
1	258891	1	. Latch Case Assembly	17	258903	2	. Spacer, Latch
2	258711	1	. Gasket, Door Handle	18	258890	1	. Lever, RH Door Release
3	258685	1	. Handle, Pull: Exterior	19	258899	2	. Washer
	596376	1	. . Key Set	20	258898	2	. Locknut
4	586571	1	. Cover, RH Latch	21	258901	2	. Spring Washer
5	586550	1	. Plate, Spacer	22	258893	2	. Screw
6	258864	3	. Screw	23	258904	1	. Spring, Return
8	586530	1	. Door Frame, RH	24	586619	1	. Glass, Door, Fixed
9	249395	8	. Capscrew	25	586620	1	. Glass, Door
10	18717W	2	. Capscrew	26	590053	1	. Striker, Holdback
11	258892	1	. Yoke, Linkage	27	R13811014	2	. Capscrew
12	258905	1	. Pin, Fastener	28	R13802914	2	. Washer
13	258897	1	. Ring, Retaining	29	588937	1	. Spacer, Striker
14	258896	1	. Link, Yoke To Latch Case	30	588938	1	. Spacer, Striker
15	258894	2	. Screw	31	595993	195"	. Seal, Door
16	258902	4	. Washer	32	596083-66	A/R	. Seal, Door

Door Assembly, RH

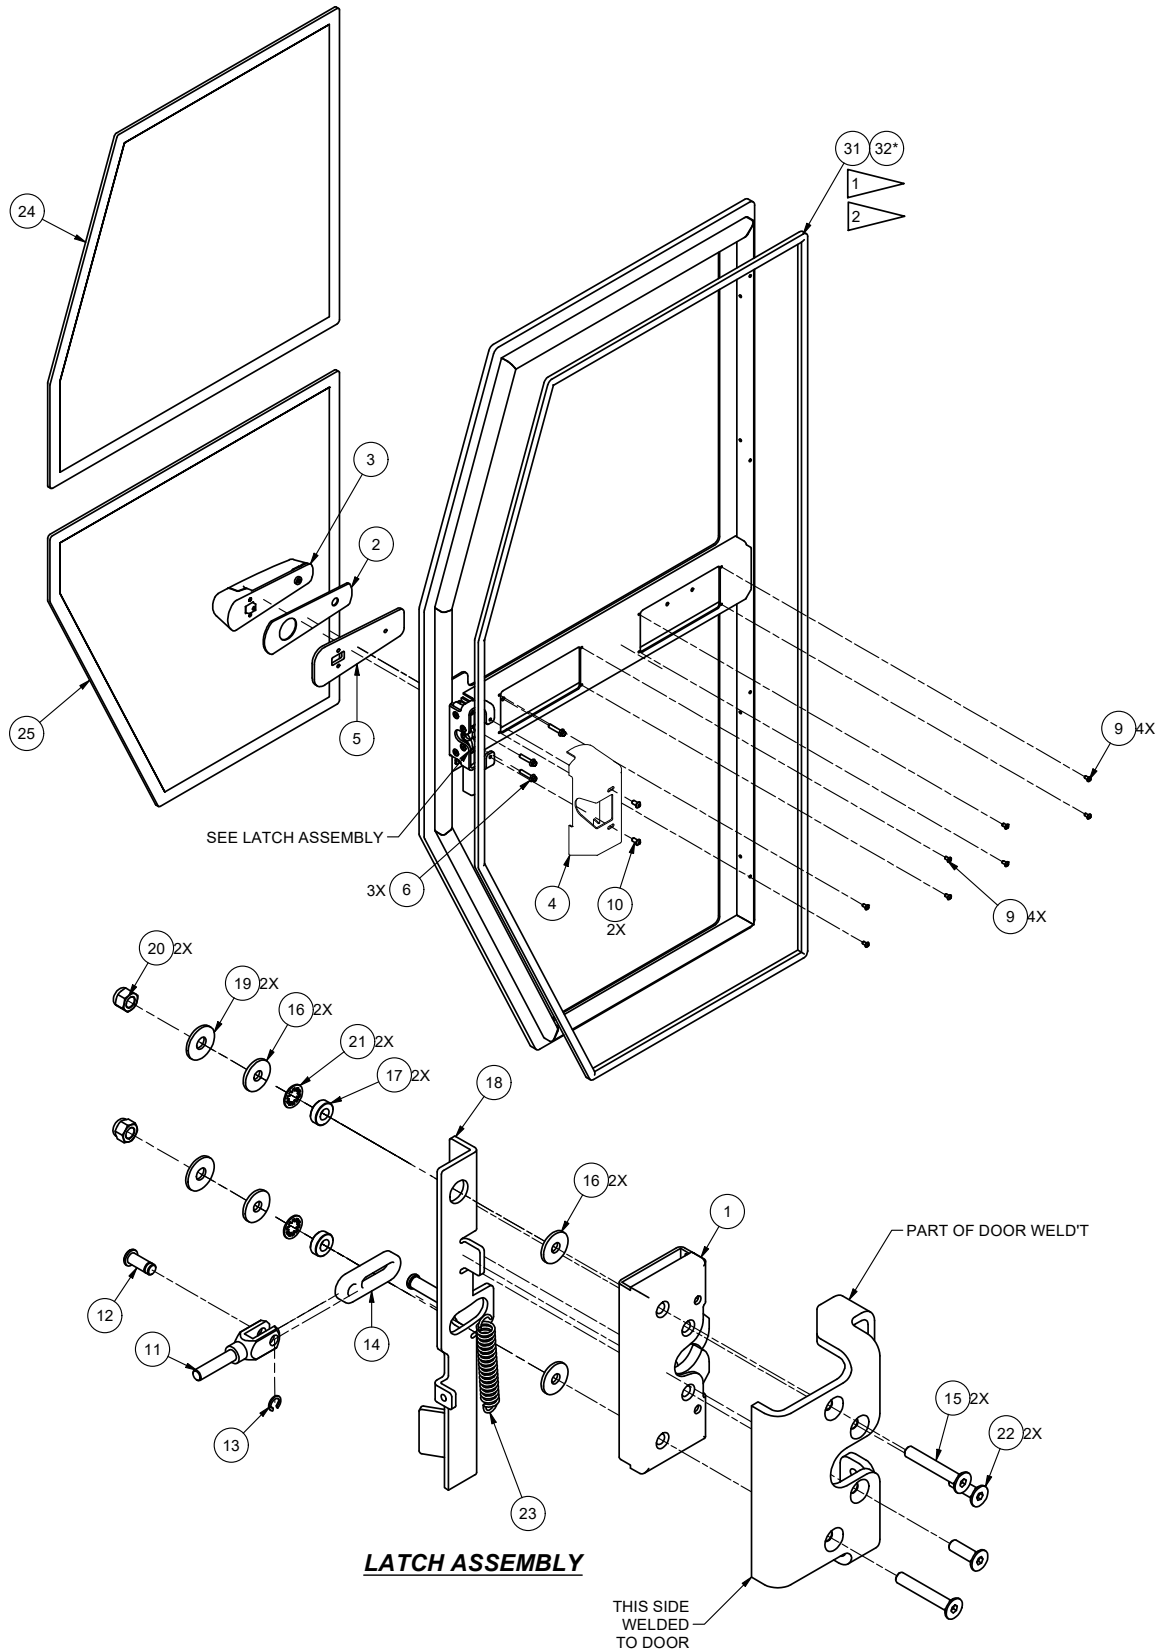

NOTES:

- 1: INSTALL SEAL AS A CONTINUOUS PIECE AROUND TOP, FRONT, & BOTTOM SIDES OF THE DOOR. MITER CUT AT THE 90° CORNERS TO PREVENT FOLDING SEAL. GLUE MITERED CORNERS.
- 2: IF SEAL CATCHES ON DOOR TRIM ON HINGE SIDE OF DOOR, THE BACK SECTION OF D-SEAL MAY BE REPLACED WITH ITEM 32 FLAT SEAL. GLUE FLAT SEAL AND ENDS OF D-SEAL TOGETHER.

