


Handle, Joystick, 2 Button, 1 Rocker

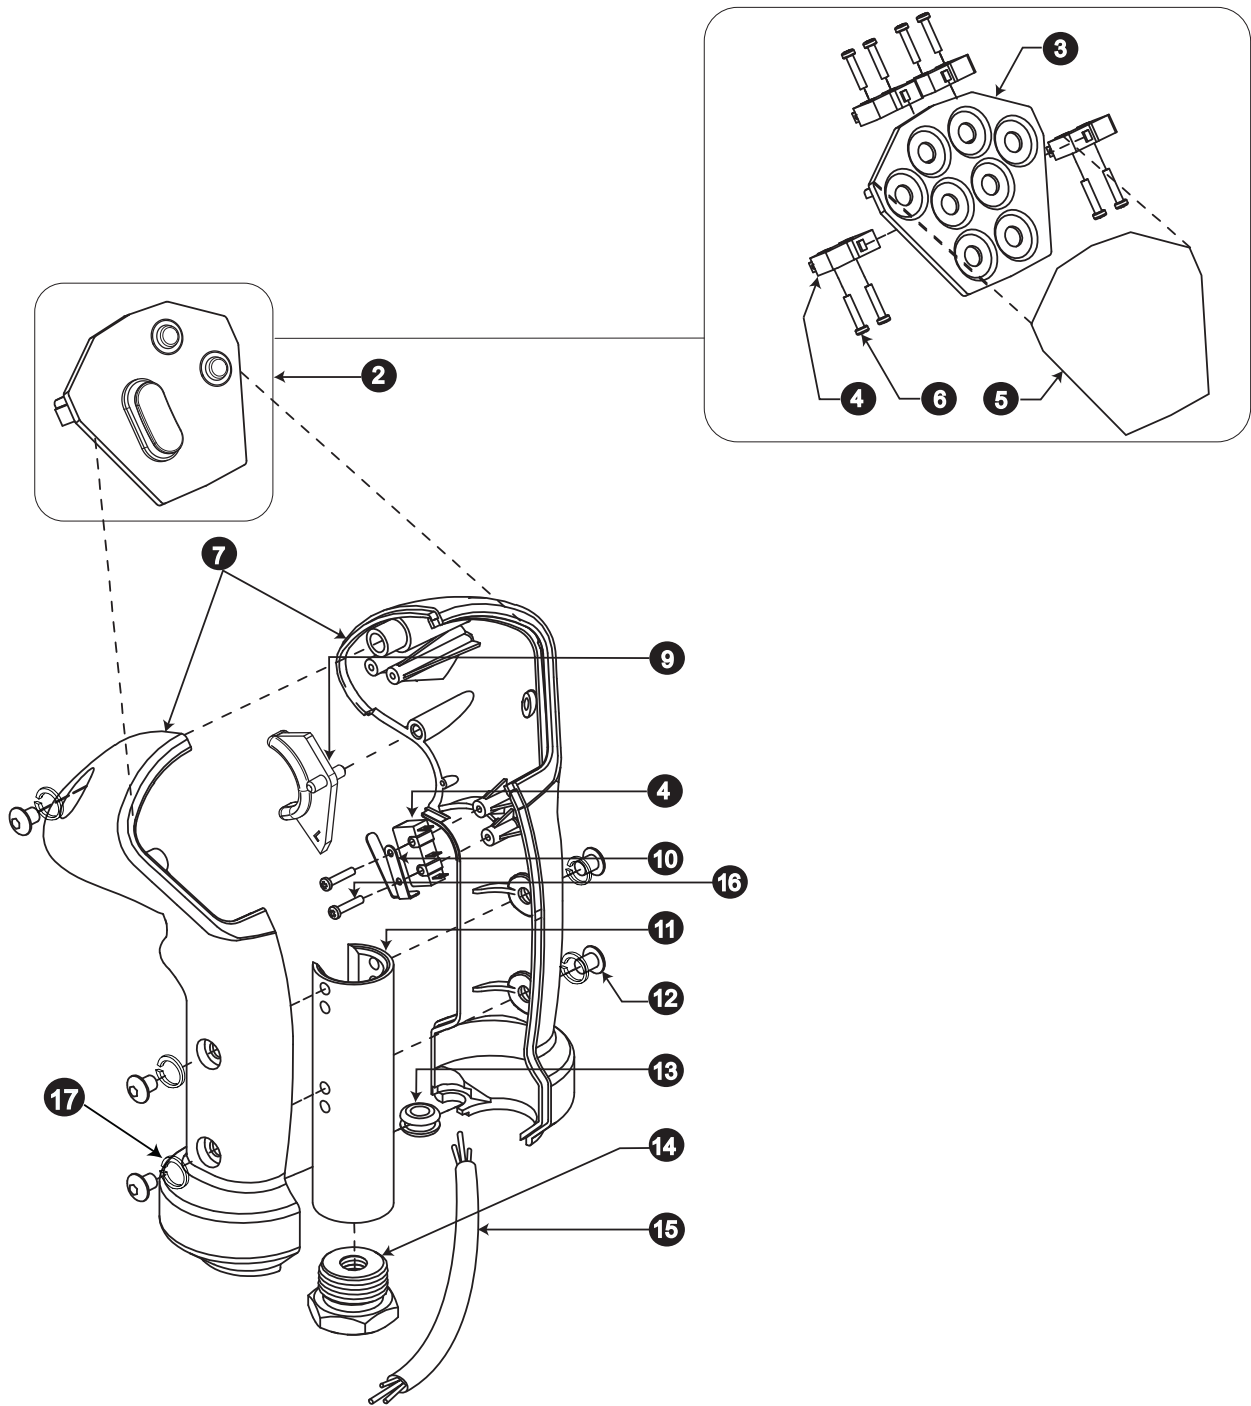

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
597198 Handle, Joystick, 2 Button, 1 Rocker							
2	597384	1	. Switch Pack Assembly	11	249908	1	. Mounting Pin
3	NSS	1	. . Faceplate	12	256874	5	. Capscrew
4	250627	6	. . Switch	13	249910	1	. Grommet
5	NSS	1	. . Button Overlay	14	593476	1	. Adapter Bushing
6	249904	8	. . Screws	15	597385	1	. Wire Harness
7	256470	1	. Handle Case, Black	16	253037	2	. Screws, Trigger Switch
9	588944	1	. Single Trigger, Black	17	256875	5	. Washer, Lock
10	253042	1	. Leaf Spring For Trigger				

NSS Not sold separately