


Joystick Assembly, 4-Button, 1-Slider, Double Trigger

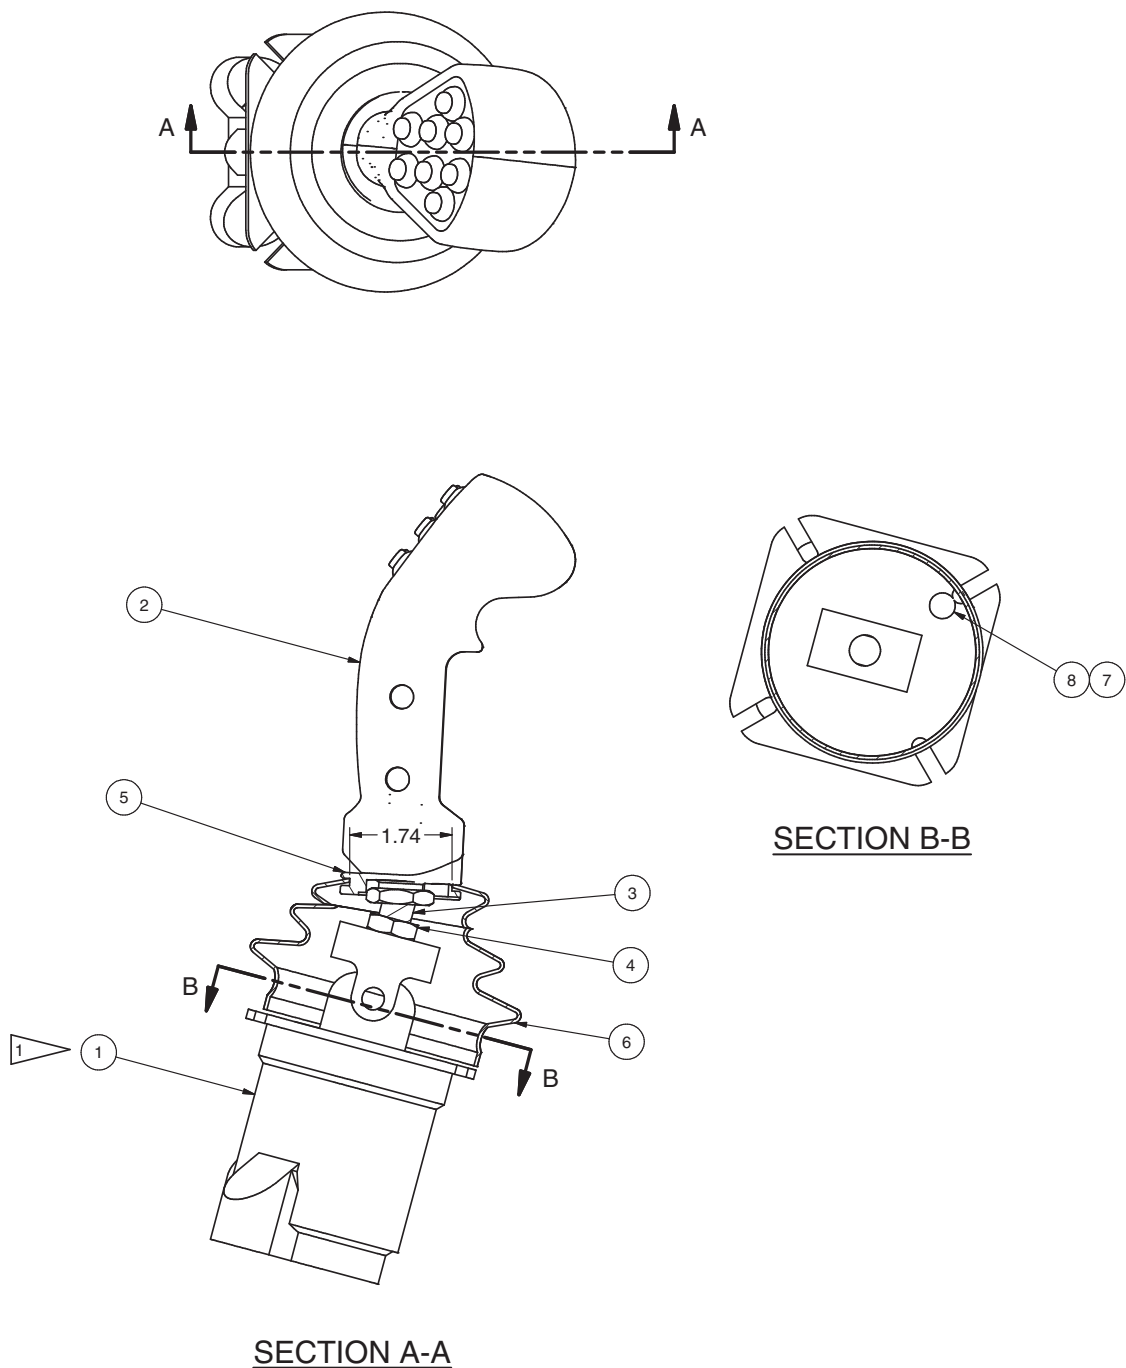

NOTE:
1: BASE MAY BE DIFFERENT THEN PICTURED.

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
597683 Joystick Assembly, 4-Button, 1-Slider, Double Trigger							
1	* 589619	1	. Valve, Pilot	6	249617	1	. Bellows
2	* 597684	1	. Handle, Joystick	7	587019	2IN	. Loom, Wire
3	581587	1	. Rod	8	249329	2	. Cable Tie
4	251330	1	. Jam Nut	* See Separate Coverage			
5	251324	1	. Adapter, Boot				