

Chassis Installation




Chassis Installation

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
600984-Met			Chassis Installation				
1	600997	1	. Chassis Weldment	40	236805	20	. Capscrew
2	601627	1	. Cooling Box, RH	42	R13811210	40	. Capscrew
3	601628	1	. Cooling Box, LH	43	R13811213	8	. Capscrew
4	*a 600265	1	. Hydraulic Tank	46	241023	23	. Capscrew
5	*a 598459	1	. Fuel Tank Assembly	47	Y19C-M1650	29	. Capscrew
6	598460	1	. Stair Weldment, RH	48	Y19C-M1660	23	. Capscrew
7	598461	1	. Stair Weldment, LH	61	302401W	48	. Locknut
8	*a 600633	1	. Battery Box Assembly	63	302404W	52	. Locknut
9	598462	1	. Walkway, LH	70	221767W	124	. Washer
12	601634	1	. Rear Walkway, RH	72	234271	135	. Washer
13	601635	1	. Rear Walkway, LH	73	~~~	~~	. Not Used
14	601647	1	. Plate, RH Cooler Cover	74	~~~	~~	. Not Used
15	601648	1	. Plate, LH Cooler Cover	75	~~~	~~	. Not Used
18	598518	1	. Handrail, RH Front	76	~~~	~~	. Not Used
19	598519	1	. Handrail, LH Front	77	~~~	~~	. Not Used
20	601649	2	. Handrail, Rear	78	~~~	~~	. Not Used
21	598526	1	. Plate, Filters Cover	79	~~~	~~	. Not Used
22	598527	1	. Plate, Fire Supp Tank Cover	80	~~~	~~	. Not Used
23	598517-12	2	. Trim, Hatch Seal	81	~~~	~~	. Not Used
24	594937	4	. Step	82	~~~	~~	. Not Used
25	598515	4	. Plate, Step Mount	83	~~~	~~	. Not Used
26	594935	8	. Plate, Clamp	84	603749	1	. Cover Plate Access
27	594938	4	. Belt, Support	85	Y19C-M1055	8	. Capscrew
28	598566	12	. U-Bolt, Vibration Damping	87	598513	1	. Plate, Spray Guard
29	598567	2	. Plate, Handrail Clamp Mount	88	R13802914	6	. Washer
30	601652	4	. Plate, Handrail Clamp Mount	89	R13809366	6	. Capscrew


*a See Separate Coverage


This installation uses metric hardware. Last used on L100-340.

For later installations with imperial hardware, see page 600984-Imp.

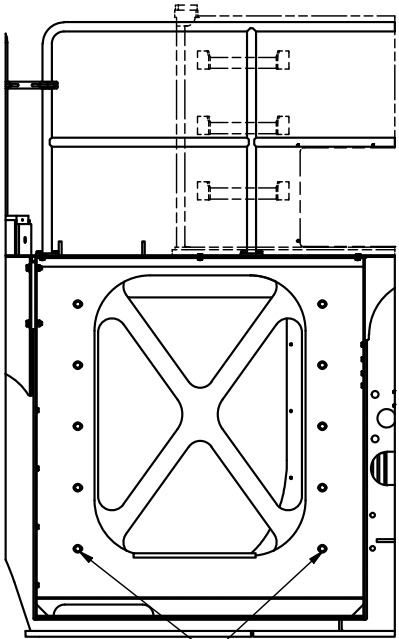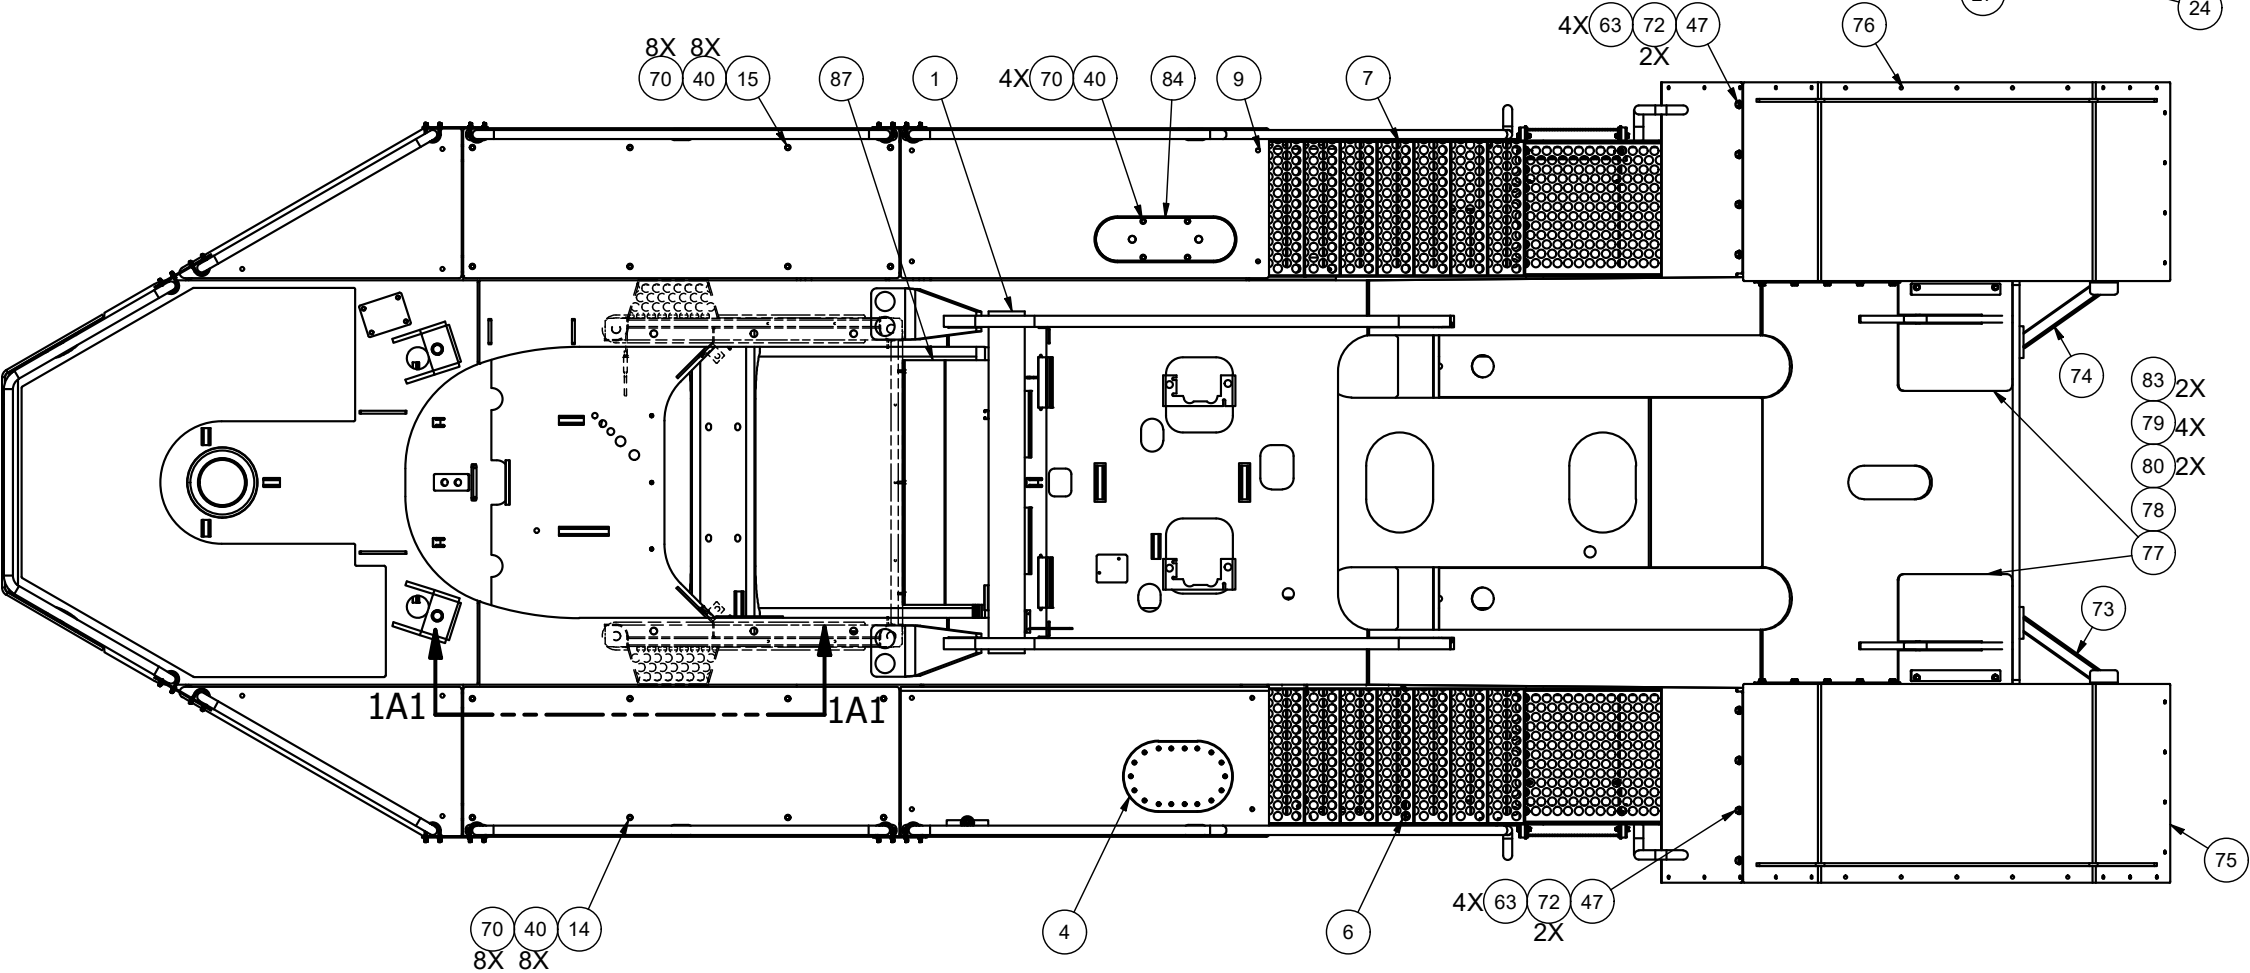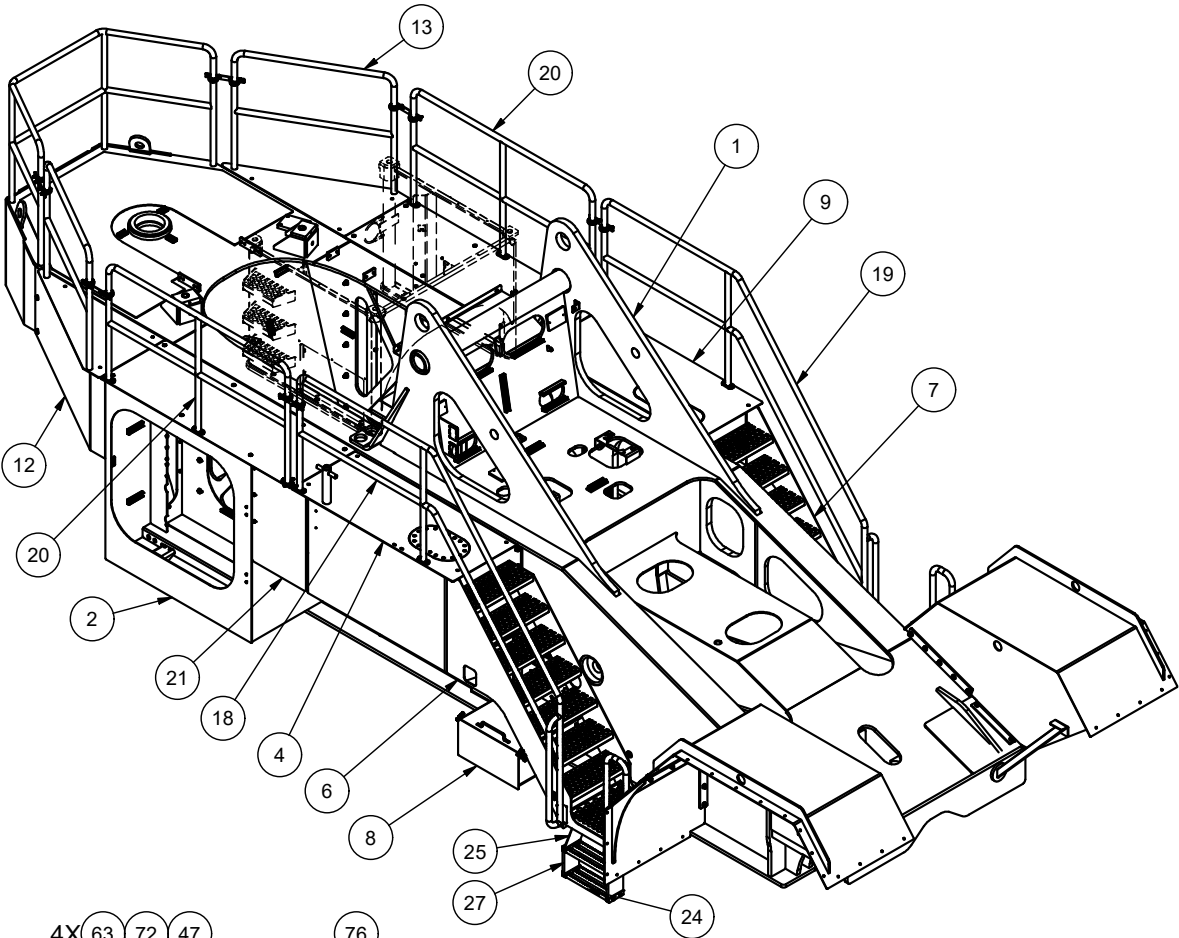


SECTION 1A1-1A1
INSTL TYP ITEMS 2 & 3.

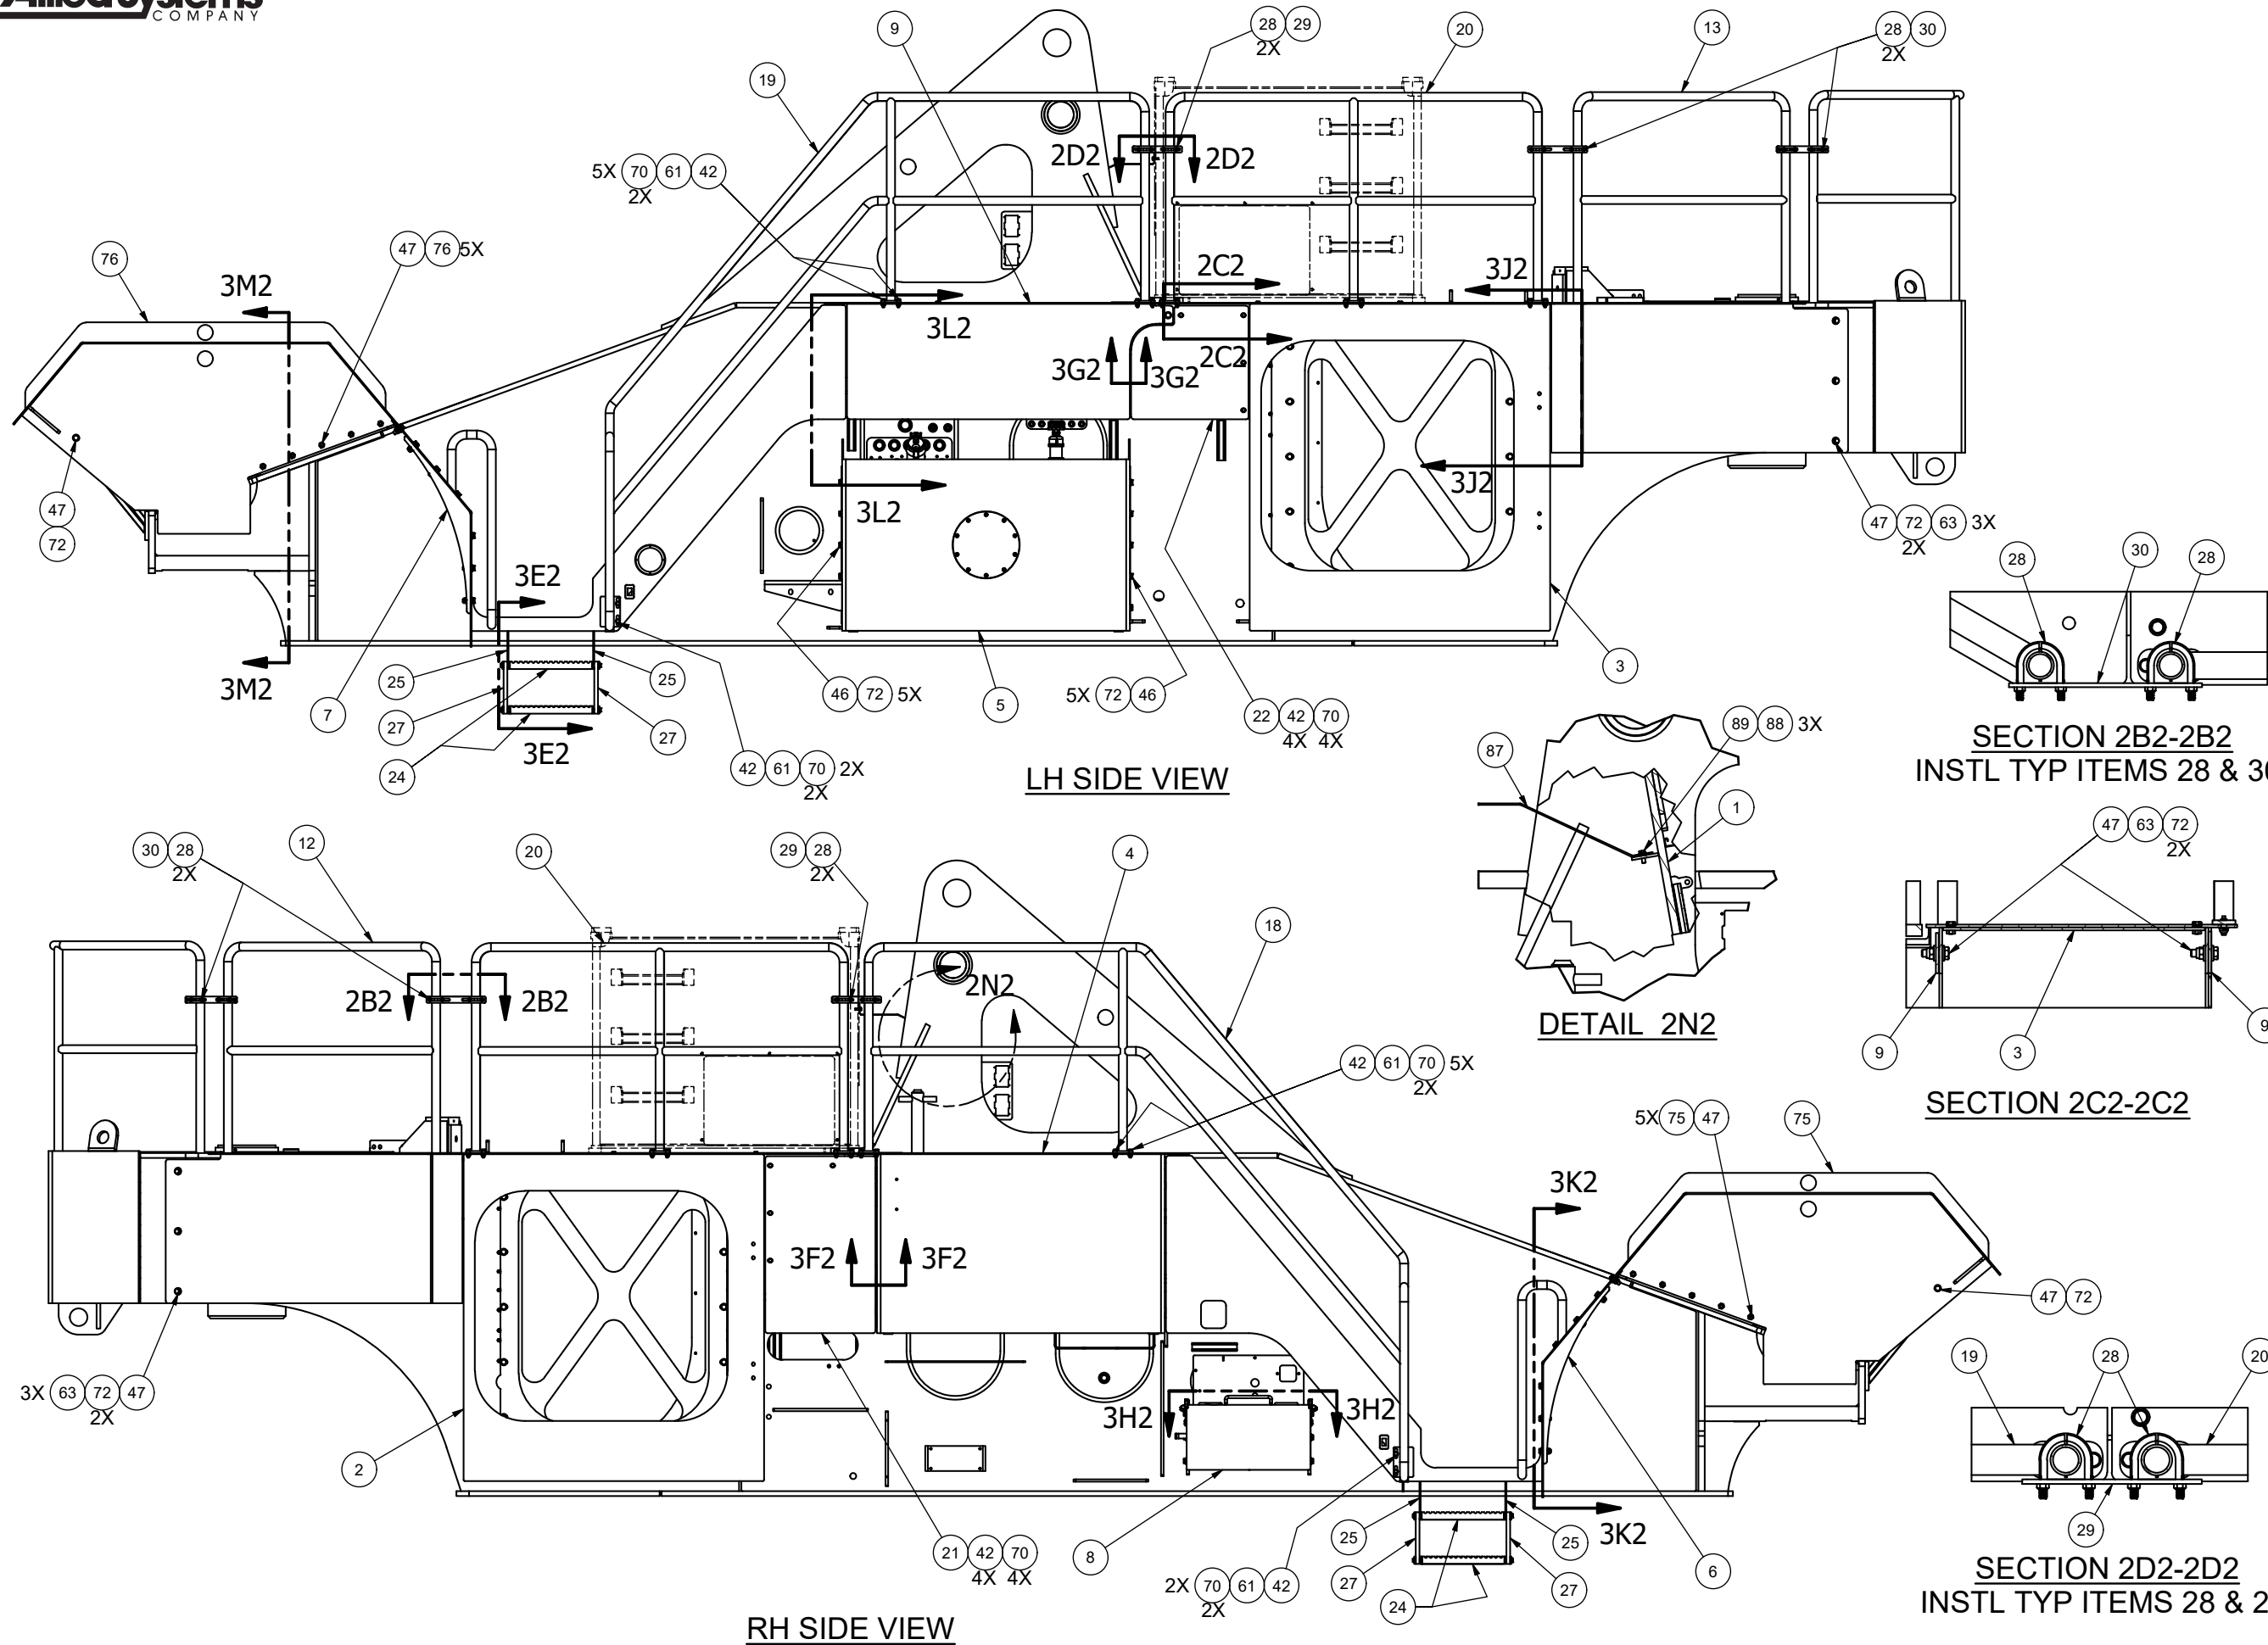


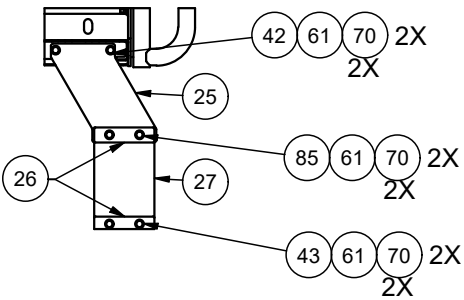


SECTION 3E2-3E2
4X

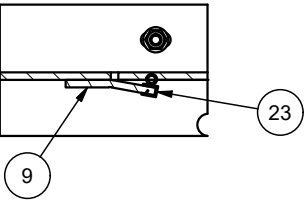


SECTION 3G2-3G2

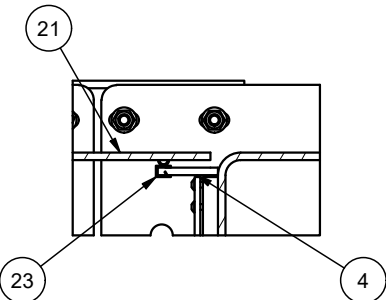


SECTION 3F2-3F2

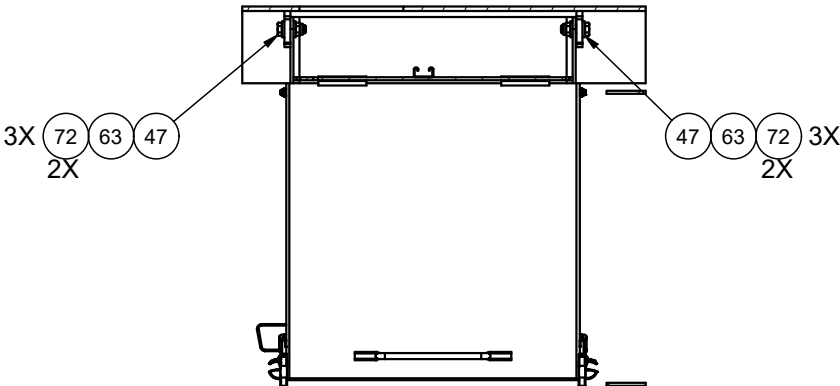


SECTION 3H2-3H2

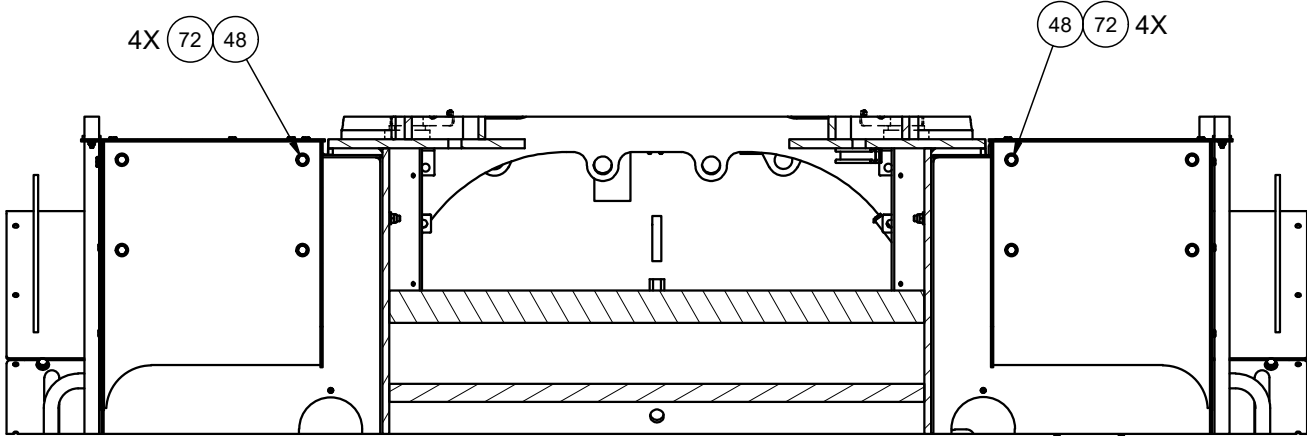


SECTION 3J2-3J2

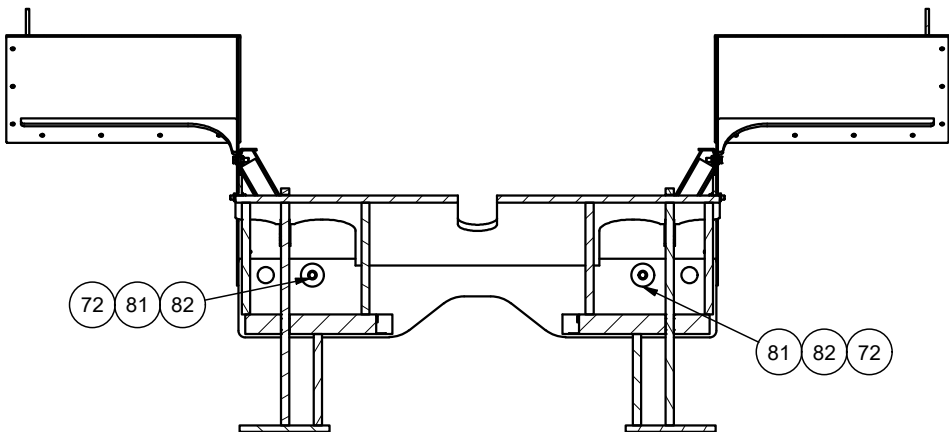

SECTION 3M2-3M2

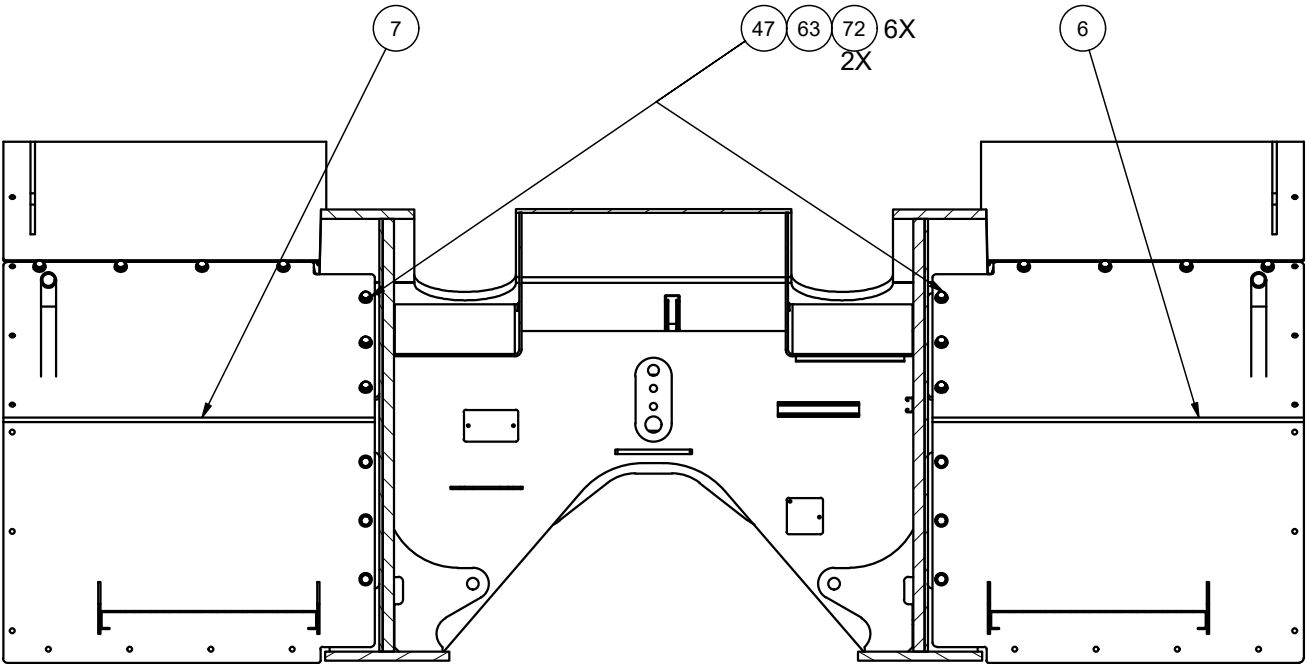

SECTION 3K2-3K2

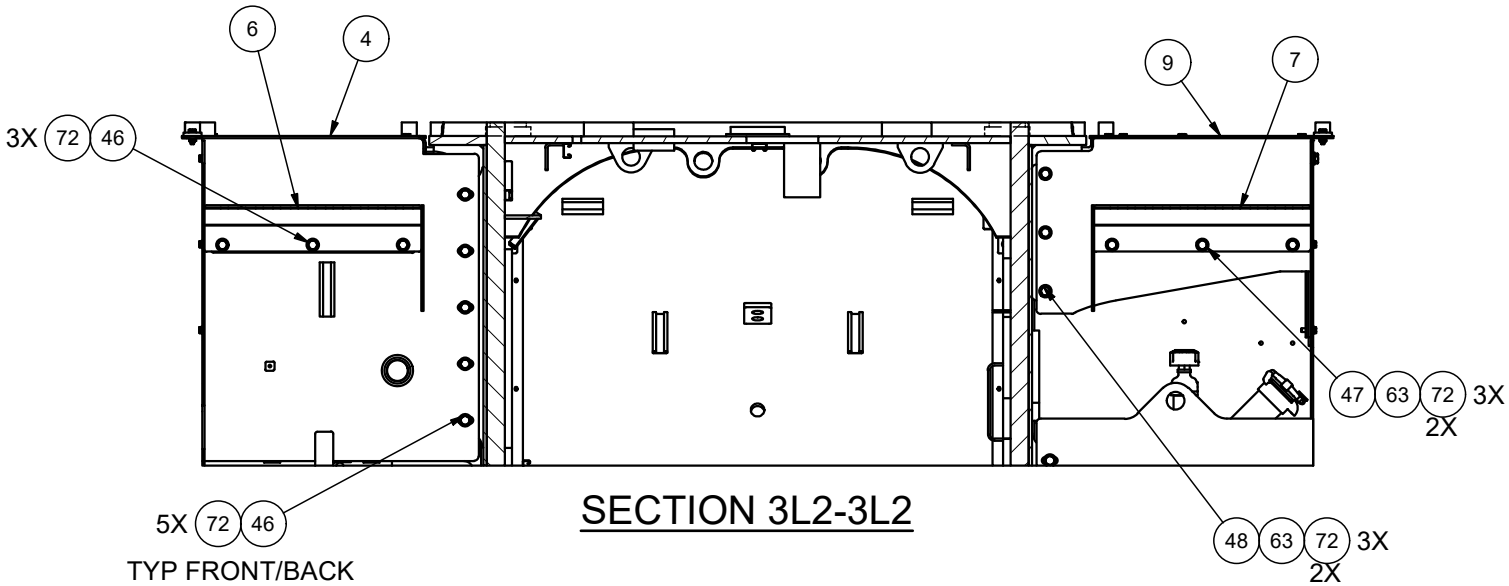

SECTION 3L2-3L2