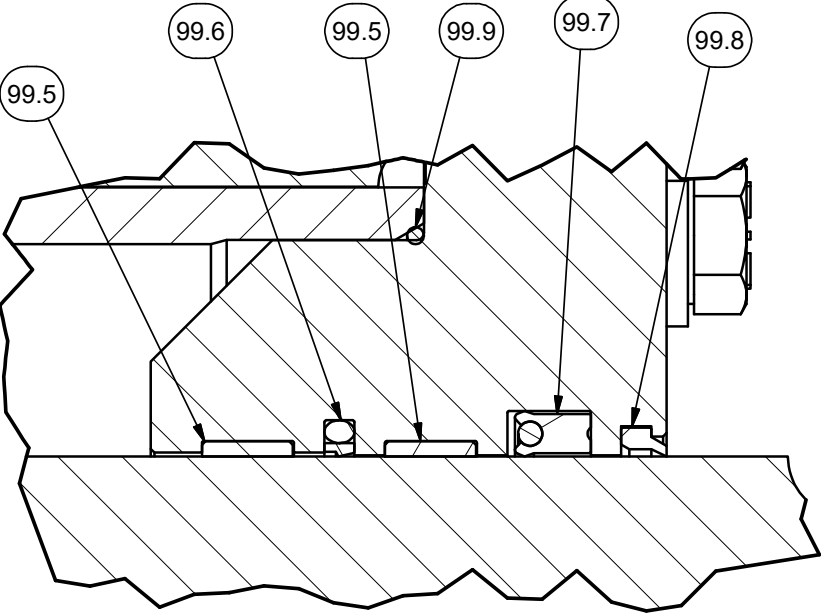
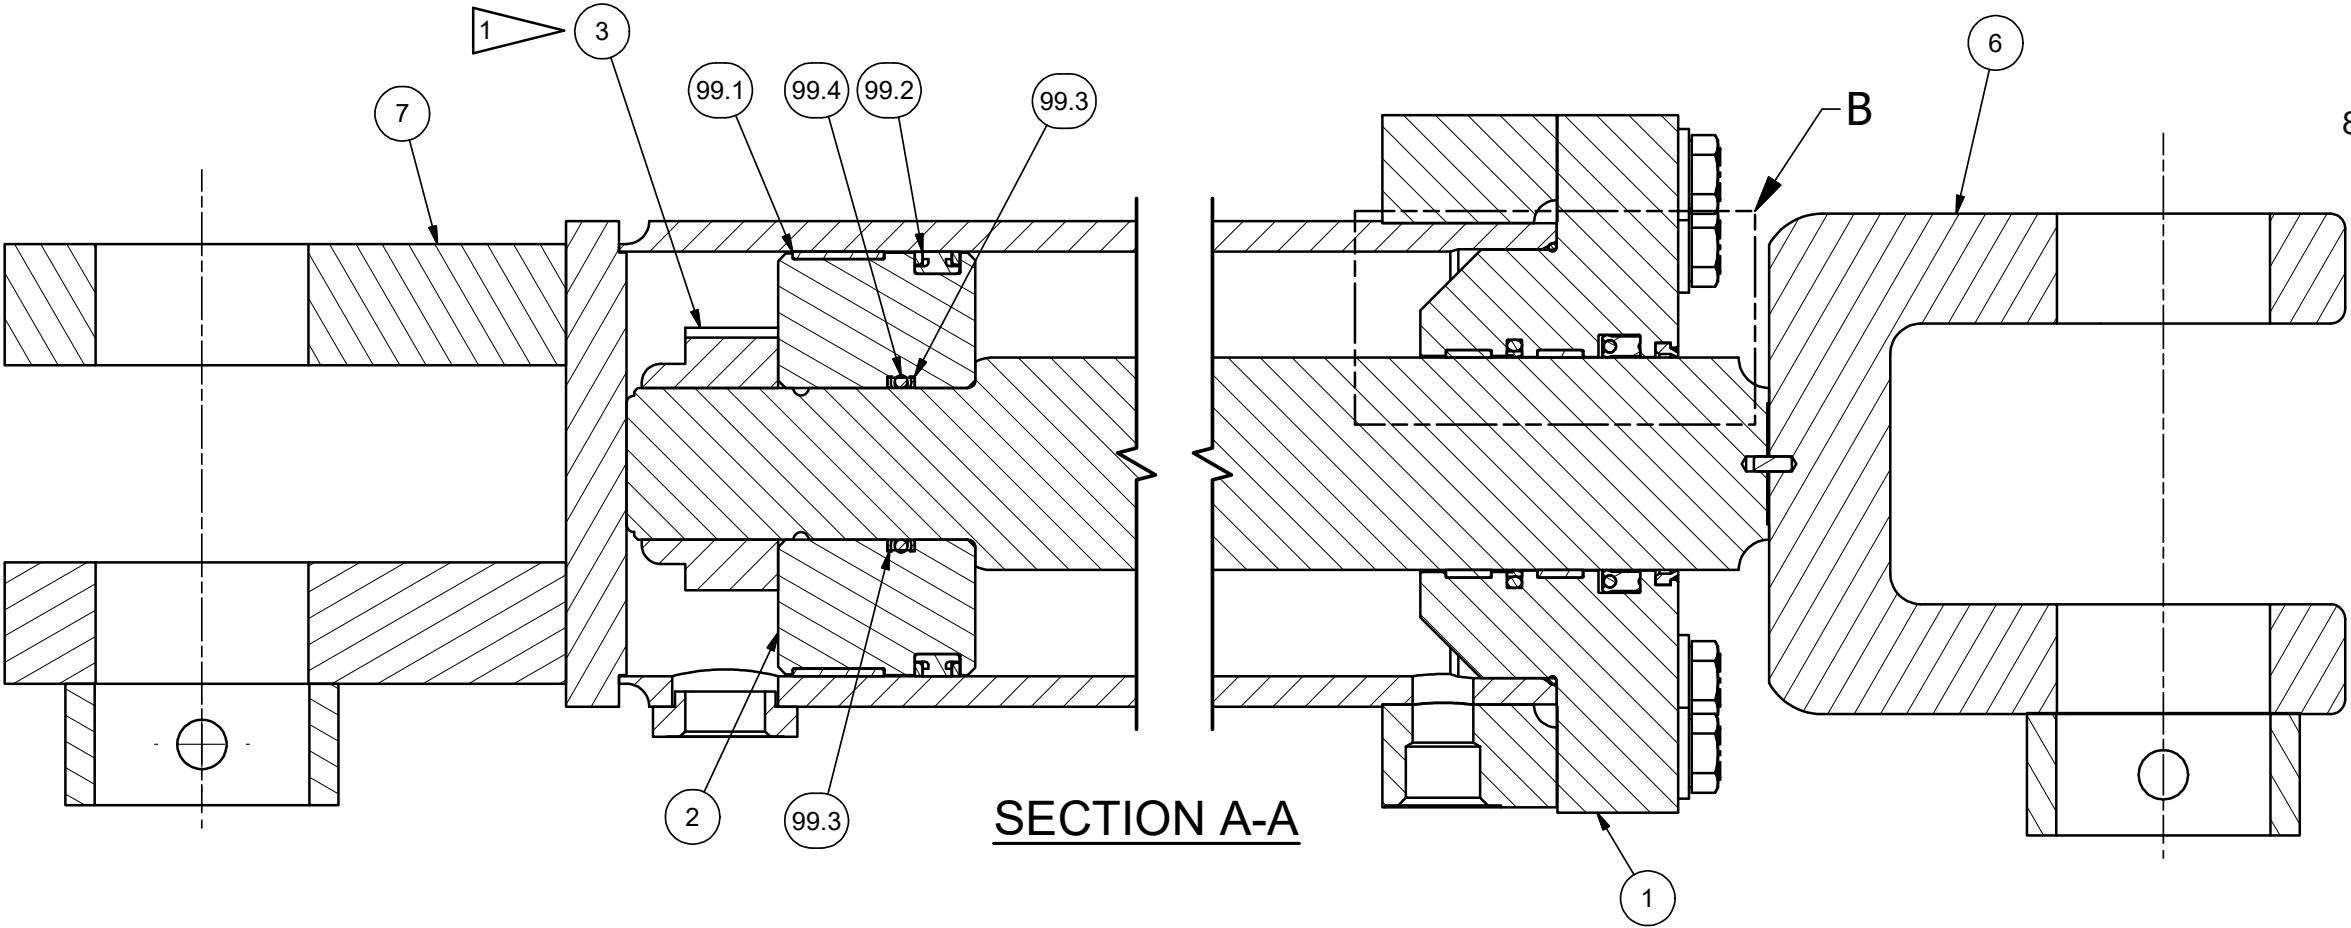
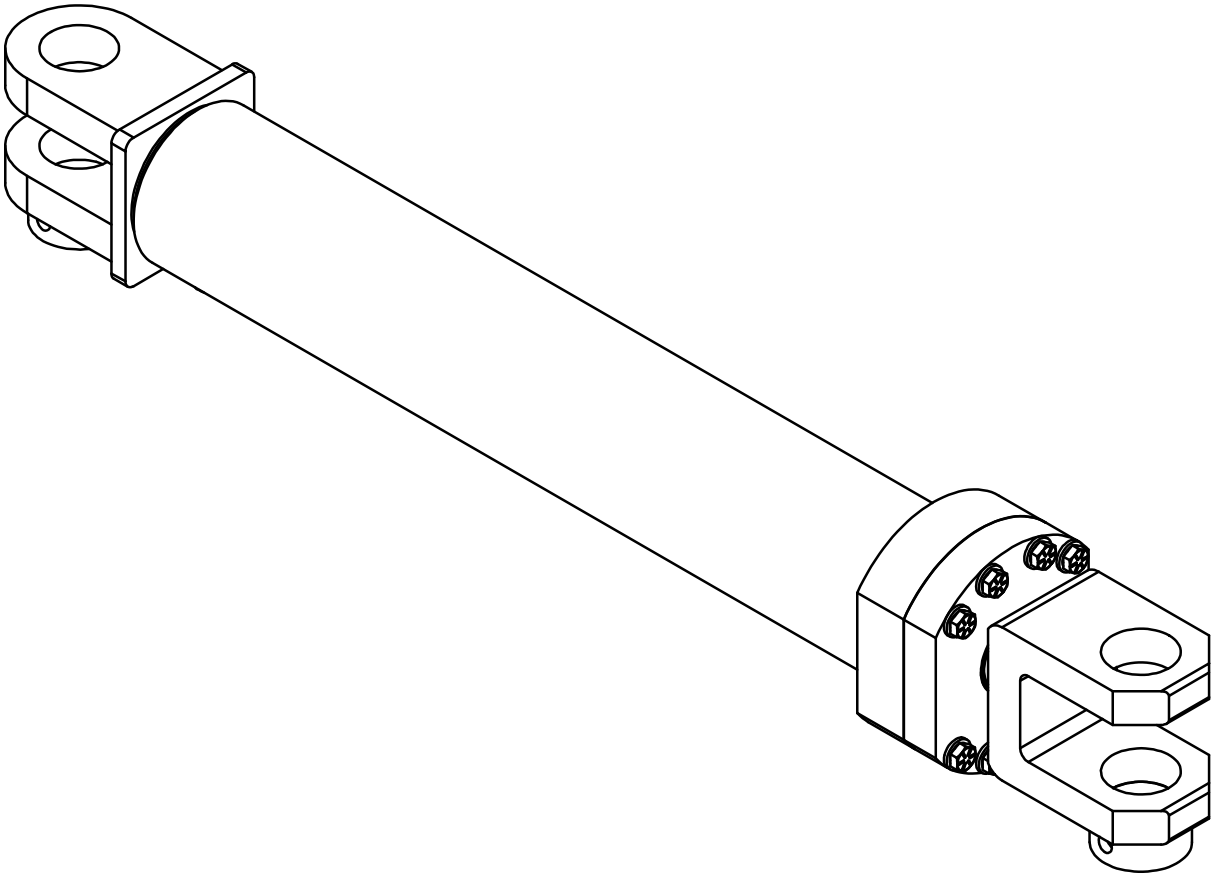

Cylinder Assembly, Hoist

Cylinder Assembly, Hoist


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	601154		Cylinder Assembly, Hoist				
1	601158	1	. Gland	99	601159	1	. Packing Kit
2	601157	1	. Piston	99.1	601165	1	.. Wear Ring
3	244433	1	. Locknut	99.2	69770.0700	1	.. Seal
4	221777W	8	. Washer	99.3	Y076800-333	2	.. Backup Ring
5	R13807971	8	. Capscrew	99.4	Y098629-333	1	.. O-Ring
6	601156	1	. Stem	99.5	70385.0350	2	.. Wear Ring
7	601155	1	. Barrel	99.6	69768.0350	1	.. Seal Buffer
				99.7	223013	1	.. Seal
				99.8	223011	1	.. Wiper Ring
				99.9	Y098629-262	1	.. O-Ring



DETAIL B



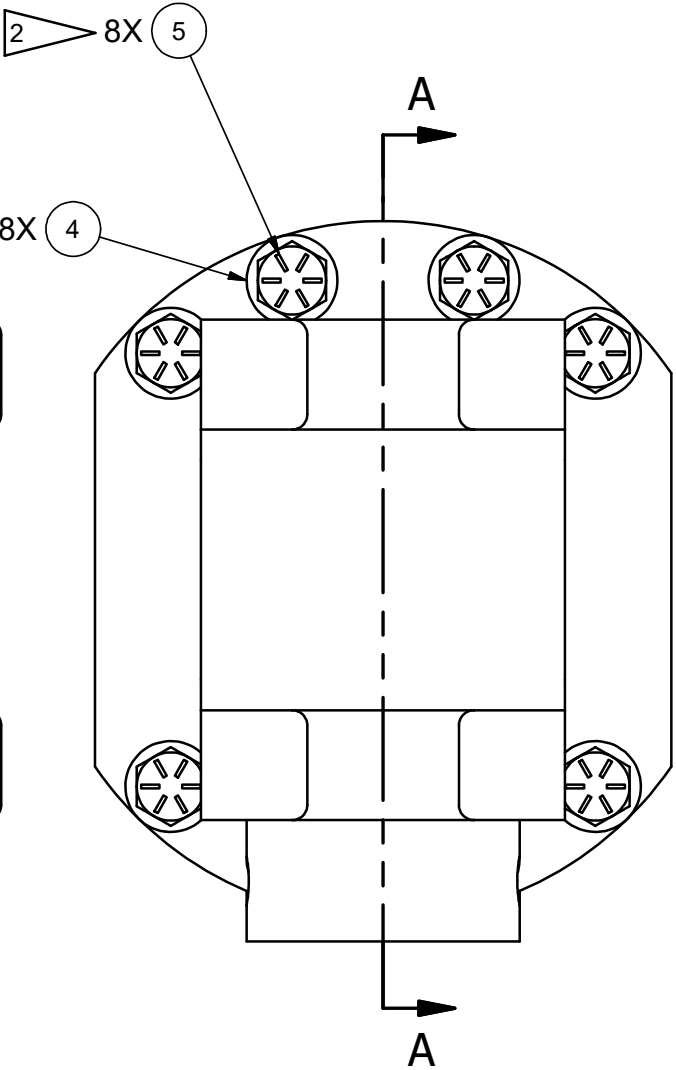SECTION A-A



NOTES:

- 1  TORQUE ITEM 3 TO 2000 FT-LBS.
- 2  REMOVE DIRT, LOOSE SCALES, BURRS, AND PAINT FROM MATING SURFACES OF BOLTED JOINT. USE LOCTITE THREADLOCKER 242.