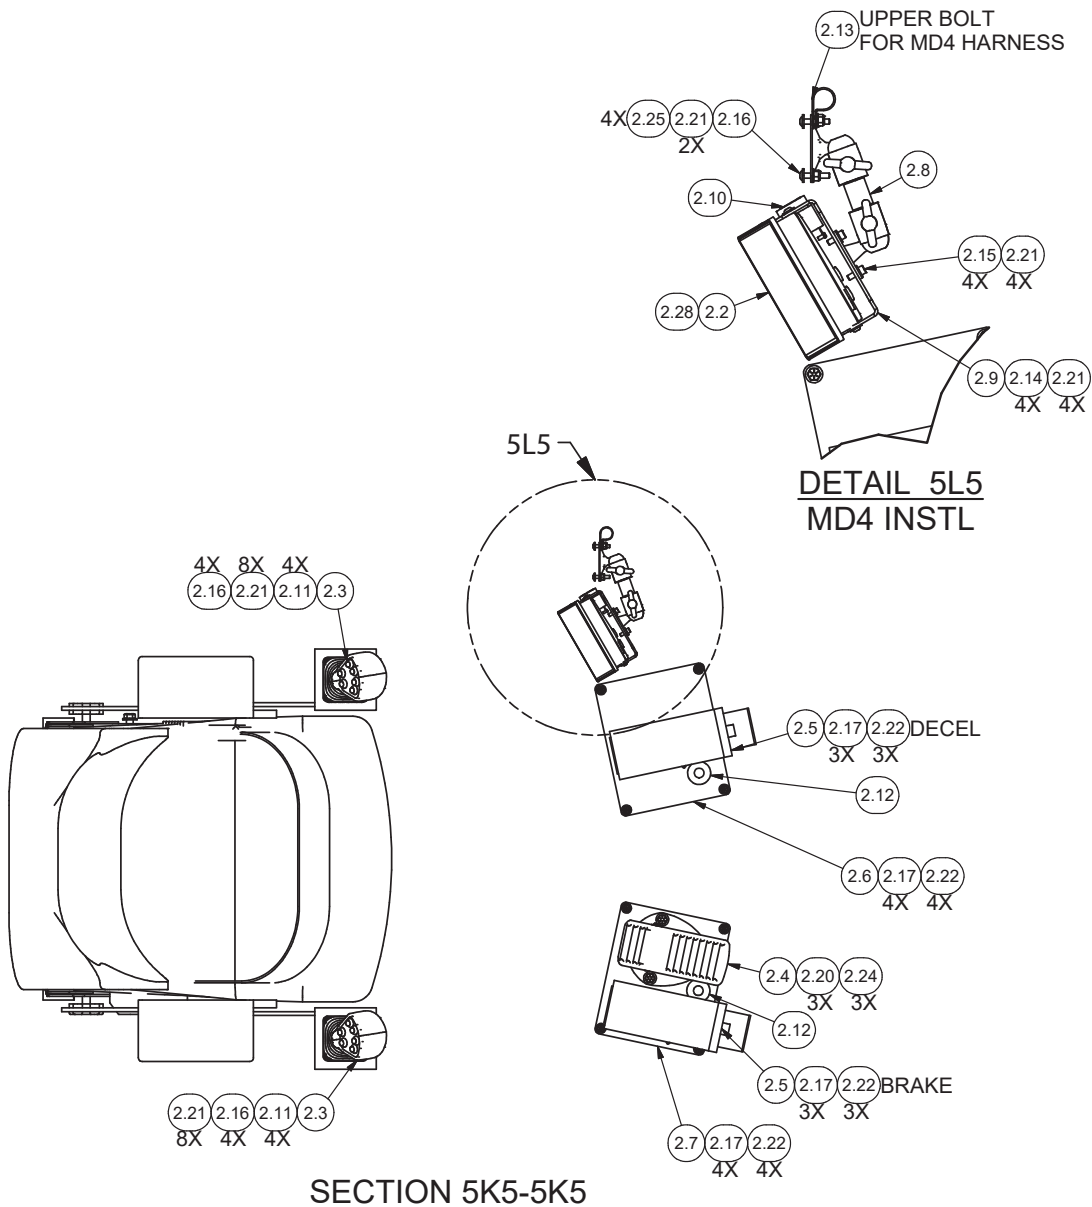

Controls and Joysticks Installation

Controls and Joysticks Installation

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
602049 Controls and Joysticks Inst.							
2.1	* 602792	1	. Console Assembly	2.15	Y73G-(1024)08	4	. Capscrew
2.2	605701	1	. Wagner Smart Screen	2.16	Y25G-(1024)16	12	. Capscrew
2.3	* 602115	2	. Joystick	2.17	224120W	14	. Capscrew
2.4	* 590704	1	. Valve	2.18	R13811010	2	. Capscrew
2.5	* 246923	2	. Throttle Assembly	2.19	R13811032	2	. Capscrew
2.6	586722	1	. Plate, Mounting	2.20	Y17C-0616	3	. Capscrew
2.7	592115	1	. Plate, Mounting	2.21	Y35E-#10	32	. Washer
2.8	591879	1	. Bracket, Mounting	2.22	221763W	14	. Washer
2.9	602794	1	. Bracket, Monitor Mount	2.23	R13802914	2	. Washer
2.10	R10547	1	. Buzzer	2.24	221767W	5	. Washer
2.11	249793	2	. Grommet	2.25	R13809543	12	. Locknut
2.12	239419W	2	. Grommet	2.26	R13811432	8	. Washer
2.13	R13808093	1	. Clip, Insulated	2.27	R13811054	8	. Capscrew
2.14	296148W	4	. Capscrew	2.28	603706	1	. Shield, Anti-Reflective

* See Separate Coverage



Controls and Joysticks Installation

