


Valve Assembly, Implement

Valve Assembly, Implement

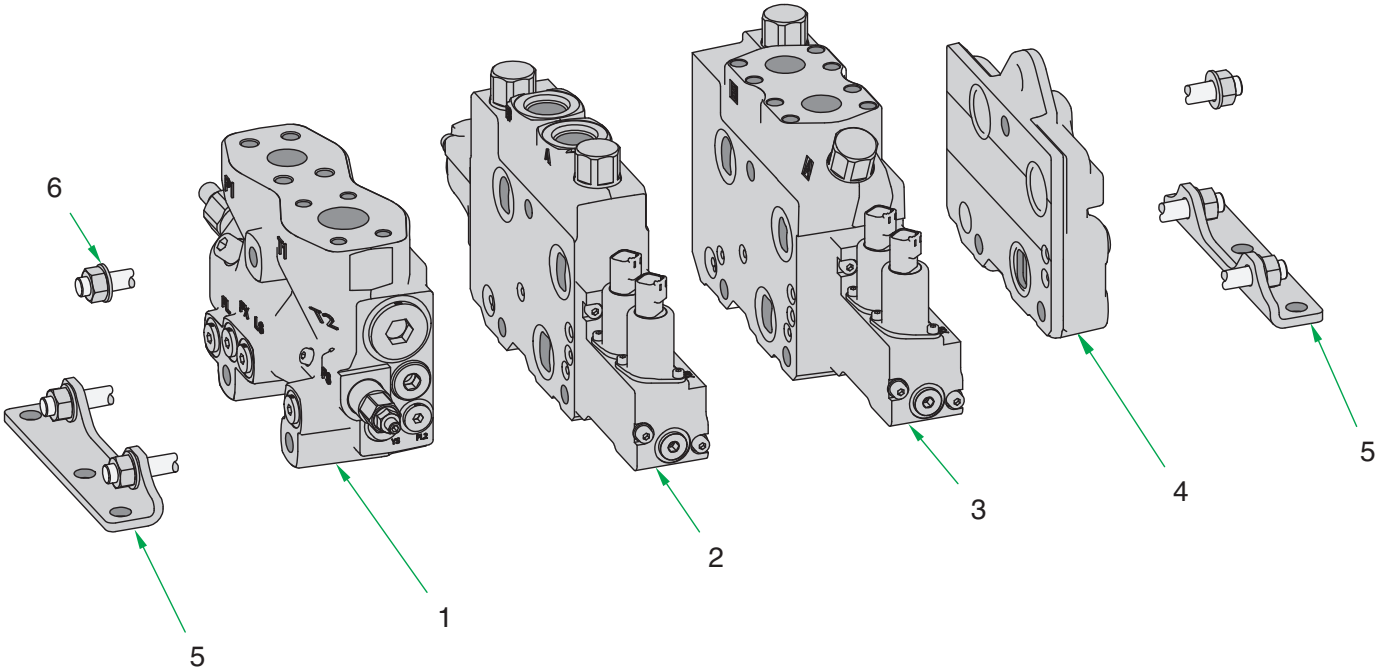


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
602134 Valve Assembly, Implement							
1	*a 260009	1	. Inlet Section	4	*d 260022	1	. End Section
2	*b 260015	1	. Work Section - Blade Hoist	5	599561	1	. Bracket Kit
3	*c 260017	1	. Work Section - Steering	6	260023	1	. Tie Rod Kit
				*a See page 3			
				*b See page 4			
				*c See page 5			
				*d See page 6			

Inlet Section

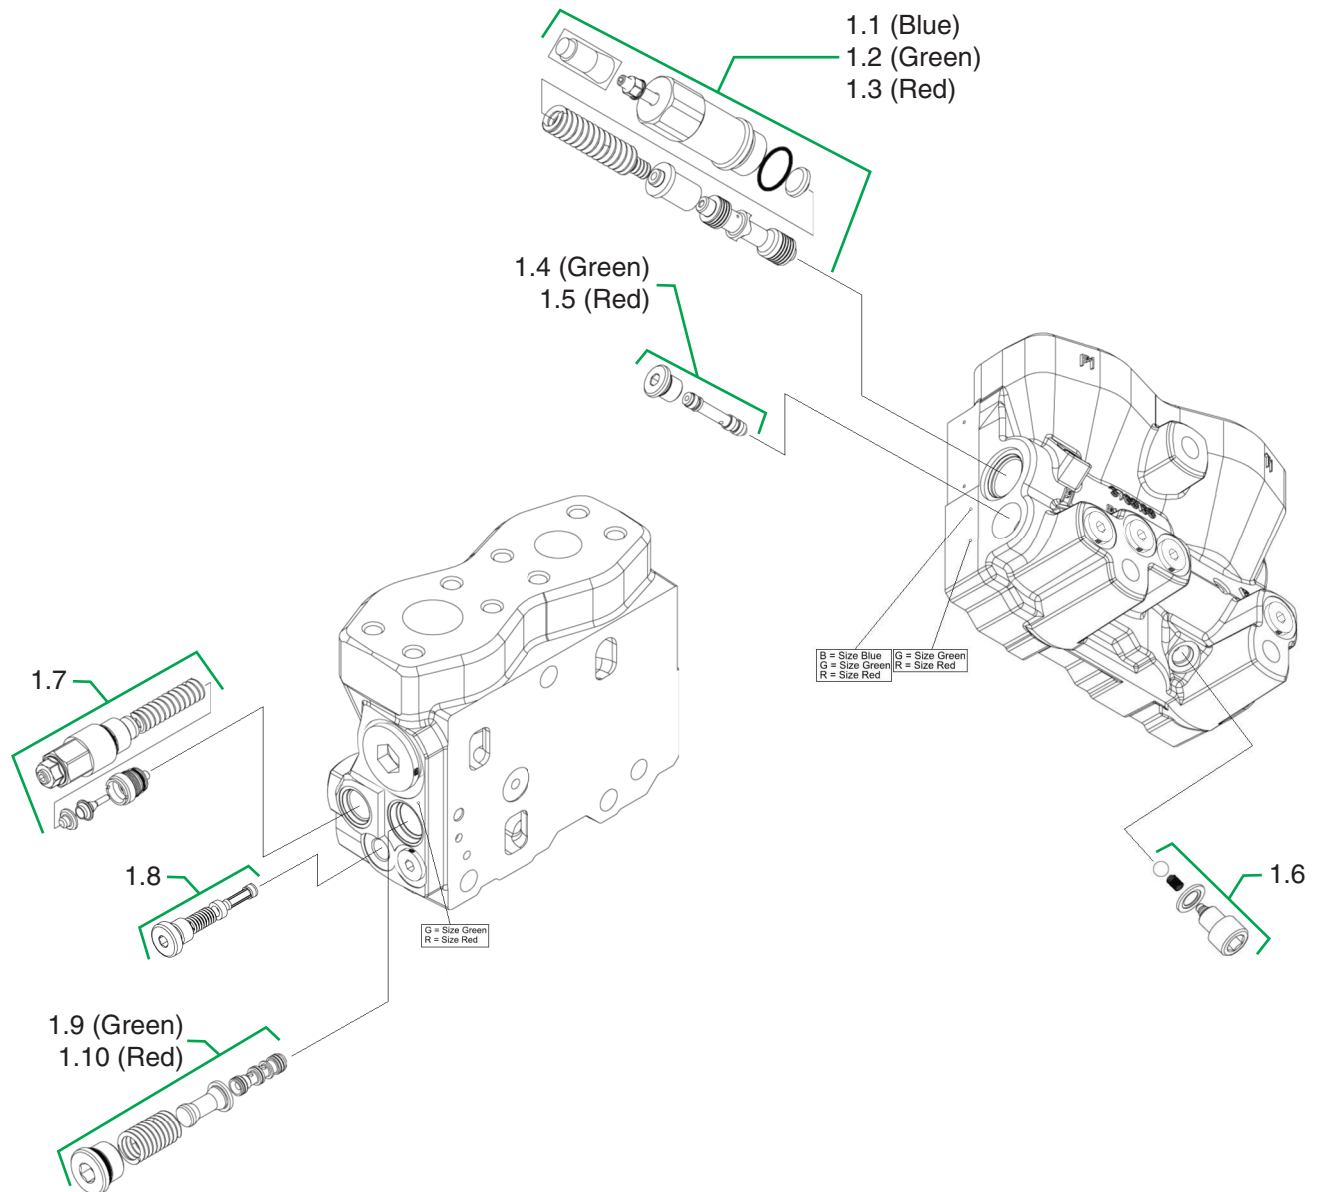


Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
260009 Inlet Section							
1.1	*a 260010	1	. LS Pressure Relief (Blue)	1.6	599932	1	. Check Valve Kit
	256604	1	.. Seal Kit	1.7	260013	1	. Relief Valve
1.2	*a 260011	1	. LS Pressure Relief (Green)		260014	1	.. Seal Kit
	256604	1	.. Seal Kit	1.8	257431	1	. Internal Pilot Strainer
1.3	*a 260012	1	. LS Pressure Relief (Red)	1.9	*a 599933	1	. Reducing Valve Kit (Green)
	256604	1	.. Seal Kit		599934	1	.. Plug Kit
1.4	*a 599930	1	. Copy Spool Kit (Green)	1.10	*a 259684	1	. Reducing Valve Kit (Red)
	257414	1	.. Seal Kit		599934	1	.. Plug Kit
	599931	1	.. Plug Kit				
1.5	*a 259683	1	. Copy Spool Kit (Red)				*a Order the correct size for your valve. See page 6 for details.
	257414	1	.. Seal Kit				
	599931	1	.. Plug Kit				

Work Section - Blade Hoist

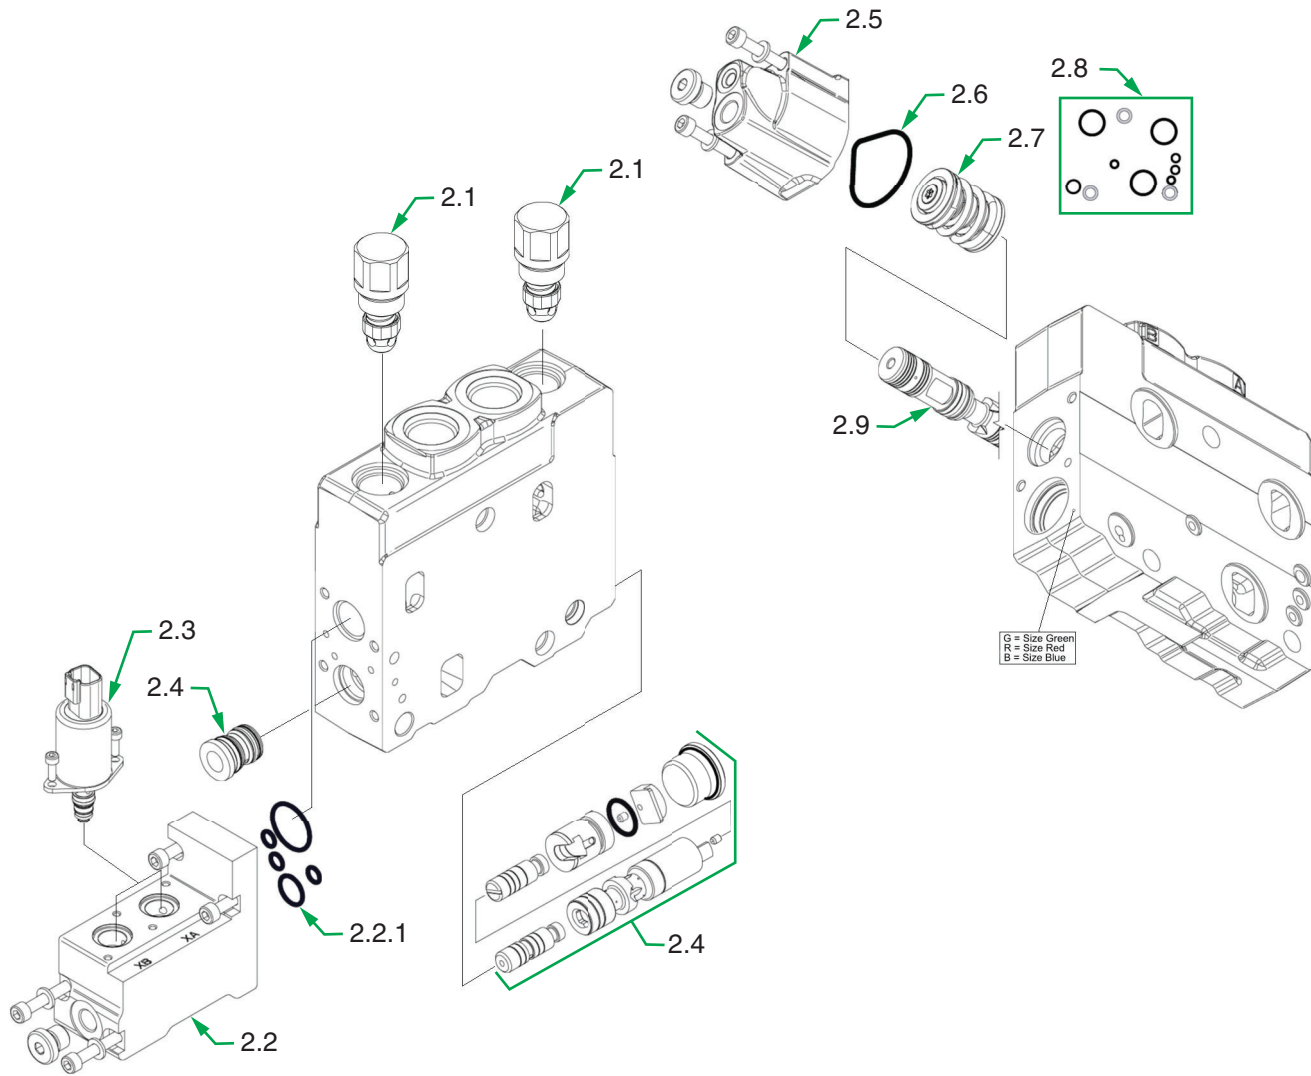

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
Work Section - Blade Hoist							
2.1	259686	2	. Port Relief Valve	2.5	257404	1	. Cap Kit, B Side
	256604	1	. . Seal Kit	2.6	599940	1	. . Seal Kit
2.2	599936	1	. Cap Kit, A Side	2.7	259362	1	. Spring Kit
2.2.1	599937	1	. . Seal Kit	2.8	260504	1	. Intersection Seal Kit
2.3	599944	2	. Solenoid Valve Kit	2.9	NSS	1	. Spool
	599442	1	. . Seal Kit				
2.4	260016	1	. Spool Compensator				


Work Section - Steering

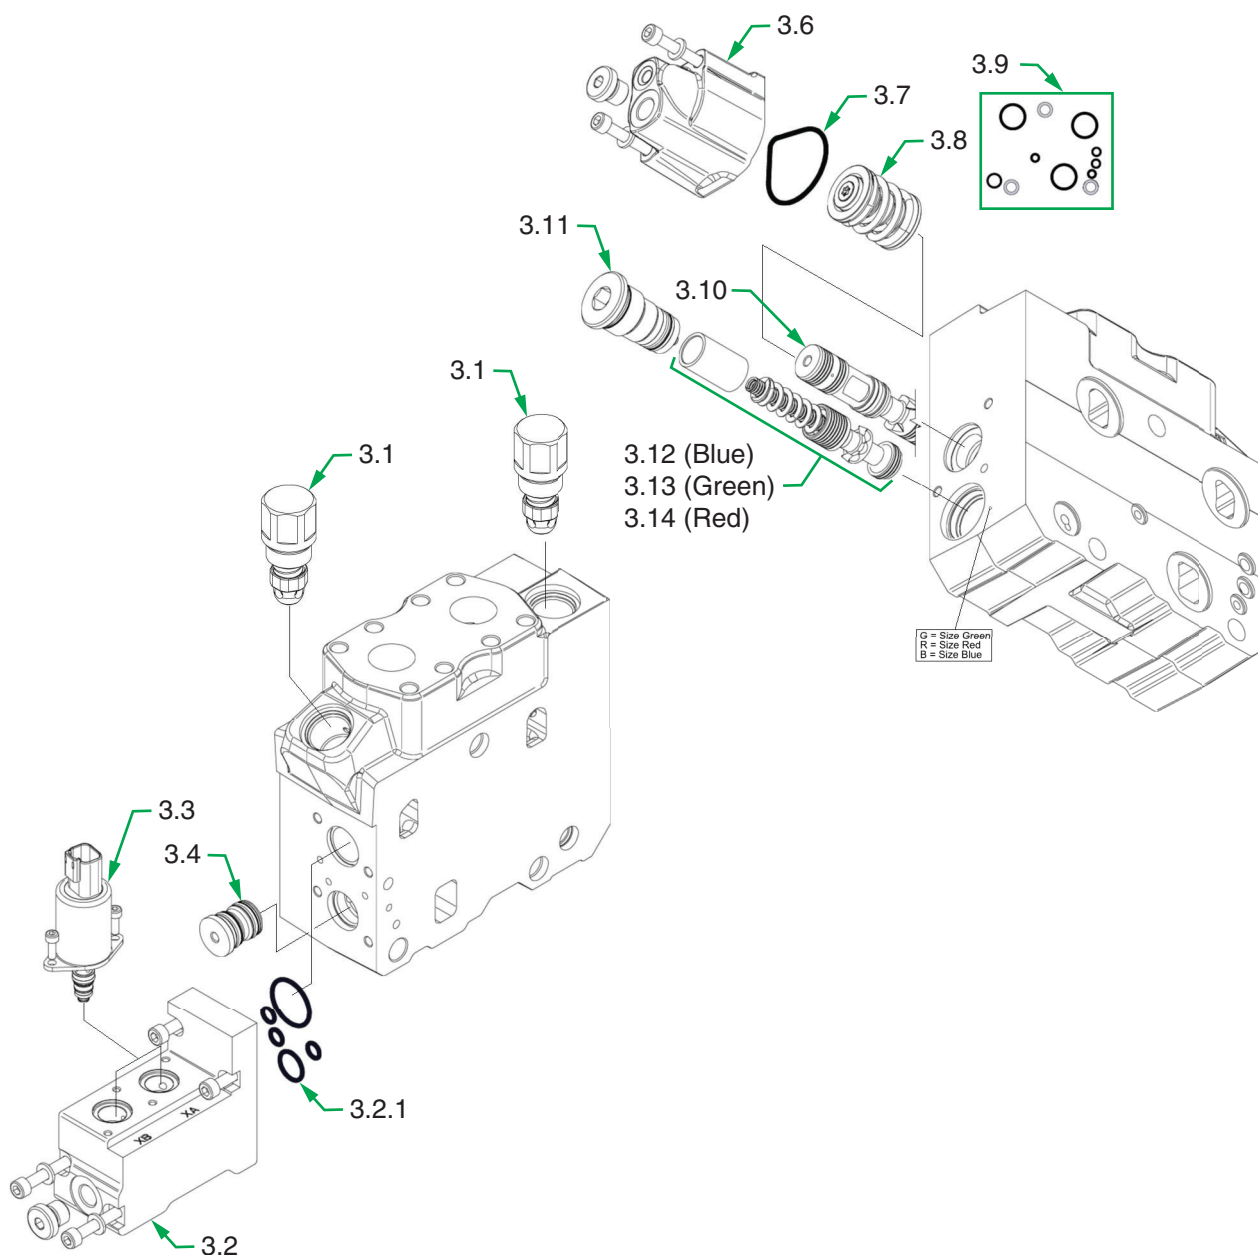

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	260017		Work Section - Steering				
3.1	259686	2	. Port Relief Valve	3.9	260504	1	. Intersection Seal Kit
	256604	1	.. Seal Kit	3.10	NSS	1	. Spool
3.2	599936	1	. Cap Kit, A Side	3.11	257410	1	. Plug
3.2.1	599937	1	.. Seal Kit		599941	1	.. Seal Kit
3.3	599944	2	. Solenoid Valve Kit	3.12	*a 260018	1	. Compensator Kit, (Blue)
	599442	1	.. Seal Kit		260019	1	.. Spring Kit
3.4	599938	1	. Compensator Plug, A Side	3.13	*a 260020	1	. Compensator Kit, (Green)
	599939	1	.. Seal Kit		260019	1	.. Spring Kit
3.6	257404	1	. Cap Kit, B Side	3.14	*a 260021	1	. Compensator Kit, (Red)
3.7	599940	1	.. Seal Kit		260019	1	.. Spring Kit
3.8	259362	1	. Spring Kit				


*a Order the correct size for your valve. See page 6 for details.

End Section

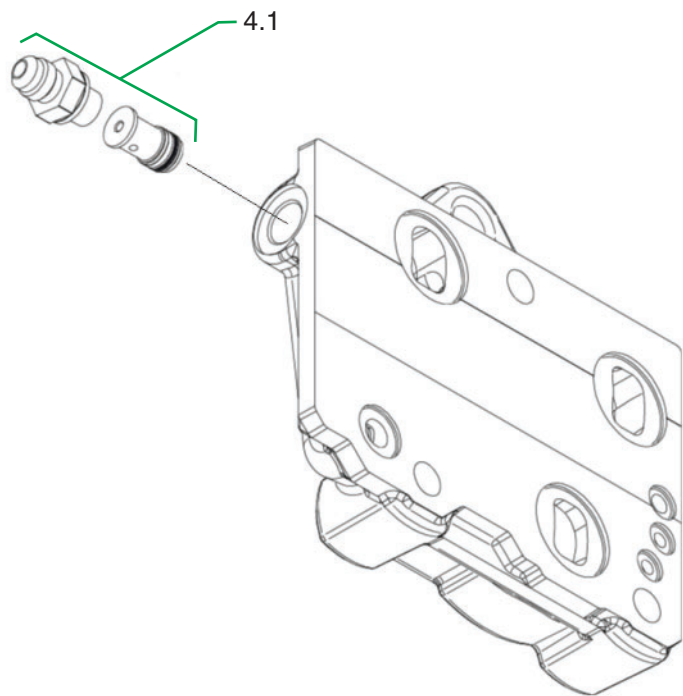

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	260022		End Section				
4.1	260409	1	. LSP Insert and Adapter Kit				
	260506	1	.. Seal Kit				

Spool Sizes

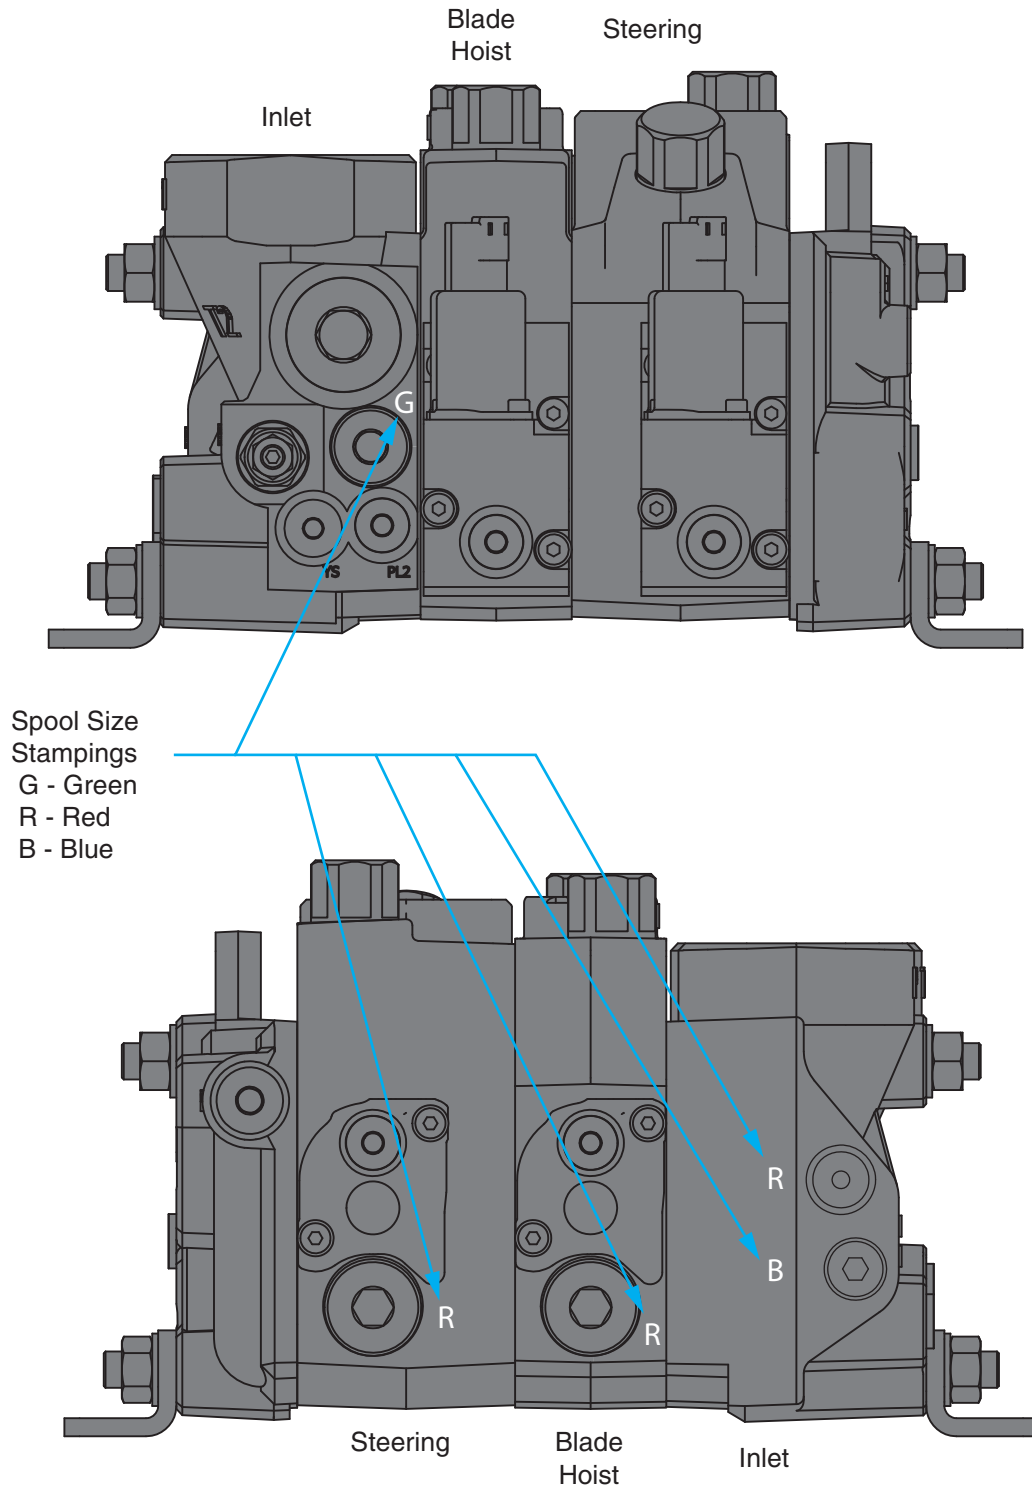

Spools are color coded to ensure correct radial clearance between spool and spool bore. We recommend that you replace an entire valve section if the spool needs to be replaced. If you do replace just the spool, it is extremely important that the new spool is the right size.

See above. The inlet section has three stamps, and each work section has one. Refer to the stamp to know which "color" of spool to order.