



Hydraulic Oil Level Sender Installation

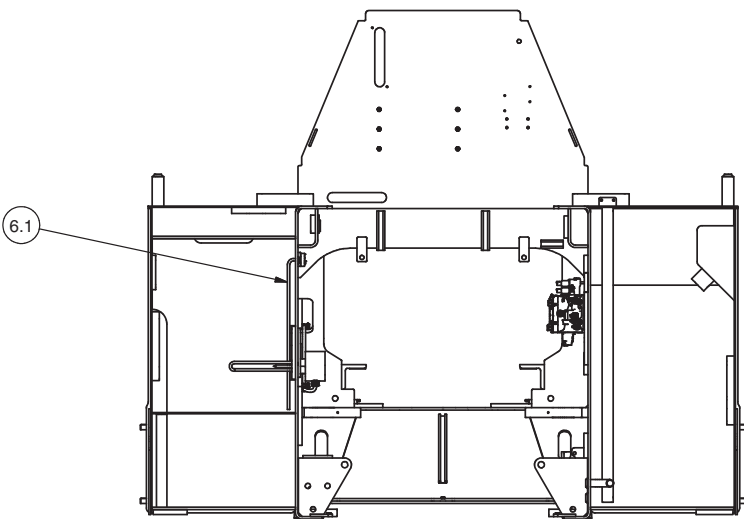

SECTION 1A1-1A1

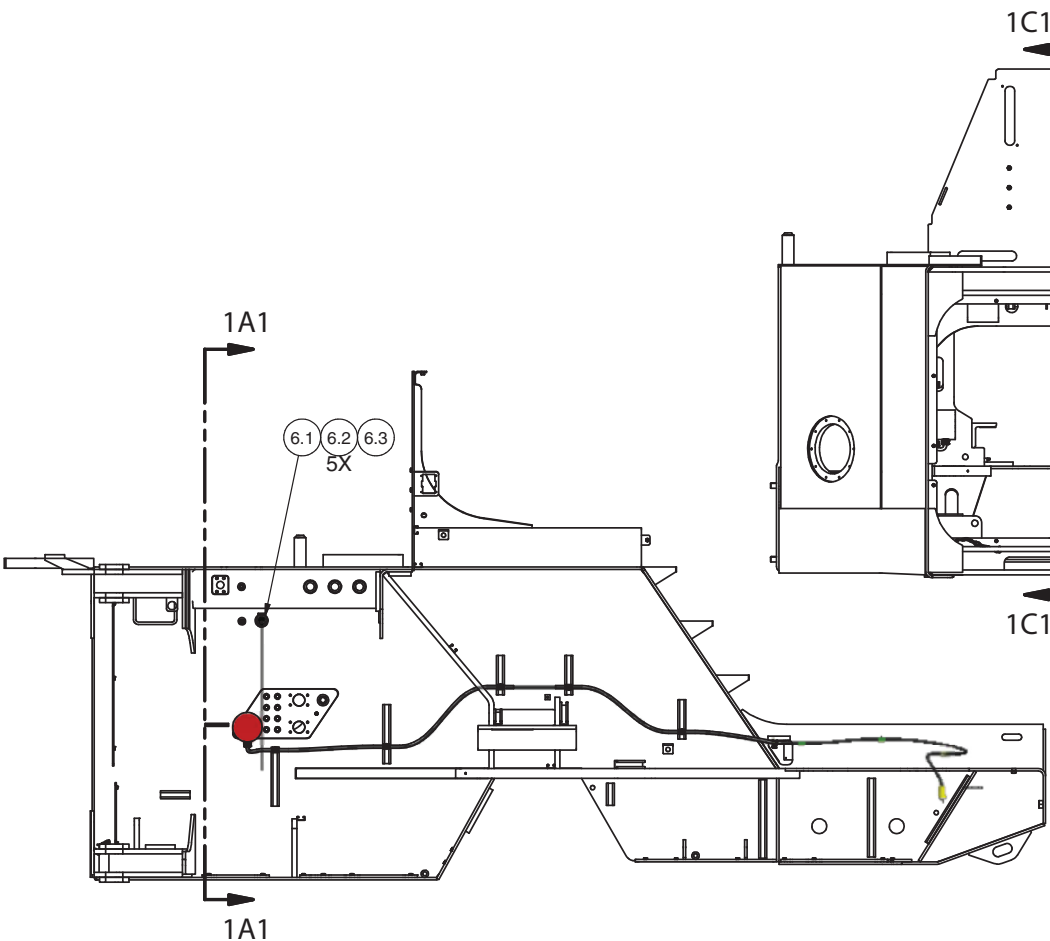

SECTION 1C1-1C1

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	602206		Hydraulic Oil Level Sender Inst.				
6.1	600267	1	. Sending Unit, Fuel/Oil	6.3	600582	1	. Gasket, Sending Unit
6.2	Y26G-(1032)16	5	. Capscrew				