


Lube System Installation, Central


Lube System Installation, Central

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
	602670		Lube System Installation, Central				
1	603466	1	. Manifold, Lube	21	136516W	4	. Clamp
2	603465	1	. Manifold, Lube	22	2312628	5	. Clamp
3	603467	1	. Decal, Lube Manifold	23	221767W	23	. Washer
4	603468	1	. Decal, Lube Manifold	24	162572W	11	. Capscrew
5	209405	5	. Fitting	25	221499W	6	. Capscrew
6	209750	11	. Fitting	26	237567	6	. Locknut
7	221763W	4	. Washer	27	605986	1	. Lube Guard, LH
8	230918	2	. Fitting	28	605985	1	. Lube Guard, RH
9	231251	5	. Clamp	99	603469	1	. Kit, Hose
10	249329	8	. Cable Tie	99.1	235810	1	. . Hose Assembly
11	595326	8	. Mount, Tack	99.2	254766	1	. . Hose Assembly
12	R13810997	4	. Capscrew	99.3	237221	1	. . Hose Assembly
15	16001W	11	. Fitting, Lube	99.4	235562	1	. . Hose Assembly
16	322759W	2	. Plug - Button	99.5	227883	1	. . Hose Assembly
17	231248	1	. Clamp	99.6	241230	1	. . Hose Assembly
18	231249	1	. Clamp	99.7	589547	1	. . Hose Assembly
19	236468	10'	. Spiral Wrap	99.8	226732	1	. . Hose Assembly
20	387316W	4	. Clamp	99.9	14461	1	. . Hose Assembly


 & THE ROUTING TABLE DETAIL GREASE POINTS.
USE ROUTING TABLE WHEN INSTALLING
ITEM 99 (HOSE KIT)

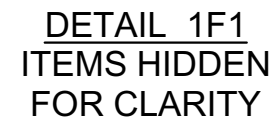


GREASE POINT	DESCRIPTION
1	WLDMT CYLINDER EYE, RH
2	WLDMT CYLINDER EYE, LH
3	HOIST CYLINDER BASE
4	HOIST CYLINDER STEM
5	SWIVEL NECK HOUSING
6	STEERING CYLINDER BASE, RH
7	STEERING CYLINDER BASE, LH
8	STEERING CYLINDER STEM, RH
9	STEERING CYLINDER STEM, LH
10	UPPER HINGE PIN
11	LOWER HINGE PIN

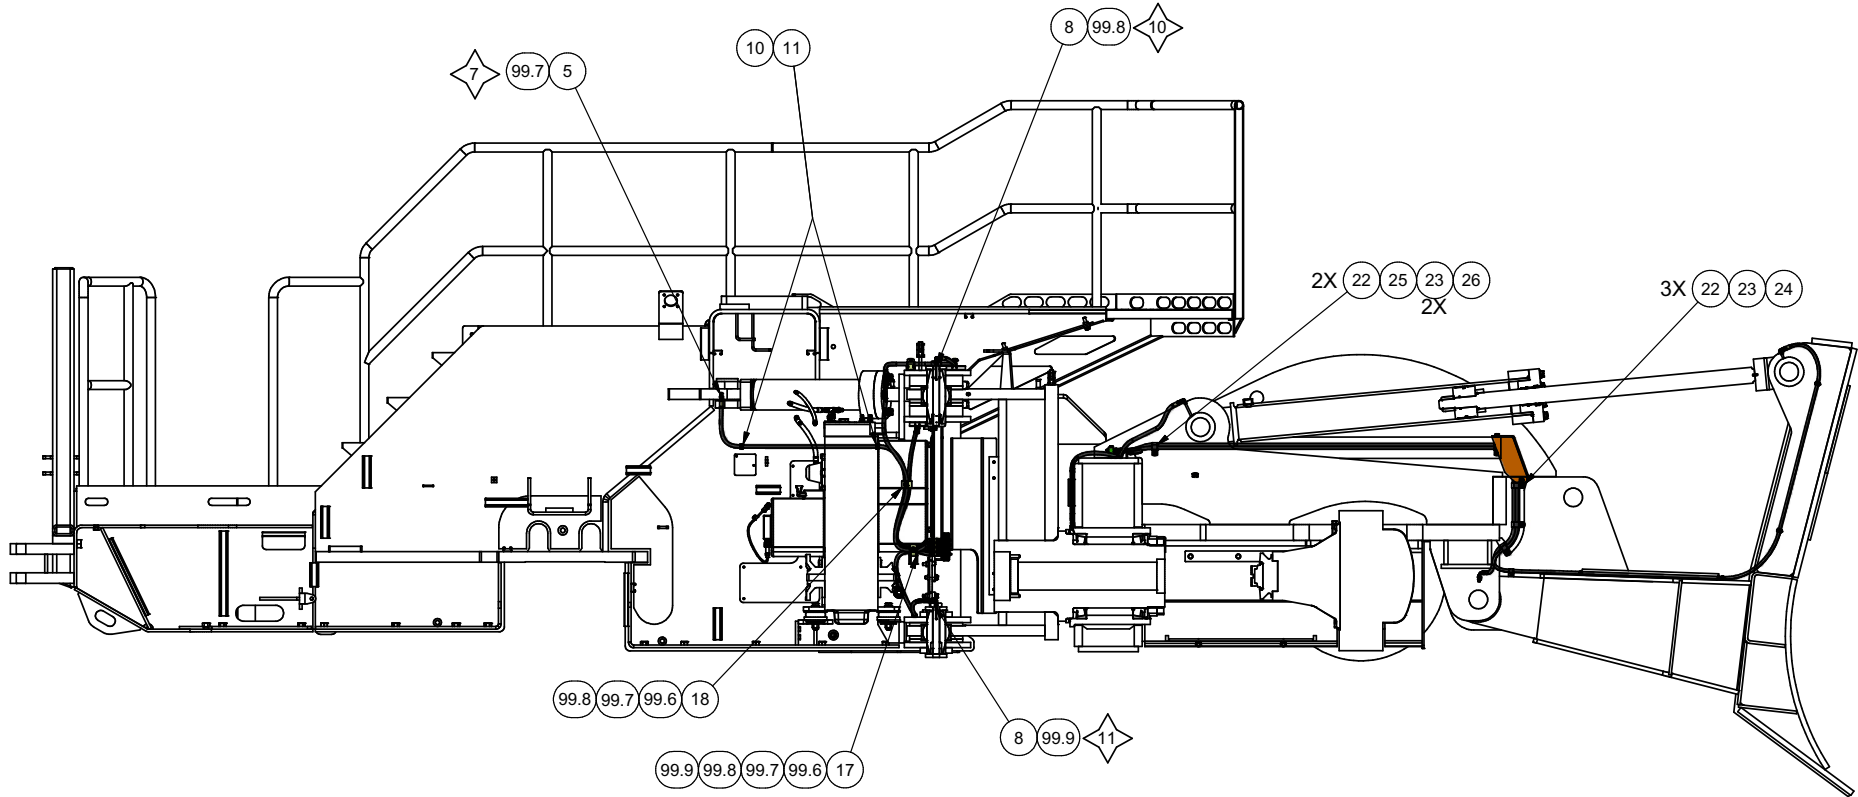


SECTION 2A1-2A1

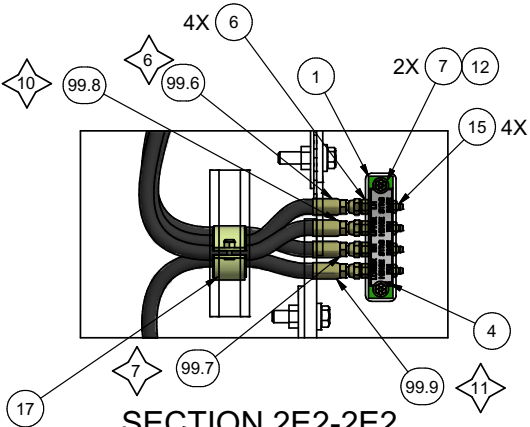

SECTION 2E2-2E2

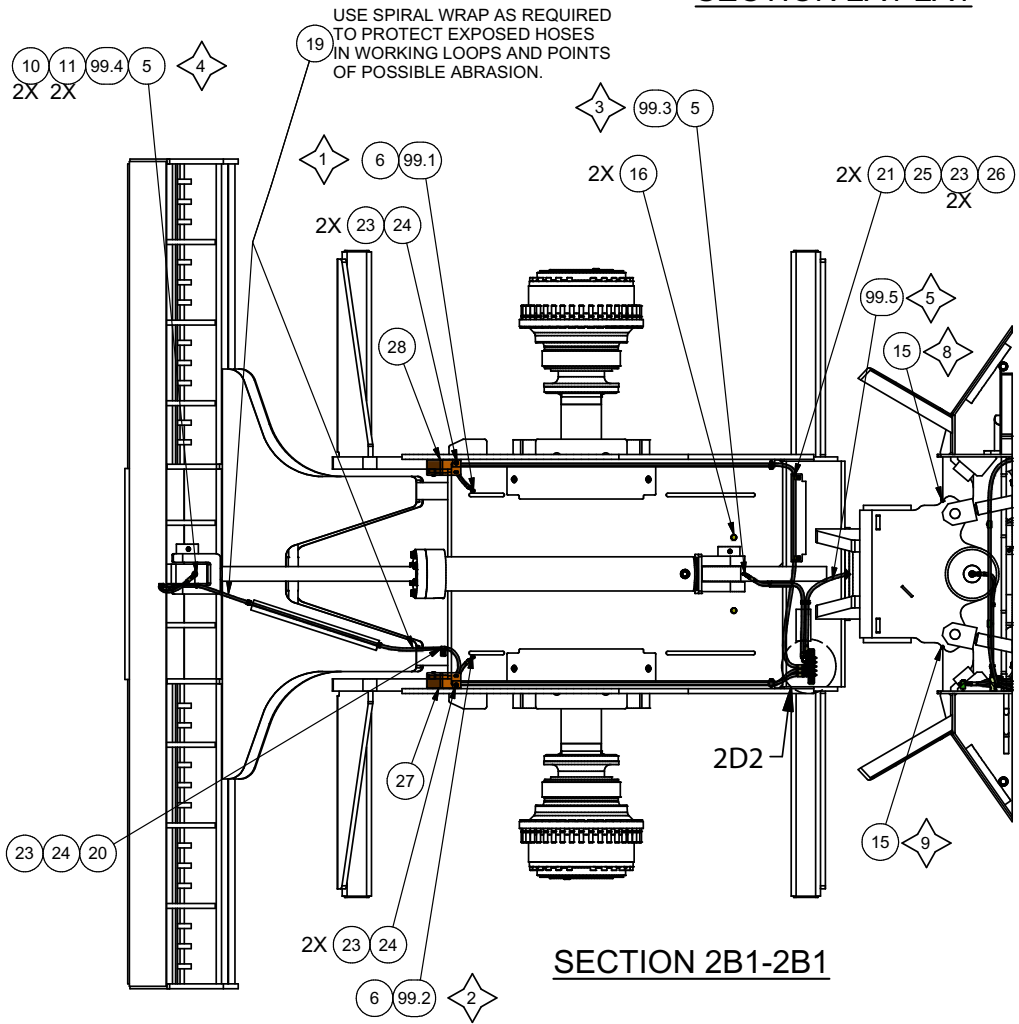

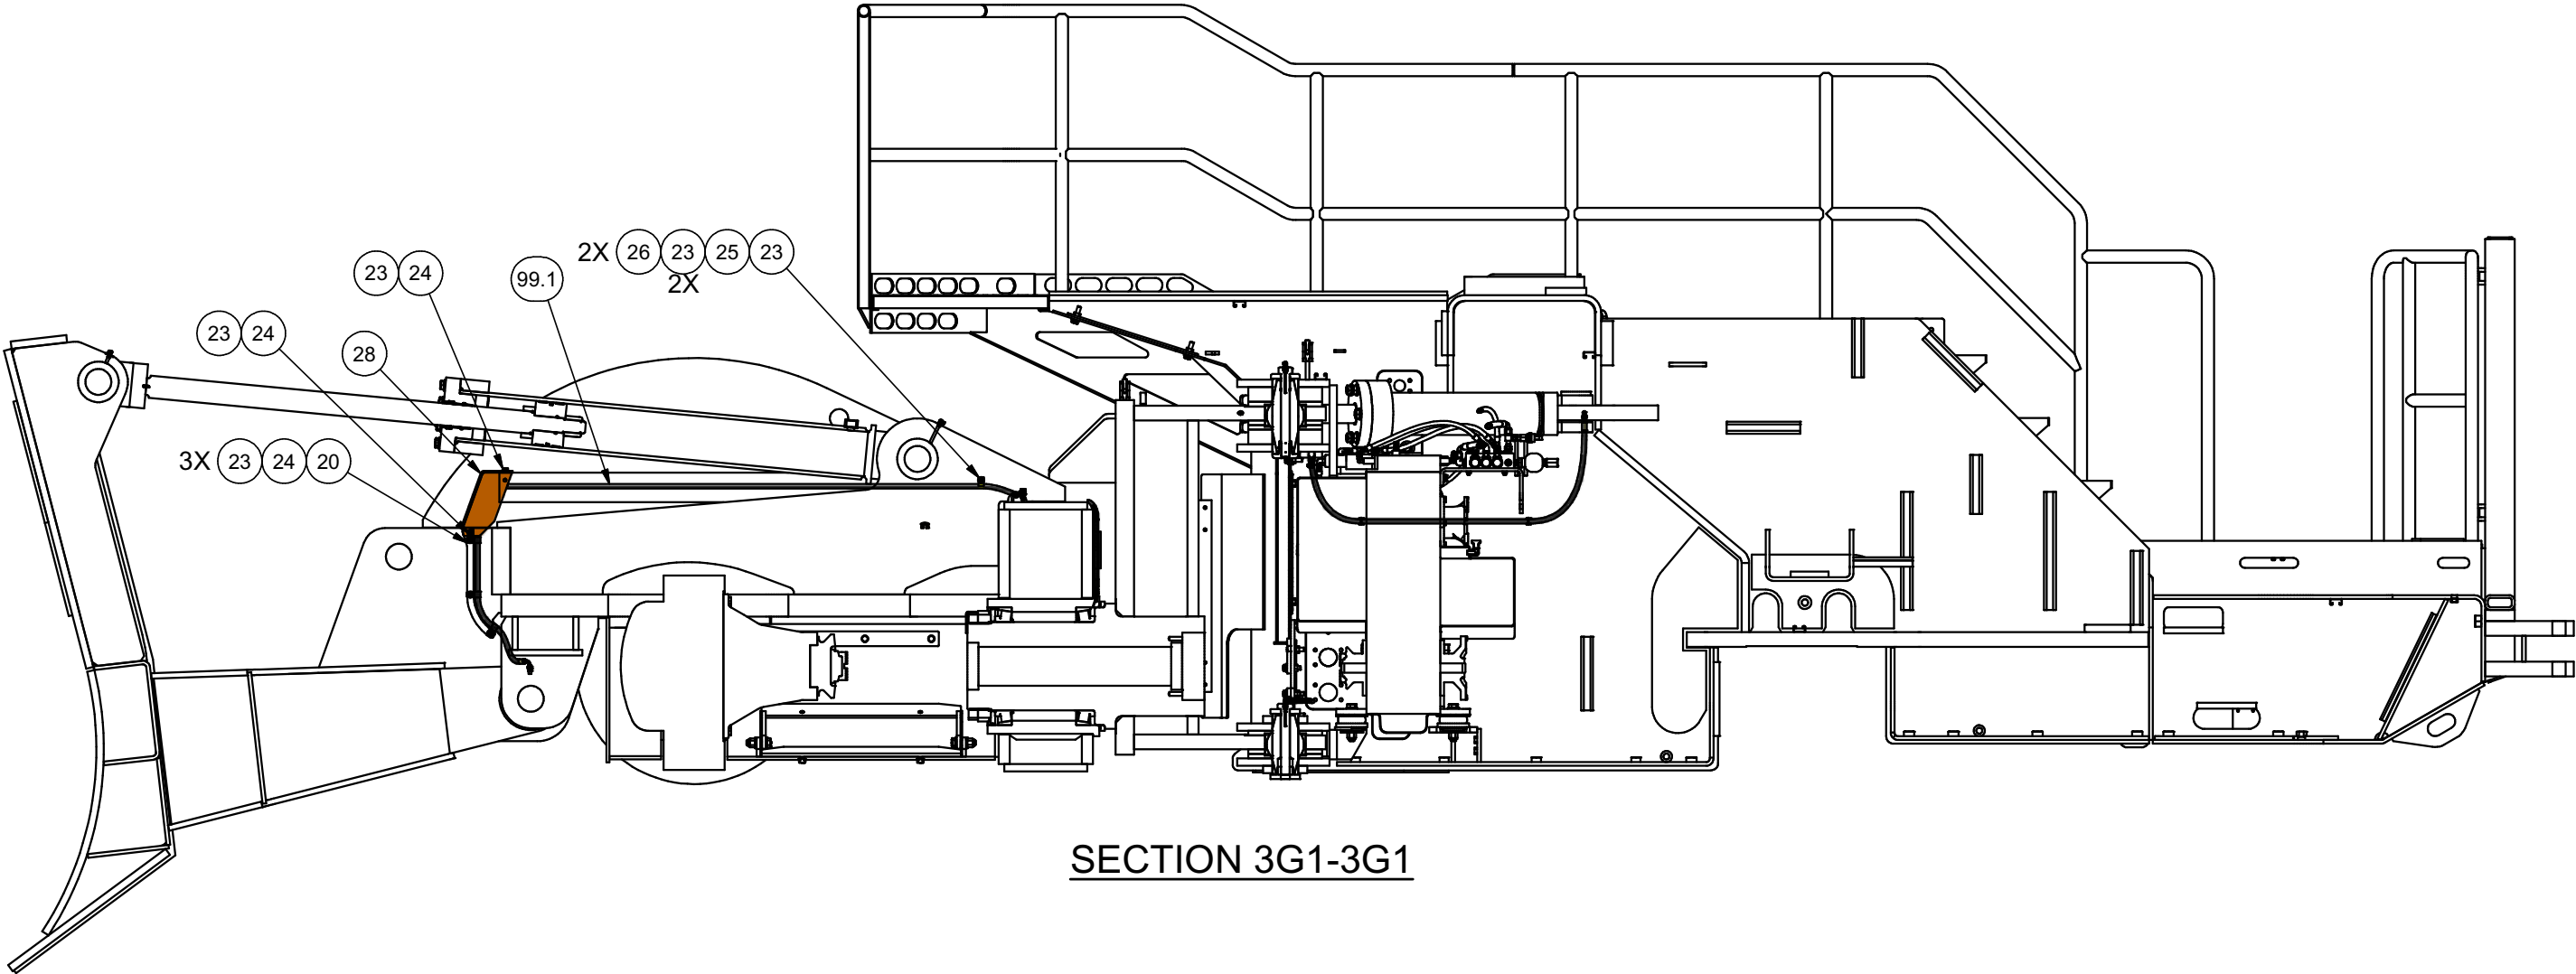

SECTION 3G1-3G1