

MASTER CHECK SHEET

1 of 4

wagner SERVICE BOOK INDEX

PAGE _____

L-90

DATE 9-2-86

MODEL _____

REVISED 8-1-89SERIAL NO. 039284

GENERAL INFORMATION**SECTION 1**

----- Master Check Sheet
80-35 How to use your Master Check Sheet
80-103 Start & Stop Procedures
0081 Loctite Application
0130 Capscrew Grades & Torque Values
80-245 Manufacturer's Warranty

POWER UNIT**SECTION 2**

2-1 **Engine**
----- CUMMINS Operation & Maintenance Manual (3379052)

2-2 **Controls**
----- Audiovisual Engine Protection System - See Section 6-1

2-3 **Lubrication**
556263 Lube Oil System - By-Pass Filter

2-4 **Fuel System**
541761 Fuel System

2-5 **Air Intake & Exhaust**
80-45 Air Filter Service
0024 Service Gauge Operation

2-6 **Cooling**
0124 Radiator Fill
80-287 Radiator Service

2-7 **Miscellaneous**
80-196 Cold Start (Quick Start) Operation & Service

MASTER CHECK SHEET

2 of 4

wagner SERVICE BOOK INDEX

PAGE _____

DATE 9-2-869

MODEL L-90

REVISED 8-1-89

SERIAL NO. 039284

DRIVETRAIN**SECTION 3**

- 3-1 General**
548182 Drivetrain Installation
- 3-2 Transmission/Converter**
----- ALLISON Transmission Service Manual (SA 1547)
542380 Transmission Circuit
0017 Transmission Breather Maintenance
----- Transmission Filter Service - See Trans. Manual
- 3-3 Drivelines**
0054 Driveline Installation & Lube
0182 Driveline Torque Settings
- 3-4 Axles**
80-243 Axle Installation
----- CLARK Axle Service, 85,000 Series (DA-850)
80-119 Tailpost Installation
- 3-5 Wheels & Tires**
0179 Wheel & Tire Maintenance
0183 Rim & Tire Safety
80-67 Tire Pressures

AIR & BRAKE SYSTEM**SECTION 4**

- 4-1 Systems**
561534 Air System - Failsafe Brake
542791 Air System - Implement Controls
542690 Air System - Auxiliary Holddown
550154 Hydraulic Brake System
- 4-2 Modules**
- 4-3 Supply Components**
80-242 Air Dryer Service
80-194 Expello Valve Service
- 4-4 Control Components**

(Continued)

MASTER CHECK SHEET

wagner SERVICE BOOK INDEX

PAGE 3 of 4

MODEL L-90

DATE 9-2-86

SERIAL NO. 039284

REVISED 8-1-89

AIR & BRAKE SYSTEM

SECTION 4

- 4-5 Actuator Components**
80-174 Maxi Brake Operation
80-227 Disc Brake Service
80-258 Air Chamber Service
80-263 Master Cylinder Service
- 4-6 Miscellaneous**
80-305 Basic Declutch Diagram
0154 Declutch Troubleshooting

HYDRAULIC SYSTEM

SECTION 5

- 5-1 Systems/Circuits**
----- Lumberjack Power Beyond System - Color Coded Schematic
560881 Hydraulic System - Steering
542784 Hydraulic System - Hoist & Tilt
560892 Hydraulic System - HD & KO, LH
560893 Hydraulic System - HD & KO, RH
561689 Hydraulic System - Auxiliary Holddown
0040 Flushing Systems
80-187 Troubleshooting Hydraulic Systems
130-8 Systems Pressures
- 5-2 Pumps**
----- Steering Pump Service (100-57)
----- HD & KO Pump Service (HS-17)
0079 Hydraulic Pump Failures
- 5-3 Valves**
----- Steering Valve Service (HGB 106)
----- Hoist & Tilt Control Valve Service (1553 B1)
----- Holddown & Kickoff Valve Service (HU 1881 & HU 1811)
- 5-4 Cylinders**
80-44 Cylinder Service
- 5-5 Filters**
0137 Return Filter Service
----- Transmission Filter - See Section 3-2
- 5-6 Miscellaneous**

MASTER CHECK SHEET

4 of 4

wagner SERVICE BOOK INDEX

PAGE _____

L-90

MODEL _____

039284

DATE 9-2-86

SERIAL NO. _____

REVISED 8-1-89

ELECTRICAL SYSTEM**SECTION 6**

-
- | | |
|------------|---|
| 6-1 | Systems/Circuits |
| 561509 | Electrical System Schematic (Ref) |
| 550555 | Audio Visual Engine Protection Circuit |
| 539396 | Reverse Alarm Circuit |
| 555269 | Neutral Start Circuit |
| 6-2 | Components |
| 80-92 | Battery Maintenance |
| 0161 | Alternator Servicing Precautions |
| 560054 | Instrument Panel |
| 560246 | Instrument Panel Wiring |
| 80-333 | Audiovisual Engine Protection Maintenance |
| 80-180 | Tachometer Service |
| 80-140 | Volt Guard Service |
-

CAB & COWL**SECTION 7**

-
- | | |
|--------|-------------------------|
| 0197 | Cab Tilting Procedure |
| 80-256 | Air Conditioner Service |
-

FRAME & ATTACHMENTS**SECTION 8**

-
- | | |
|-------|---|
| ----- | Tailpost Installation - See Section 3-4 |
|-------|---|
-

ACCESSORIES & OPTIONS**SECTION 9**

-
- | | |
|--------|---------------------------------|
| 80-125 | Fire Suppression System Service |
|--------|---------------------------------|
-

MAINTENANCE & LUBRICATION**SECTION 10**

-
- | | |
|--------|---------------------------------------|
| 80-229 | Maintenance & Lubrication - General |
| 0025 | Initial Lubrication |
| 80-24 | Maintenance Check, Daily |
| 80-25 | Maintenance Check, 50, 250 & 500 Hrs. |
| 80-26 | Maintenance Check, 1000 & 2000 Hrs. |
| ----- | L-90 Maintenance & Lubrication (Ref) |
| 80-212 | Systems Capacities |
-