

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

DATE 4-30-87

REVISED 8-2-89

PAGE 1 of 4

MODEL L-90

SERIAL NO. 039286

## GENERAL INFORMATION

SECTION 1

----- Master Check Sheets  
80-35 How to use your Master Check Sheet  
80-103 Start & Stop Procedures  
0081 Loctite Application  
0130 Capscrew Grades & Torque Values  
80-245 Manufacturer's Warranty

## POWER UNIT

SECTION 2

2-1 **Engine**  
----- CUMMINS Engine Warranty  
----- Cummins Operation & Maintenance Manual (3379052)

2-2 **Controls**  
----- Audiovisual Engine Protection Sys - See Section 6-1

2-3 **Lubrication**  
556263 Lube Oil System - Bypass Filter

2-4 **Fuel System**  
541761 Fuel System

2-5 **Air Intake & Exhaust**  
80-45 Air Filter Service  
0024 Service Gauge Operation

2-6 **Cooling**  
0124 Radiator Fill  
80-287 Radiator Service

2-7 **Miscellaneous**  
80-196 Cold Start (Quick Start) Operation & Service

# MASTER CHECK SHEET

PAGE 2 of 4**Wagner** SERVICE BOOK INDEXMODEL L-90DATE 4-30-87SERIAL NO. 039286REVISED 8-2-89

## DRIVETRAIN

SECTION 3

- 3-1 General**  
548182 Drivetrain Installation
- 3-2 Transmission/Converter**  
----- ALLISON Transmission Service Manual (SA-1547-B)  
542380 Transmission Circuit  
0017 Transmission Breather Maintenance  
----- Transmission Filter Service - See Trans. Manual
- 3-3 Drivelines**  
0054 Driveline Installation & Lube  
0182 Driveline Torque Settings
- 3-4 Axles**  
80-243 Axle Installation  
----- CLARK Axle Service, 85,000 Series (DA-850)  
80-119 Tailpost Installation
- 3-5 Wheels & Tires**  
0179 Wheel & Tire Maintenance  
0183 Rim & Tire Safety  
80-67 Tire Pressures

## AIR & BRAKE SYSTEM

SECTION 4

- 4-1 Systems**  
561534 Air System - Failsafe Brake  
542791 Air System - Implement Controls  
550154 Hydraulic Brake System
- 4-2 Modules**
- 4-3 Supply Components**  
80-242 Air Dryer Service  
80-194 Expello Valve Service
- 4-4 Control Components**
- 4-5 Actuator Components**  
80-174 Maxi Brake Operation  
80-227 Disc Brake Service  
80-258 Air Chamber Service  
80-263 Master Cylinder Service
- 4-6 Miscellaneous**  
80-305 Basic Declutch System Diagram  
0154 Declutch System Troubleshooting

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

PAGE 3 of 4

MODEL L-90

DATE 4-30-87

SERIAL NO. 039286

REVISED 8-2-89

## HYDRAULIC SYSTEM

## SECTION 5

- 5-1 Systems/Circuits**  
563247 ANSI Hydraulic Schematic (Ref)  
----- Lumberjack Power Beyond System - Color Coded Schematic  
563143 Hydraulic System - Steering  
542784 Hydraulic System - Hoist & Tilt  
563273 Hydraulic System - Holddown & Kickoff  
544120 Hydraulic System - Auxiliary Holddown  
0040 Flushing Systems  
80-187 Troubleshooting Hydraulic Systems  
130-8 Systems Pressures  
80-336 Hydraulic Pressure Check Points
- 5-2 Pumps**  
----- Steering Pump Service (100-S7)  
----- Holddown & Kickoff Pump Service (HS-17)  
80-197 Commercial Pump Rotation  
0079 Hydraulic Pump Failures
- 5-3 Valves**  
80-251 Steering Control Unit Service  
80-252 Steering Valve Service  
80-280 Hoist & Tilt Valve Service  
80-284 Holddown & Kickoff Valve Service  
----- Auxiliary Holddown Valve Service (HU1881-1 & HU1811)
- 5-4 Cylinders**  
80-44 Cylinder Service
- 5-5 Filters**  
80-244 High Pressure Filter Service  
0137 Return Filter Service  
----- Transmission Filter - See Section 3-2
- 5-6 Miscellaneous**

## ELECTRICAL SYSTEM

## SECTION 6

- 6-1 Systems/Circuits**  
560177 Electrical System Schematic  
550555 Audiovisual Engine Protection System  
539396 Reverse Alarm Circuit  
555269 Neutral Start Circuit

(Continued)

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

PAGE 4 of 4  
MODEL L-90  
SERIAL NO. 039286

DATE 4-30-87  
REVISED 8-2-89

## ELECTRICAL SYSTEM - (Continued)

SECTION 6

6-2	Components
80-92	Battery Maintenance
0161	Alternator Servicing Precautions
80-238	Alternator Service
80-140	Volt Guard Operation
560054	Instrument Panel
560191	Instrument Panel Wiring
80-180	Tachometer Service
80-333	Audiovisual Engine Protection System Maintenance

## CAB & COWL

SECTION 7

0197	Cab Tilting Procedure
80-259	Heater/Air Conditioner Operation & Service

## FRAME & ATTACHMENTS

SECTION 8

-----	Tailpost Installation - See Section 3-4
-------	---

## ACCESSORIES & OPTIONS

SECTION 9

80-125	Fire Suppression System Service
--------	---------------------------------

## MAINTENANCE & LUBRICATION

SECTION 10

80-229	Maintenance & Lubrication - General
0025	Initial Lubrication
80-24	Maintenance Check, Daily
80-25	Maintenance Check, 50, 250 & 500 Hrs.
80-26	Maintenance Check, 1000 & 2000 Hrs.
-----	L-90 Maintenance & Lubrication
80-212	Systems Capacities