

MASTER CHECK SHEET

wagner SERVICE BOOK INDEX

DATE 7-30-87

REVISED 8-2-89

PAGE 1 of 4

MODEL L-90

SERIAL NO. 039287

GENERAL INFORMATION

SECTION 1

----- Master Check Sheet
80-35 How to use your Master Check Sheet
80-103 Start & Stop Procedures
0081 Loctite Application
0130 Capscrew Grades & Torque Values
80-245 Manufacturer's Warranty

POWER UNIT

SECTION 2

2-1 **Engine**
----- CUMMINS Engine Warranty
----- Cummins Operation & Maintenance Manual (3379052)

2-2 **Controls**
----- Audiovisual Engine Protection Sys - See Section 6

2-3 **Lubrication**
556263 Lube Oil System - Bypass Filter

2-4 **Fuel System**
541761 Fuel System

2-5 **Air Intake & Exhaust**
80-45 Air Filter Service
0024 Service Gauge Operation

2-6 **Cooling**
0124 Radiator Fill
80-287 Radiator Service
524881 Deaeration System

2-7 **Miscellaneous**
80-196 Cold Start (Quick Start) Operation & Service

MASTER CHECK SHEET

wagner SERVICE BOOK INDEX

DATE 7-30-87
REVISED 8-2-89

PAGE 2 of 4
MODEL L-90
SERIAL NO. 039287

DRIVETRAIN

SECTION 3

- 3-1 General**
 - 548182 Drivetrain Installation

- 3-2 Transmission/Converter**
 - ALLISON Transmission Service Manual (SA-1547-B)
 - 542380 Transmission Circuit
 - 0017 Transmission Breather Maintenance
 - Transmission Filter Service - See Trans. Manual

- 3-3 Drivelines**
 - 0054 Driveline Installation & Lube
 - 0182 Driveline Torque Settings

- 3-4 Axles**
 - 80-243 Axle Installation
 - CLARK Axle Service, 85,000 Series (DA-850)
 - 80-119 Tailpost Installation

- 3-5 Wheels & Tires**
 - 0179 Wheel & Tire Maintenance
 - 0183 Rim & Tire Safety
 - 80-67 Tire Pressures

AIR & BRAKE SYSTEM

SECTION 4

- 4-1 Systems**
 - 561534 Air System - Failsafe Brake
 - 542791 Air System - Implement Controls
 - 550154 Hydraulic Brake System

- 4-2 Modules**

- 4-3 Supply Components**
 - 80-242 Air Dryer Service
 - 80-194 Expello Valve Service

- 4-4 Control Components**

- 4-5 Actuator Components**
 - 80-174 Maxi Brake Operation
 - 80-227 Disc Brake Service
 - 80-258 Air Chamber Service
 - 80-263 Master Cylinder Service

- 4-6 Miscellaneous**
 - 80-305 Basic Declutch System Diagram
 - 0154 Declutch System Troubleshooting

MASTER CHECK SHEET

wagner SERVICE BOOK INDEX

PAGE 3 of 4

MODEL L-90

DATE 7-30-87

SERIAL NO. 039287

REVISED 8-2-89

HYDRAULIC SYSTEM

SECTION 5

- 5-1 Systems/Circuits**
563247 ANSI Hydraulic Schematic (Ref)
----- Lumberjack Power Beyond System - Color Coded Schematic
563143 Hydraulic System - Steering
542784 Hydraulic System - Hoist & Tilt
563273 Hydraulic System - Holddown & Kickoff
0040 Flushing Systems
80-187 Troubleshooting Hydraulic Systems
130-8 Systems Pressures
80-336 Hydraulic Pressure Check Points
- 5-2 Pumps**
----- Steering Pump Service (100-S7)
----- Holddown & Kickoff Pump Service (HS-I7)
80-197 Commercial Pump Rotation
0079 Hydraulic Pump Failures
- 5-3 Valves**
80-251 Steering Control Unit Service
80-252 Steering Valve Service
80-280 Hoist & Tilt Valve Service
80-284 Holddown & Kickoff Valve Service
- 5-4 Cylinders**
80-44 Cylinder Service
- 5-5 Filters**
80-244 High Pressure Filter Service
0137 Return Filter Service
----- Transmission Filter - See Section 3-2
- 5-6 Miscellaneous**

ELECTRICAL SYSTEM

SECTION 6

- 6-1 Systems/Circuits**
560177 Electrical System Schematic
550555 Audiovisual Engine Protection System
539396 Reverse Alarm Circuit
555269 Neutral Start Circuit

(Continued)

MASTER CHECK SHEET

wagner SERVICE BOOK INDEX

PAGE 4 of 4

MODEL L-90

SERIAL NO. 039287

DATE 7-30-87

REVISED 8-2-89

ELECTRICAL SYSTEM - (Continued)

SECTION 6

6-2	Components
80-92	Battery Maintenance
0161	Alternator Servicing Precautions
80-238	Alternator Service
80-140	Volt Guard Operation
560054	Instrument Panel
560191	Instrument Panel Wiring
80-180	Tachometer Service
80-333	Audiovisual Engine Protection System Maintenance

CAB & COWL

SECTION 7

0197	Cab Tilting Procedure
80-259	Heater/Air Conditioner Operation & Service

FRAME & ATTACHMENTS

SECTION 8

-----	Tailpost Installation - See Section 3-4
-------	---

ACCESSORIES & OPTIONS

SECTION 9

80-125	Fire Suppression System Service
--------	---------------------------------

MAINTENANCE & LUBRICATION

SECTION 10

80-229	Maintenance & Lubrication - General
0025	Initial Lubrication
80-24	Maintenance Check, Daily
80-25	Maintenance Check, 50, 250 & 500 Hrs.
80-26	Maintenance Check, 1000 & 2000 Hrs.
-----	L-90 Maintenance & Lubrication
80-212	Systems Capacities