

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

PAGE 1 of 4

MODEL L-90

DATE 4-19-88

SERIAL NO. 039290

REVISED 8-10-89

## GENERAL INFORMATION

### SECTION 1

----- Master Check Sheet  
80-35 How to use your Master Check Sheet  
80-103 Start & Stop Procedures  
0081 Loctite Application  
0130 Capscrew Grades & Torque Values  
80-245 Manufacturer's Warranty

## POWER UNIT

### SECTION 2

2-1 **Engine**  
----- CUMMINS Engine Warranty  
----- Cummins Operation & Maintenance Manual (3379052)

2-2 **Controls**  
----- Audiovisual Engine Protection System - See Section 6-1

2-3 **Lubrication**  
556263 Lube Oil System - Bypass Filter

2-4 **Fuel System**  
541761 Fuel System

2-5 **Air Intake & Exhaust**  
80-45 Air Filter Service  
0024 Service Gauge Operation

2-6 **Cooling**  
0124 Radiator Fill  
80-287 Radiator Service  
524881 Deaeration system

2-7 **Miscellaneous**  
80-196 Cold Start Operation & Service

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

2 of 4

PAGE \_\_\_\_\_

L-90

MODEL \_\_\_\_\_

039290

SERIAL NO. \_\_\_\_\_

DATE 4-19-88

REVISED 8-10-89

## DRIVETRAIN

## SECTION 3

- 3-1 General**  
548182 Drivetrain Installation (Ref)
- 3-2 Transmission/Converter**  
----- ALLISON Transmission Service Manual (SA-1547-B)  
542380 Transmission Circuit (Ref)  
0017 Transmission Breather Maintenance  
----- Transmission Filter Service See Trans. Manual
- 3-3 Drivelines**  
0054 Driveline Installation & Lube  
0182 Driveline Torque Settings
- 3-4 Axles**  
80-243 Axle Installation  
----- CLARK Axle Service, 85,000 Series (DA-850)  
80-119 Tailpost Installation
- 3-5 Wheels & Tires**  
0179 Wheel & Tire Maintenance  
0183 Rim & Tire Safety  
80-67 Tire Pressures

## AIR & BRAKE SYSTEM

## SECTION 4

- 4-1 Systems**  
561534 Air System - Failsafe  
542791 Air System - Implement  
542690 Air System - Auxiliary Holddown  
550154 Hydraulic Brake System
- 4-2 Modules**
- 4-3 Supply Components**  
80-242 Air Dryer Service  
80-194 Expello Valve Service

(Continued)

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

DATE 4-19-88

REVISED 8-10-89

PAGE 3 of 4

MODEL L-90

SERIAL NO. 039290

## AIR & BRAKE SYSTEM (Continued)

SECTION 4

- 4-4 Control Components**
- 4-5 Actuator Components**
  - 80-174 Maxi Brake Operation
  - 80-227 Disc Brake Service
  - 80-258 Air Chamber Service
  - 80-263 Master cylinder Service
- 4-6 Miscellaneous**
  - 80-305 Basic Declutch System Diagram
  - 0154 Declutch System Troubleshooting

## HYDRAULIC SYSTEMS

SECTION 5

- 5-1 Systems/Circuits**
  - 563247 ANSI Hydraulic Schematic
  - Lumberjack Power Beyond System - Color Coded Schematic
  - 563929 Hydraulic System - Steering
  - 542784 Hydraulic System - Hoist & Tilt
  - 563273 Hydraulic System - Holddown & Kickoff
  - 561689 Hydraulic System - Auxiliary Holddown
  - 0040 Flushing Systems
  - 80-187 Troubleshooting Hydraulic Systems
  - 130-8 Systems Pressures
  - 80-336 Hydraulic Pressure Check Points
- 5-2 Pumps**
  - Commercial Pump Service, P25 (100-S7)
  - Commercial Pump Service, P365 (HS-19)
  - 80-197 Commercial Pump Rotation
  - 0079 Hydraulic Pump Failures
- 5-3 Valves**
  - Steering Valve Service (HGB 106)
  - Hoist & Tilt Valve Service (1553-B1)
  - Holddown & Kickoff Valve Service (HU1881-1 & HU1811)
- 5-4 Cylinders**
  - 80-44 Cylinder Service
- 5-5 Filters**
  - 80-244 High Pressure Filter Service
  - 0137 Return Filter Service
  - Transmission Filter - See Section 3-2
- 5-6 Miscellaneous**

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

DATE 4-19-88

REVISED 8-10-89

PAGE 4 of 4

MODEL L-90

SERIAL NO. 039290

## ELECTRICAL SYSTEM

## SECTION 6

### 6-1 Systems/Circuits

561509 Electrical System Schematic (Ref)  
558500 Audiovisual Engine Protection System  
539396 Reverse Alarm Circuit  
555269 Neutral Start Circuit

### 6-2 Components

80-92 Battery Maintenance  
0161 Alternator Servicing Precautions  
80-140 Volt Guard Operation  
560246 Instrument Panel  
560191 Instrument Panel Wiring  
80-180 Tachometer Service  
80-333 Audiovisual Engine Protection System Maintenance

## CAB & COWL

## SECTION 7

0197 Cab Tilting Procedure  
80-259 Heater/Air Conditioner Operation & Service

## FRAME & ATTACHMENTS

## SECTION 8

----- Tailpost Installation - See Section 3-4

## ACCESSORIES & OPTIONS

## SECTION 9

80-125 Fire Suppression System Service

## MAINTENANCE & LUBRICATION

## SECTION 10

80-229 Maintenance & Lubrication - General  
0025 Initial Lubrication  
80-24 Maintenance Check, Daily  
80-25 Maintenance Check, 50, 250 & 500 Hrs.  
80-26 Maintenance Check, 1000 & 2000 Hrs.  
----- L-90 Maintenance & Lubrication  
80-212 Systems Capacities