

**MASTER CHECK SHEET
PARTS BOOK INDEX**PAGE: 1 of 6
MODEL: L - 90
SERIAL NO: 039291DATE: 6-1-88
REVISED: 5-11-92**GENERAL INFORMATION****SECTION 1**

-----	Master Check Sheet
80-35	How to use your Master Check Sheet
80-7A	Parts Ordering Procedure
-----	Quick Reference Filters & Belts, L-90 039291
800081	Structure Nomenclature
533685	Decal Locations

POWER UNIT**SECTION 2**

2-1	Engine
564885	Power Unit
226062	Engine Specifications, Cummins NTA 855-C335 BC3 S/N 111462119
-----	Engine Parts Catalog (3884235)
2-2	Controls
-----	Engine Controls - See Section 7-2
-----	Audiovisual Engine Protection System - See Section 6-1
2-3	Lubrication
556263	Lube Oil System - Bypass Filter
2-4	Fuel
541761	Fuel System
-----	Fuel Filter - Engine Parts Catalog - See Section 2-1
2-5	Air Intake & Exhaust
562376	Air Intake System
217443	Air Cleaner
561607	Exhaust System
2-6	Cooling
-----	Radiator Installation
558405	Radiator & Shroud Asm
225076	Radiator
2-7	Miscellaneous
526723	Cold Start (Quick Start)

DRIVETRAIN**SECTION 3**

3-1	General
564996	Drivetrain Installation

DRIVETRAIN (Continued)**SECTION 3**

3-2	Transmission & Converter
-----	Converter Installation - See Section 2-1
226974	Converter S/N 181680 FR
W10659	Transmission Installation
226930	Transmission S/N 180989 FR
564943	Transmission Circuit
219271	Transmission Filter
-----	Transmission Shift Controls - See Section 7-2
-----	Transmission Air Cylinder - See Section 4-5
3-3	Drivelines
-----	Driveline Installation - See Section 3-1
530480	Converter/Transmission Driveline
528756	Transmission/Axle Driveline
3-4	Axles
547355	Drive Axle S/N 655653
544897	Tailpost (Rear Axle)
3-5	Wheels & Tires
547331	Front Wheel (Drive)
511427	Rear Wheel (Steer)
-----	Front Tires - 33.5 x 33 - 44PR L-3 LDNDLCM
-----	Rear Tires - 23.5 x 25 - 20PR E-3

AIR & BRAKE SYSTEMS**SECTION 4**

4-1	Systems
561543	Air System - Vehicle
562505	Air System - Implement
550154	Hydraulic Brake System
4-2	Modules
-----	Control Panel, LH - See Air System Implement, Section 4-1
-----	Control Panel, RH - See Air System Implement, Section 4-1
4-3	Supply Components
224794	Air Dryer
217734	Expello Valve

DATE: 6-1-88
REVISED: 5-11-92PAGE: 3 of 6
MODEL: L - 90
SERIAL NO: 039291**AIR & BRAKE SYSTEMS (Continued)****SECTION 4**

4-4 Control Components
201358 Regulator Valve
216615 Relay Valve
201352 Holdback Valve
211315 Relay Valve
214161 Relay Valve
216285 Relay Valve
216808 Relay Valve
214127 Rotary Valve
215085 Solenoid Valve
211369 Treadle Valve
218928 Brake Valve
227916 Remote Control Valve
207272 Push Button Valve
208707 Push Button Valve
215115 Control Valve Assembly

4-5 Actuator Components
536683 Transmission Control Air Cylinder
211711 Declutch Air Cylinder
219109 Implement Air Cylinder, Holddown & Kickoff
219110 Implement Air Cylinder, Hoist & Tilt
505238 Reach Air Cylinder
220267 Brake Actuator Assembly
222010 Brake Air Chamber, Service
217201 Brake Air Chamber, Parking
222331 Master Cylinder, Service Brake
----- Brake Caliper - See Section 3-4
537433 Parking Brake Air Chamber Installation

4-6 Miscellaneous
207906 Air Horn
509574 Air Hose Kit

HYDRAULIC SYSTEM**SECTION 5**

5-1 Systems & Circuits
564628 Hydraulic System - Steering
542784 Hydraulic System - Hoist & Tilt
542784-1 Hoist Cylinder Plumbing
542784-2 Tilt Cylinder Plumbing
542784-3 Valve to Tank Plumbing
564627 Hydraulic System - Holddown & Kickoff
565016 Hydraulic System - Carriage Reach
564997 Boom Plumbing
565012 Carriage Hydraulics

HYDRAULIC SYSTEM (Continued)**SECTION 5**

5-2	Pumps
226539	Single Pump, Steering
226540	Tandem Pump, Holddown & Kickoff, LH & RH
5-3	Valves
565568	Valve Module
224731	Steering Steering Control Unit
226211	Steering Valve
225151	Hoist & Tilt Valve
223725	Holddown/Kickoff Valve, LH
223726	Holddown/Kickoff Valve, RH
562131	Carriage Reach Valve
227513	Relief Valve
5-4	Cylinders
800089	Hydraulic Cylinder Locations (Ref)
505619	Steering Cylinder
557499	Hoist Cylinder
564609	Tilt Cylinder
550431	Holddown Cylinder
534397	Kickoff Cylinder
564589	Carriage Reach Cylinder
5-5	Filters
228201	High Pressure Filter (100 GPM)
210092	Return Filter, Hoist & Tilt
509413	Return Strainer (In-Tank)
-----	Transmission Filter - See Section 3-2
5-6	Miscellaneous
-----	Hydraulic Tank Heater - See Section 9-1
537587	Hydraulic Tube Coupling
80-60	O-Ring Guide

ELECTRICAL SYSTEM**SECTION 6**

6-1	Systems & Circuits
560361	Audiovisual Engine Protection System
539396	Reverse Alarm Circuit
555269	Neutral Start Circuit (Ref)

DATE: 6-1-88

MODEL: L - 90

REVISED: 5-11-92

SERIAL NO: 039291

ELECTRICAL SYSTEM (Continued)**SECTION 6**

6-2	Components
560367	Cowl Wiring
560363	Chassis Wiring (Ref)
224207	Alternator
-----	Instrument Panel - See Section 7-2
560246	Instrument Panel Wiring
560191	Cowl Terminal Board
560085	Junction Box
-----	Battery Box - See Section 8-2
800004	Lighting Components
550681	Halogen Light Bar
800008	Cab Warning Lights

CAB & COWL**SECTION 7**

7-1	Basic Structure
559642	Cab Assembly
562569	Cowl Assembly
800006	Cowl Installation Hardware
559644	Door Assembly, LH
559643	Door Assembly, RH
559647	Door Latch, LH
559646	Door Latch, RH
554939	Cab & Cowl Insulation

7-2	Instruments & Controls
563052	Instrument Panel
564625	Engine & Transmission Controls
224174	Accelerator Pedal
800005	Steering Wheel Components
211144	Steering Column

7-3	Miscellaneous
562407	Heater/Air Conditioner Installation
218869	Heater/Air Conditioner Assembly
550803	Air Conditioner Condenser Installation
214971	Cab Pressurizer
800007	Defroster
557651	Windshield Wipers, Front & Rear
553905	Seat Suspension
220900	Seat Assembly

DATE: 6-1-88
REVISED: 5-11-92

FRAME & ATTACHMENTS

SECTION 8

8-1	Frame & Attachments
558676	Boom Assembly
564575	Carriage Assembly
564579	Reach Linkage
-----	Tailpost - See Section 3-4
800114	Pin & Bushing Composite
800097	Miscellaneous Chassis Parts
8-2	Miscellaneous
551550	Battery Box

ACCESSORIES & OPTIONS

SECTION 9

9-1	Accessories & Options
561850	Fire Suppression System
565015	Remote Lube (Carriage)

PARTS