

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

DATE 10-13-88

REVISED 8-10-89

PAGE 1 of 4

MODEL L-90

SERIAL NO. 039292

## GENERAL INFORMATION

### SECTION 1

----- Master check Sheet  
80-35 How to use your Master Check Sheet  
80-103 Start & Stop Procedures  
0081 Loctite Application  
0130 Capscrew Grades & Torque Values  
80-245 Manufacturer's Warranty

## POWER UNIT

### SECTION 2

2-1 **Engine**  
----- CUMMINS Operation & Maintenance Manual (3379052)

2-2 **Controls**  
----- Audiovisual Engine Protection System - See Section 6-1

2-3 **Lubrication**  
556263 Lube Oil System - Bypass Filter

2-4 **Fuel System**  
541761 Fuel System

2-5 **Air Intake & Exhaust**  
80-45 Air Filter Service  
0024 Service Gauge Operation

2-6 **Cooling**  
0124 Radiator Fill  
80-287 Radiator Service  
524881 Deaeration system

2-7 **Miscellaneous**  
80-196 Cold Start Operation & Service

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

DATE 10-13-88  
REVISED 8-10-89

PAGE 2 of 4  
MODEL L-90  
SERIAL NO. 039292

## DRIVETRAIN

SECTION 3

- 3-1      **General**  
564996    Drivetrain Installation
  
- 3-2      **Transmission/Converter**  
----- CLARK Transmission Service Manual (SM-54)  
----- CLARK Converter Service Manual (SM-8000)  
564943    Transmission Circuit  
0017      Transmission Breather Maintenance  
----- Transmission Filter Service See Trans. Manual
  
- 3-3      **Drivelines**  
0054      Driveline Installation & Lube  
0182      Driveline Torque Values
  
- 3-4      **Axles**  
80-243    Axle Installation  
----- CLARK Axle Service, 85,000 Series (DA-850)  
80-119    Tailpost Installation
  
- 3-5      **Wheels & Tires**  
0179      Wheel & Tire Maintenance  
0183      Rim & Tire Safety  
80-67      Tire Pressures

## AIR & BRAKE SYSTEM

SECTION 4

- 4-1      **Systems**  
561534    Air System - Failsafe Brake  
562505    Air System - Implement Controls (Ref)  
550154    Hydraulic Brake System
  
- 4-2      **Modules**
  
- 4-3      **Supply Components**  
80-242    Air Dryer Service  
80-194    Expello Valve Service
  
- 4-4      **Control Components**

(Continued)

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

DATE 10-13-88  
REVISED 8-10-89

PAGE 3 of 4  
MODEL L-90  
SERIAL NO. 039292

## AIR & BRAKE SYSTEM (Continued)

SECTION 4

**4-5 Actuator Components**  
80-174 Maxi Brake Operation  
80-227 Disc Brake Service  
80-258 Air Chamber Service  
80-263 Master Cylinder Service

**4-6 Miscellaneous**  
80-305 Basic Declutch Diagram  
0154 Declutch System Troubleshooting

## HYDRAULIC SYSTEM

SECTION 5

**5-1 Systems/Circuits**  
563247 ANSI Hydraulic Schematic (Ref)  
----- Lumberjack Power Beyond System - Color Coded Schematic  
564628 Hydraulic System - Steering  
542784 Hydraulic System - Hoist & Tilt  
564627 Hydraulic System - Holddown & Kickoff  
0040 Flushing Systems  
80-187 Troubleshooting Hydraulic Systems  
130-8 Systems Pressures  
80-336 Hydraulic Pressure Check Points

**5-2 Pumps**  
80-286 HD/KO & Steering Pump Service  
0079 Hydraulic Pump Failures

**5-3 Valves**  
80-251 Steering Control Unit Service  
80-252 Steering Valve Service  
80-280 Hoist & Tilt Control Valve Service  
80-284 Holddown & Kickoff Valve Service

**5-4 Cylinders**  
80-44 Cylinder Service

**5-5 Filters**  
80-244 High Pressure Filter Service  
0137 Return Filter Service  
----- Transmission Filter - See Section 3-2

**5-6 Miscellaneous**

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

DATE 10-13-88

REVISED 8-10-89

PAGE 4 of 4

MODEL L-90

SERIAL NO. 039292

## ELECTRICAL SYSTEM

SECTION 6

**6-1 Systems/Circuits**  
561509 Electrical System (Ref)  
550555 Audiovisual Engine Controls Circuit  
539396 Reverse Alarm Circuit  
555269 Neutral Start Circuit

**6-2 Components**  
80-92 Battery Maintenance  
0161 Alternator Servicing Precautions  
80-238 Alternator Service  
80-140 Volt Guard Operation  
563052 Instrument Panel  
560246 Instrument Panel Wiring  
80-180 Tachometer Service  
80-333 Audiovisual Engine Protection System Maintenance

## CAB & COWL

SECTION 7

0197 Cab Tilting Procedure

## FRAME & ATTACHMENTS

SECTION 8

----- Tailpost Installation - See Section 3-4

## ACCESSORIES

SECTION 9

80-125 Fire Suppression System Service

## MAINTENANCE & LUBRICATION

SECTION 10

80-229 Maintenance & Lubrication - General  
0025 Initial Lubrication  
80-24 Maintenance Check, Daily  
80-25 Maintenance Check, 50, 250 & 500 Hrs.  
80-26 Maintenance Check, 1000 & 2000 Hrs.  
----- L-90 Maintenance & Lubrication (Ref)  
80-212 Systems Capacities