

MASTER CHECK SHEET

wagner PARTS BOOK INDEX

PAGE 1 of 6

MODEL L-90

SERIAL NO. 039293

DATE 12-1-88

REVISED 5-3-90

*Back Order

GENERAL INFORMATION

SECTION 1

----- Master Check Sheet
80-35 How to use your Master Check Sheet
80-7 Parts Ordering Procedure
----- Quick Reference Filters & Belts L-90/039293
800081 Structure Nomenclature
533685 Decal Location

POWER UNIT

SECTION 2

2-1 Engine
564885 Power Unit
226062 Engine Specs., (CUMMINS NTA 855-C335 BC3) S/N 11488607
----- Engine Parts Catalog (3884235)

2-2 Controls
----- Engine Controls - See Section 7-1
----- Audiovisual Engine Protection System - See Section 6-1

2-3 Lubrication
556263 Lube Oil System - Bypass Filter

2-4 Fuel
541761 Fuel System
----- Fuel Filter - See Engine Parts Catalog

2-5 Air Intake & Exhaust
562376 Air Intake System
217443 Air Cleaner
561607 Exhaust System

2-6 Cooling
----- Radiator Installation - See Power Unit, Section 2-1
558405 Radiator & Shroud Asm
230479 Radiator

2-7 Miscellaneous
526723 Cold Start (Quick Start)

MASTER CHECK SHEET

Wagner PARTS BOOK INDEX

PAGE 2 of 6

MODEL L-90

SERIAL NO. 039293

DATE 12-1-88

REVISED 8-11-89

*Back-Order

DRIVETRAIN

SECTION 3

- 3-1 General**
564996 Drivetrain Installation
- 3-2 Transmission/Converter**
----- Converter Installation - See Section 2-1
~~226974~~ Converter S/N HUSA 23022
OK W10659 Transmission Installation
226930 Transmission S/N
564943 Transmission Circuit
219271 Transmission Filter
----- Transmission Shift Controls - See Section 7
----- Transmission Air Cylinder - See Section 4-5
- 3-3 Drivelines**
----- Driveline Installation - See Section 3-1
530480 Driveline Assembly, Converter to Transmission
528756 Driveline Assembly, Transmission to Axle
- 3-4 Axles**
547355 Drive Axle, S/N
544897 Tailpost
- 3-5 Wheels & Tires**
547331 Front Wheel (Drive)
511427 Rear Wheel (Steer)
----- Front Tires, 33.5 x 33 44PR L-3 LDNDLCM
----- Rear Tires, 23.5 x 25 20PR L-3

AIR & BRAKE SYSTEMS

SECTION 4

- 4-1 Systems**
565165 Air System - Failsafe Brake
562505 Air System - Implement Controls
550154 Hydraulic Brake System
- 4-2 Modules**
----- Control Panel, LH - See Air System - Implement
----- Control Panel, RH - See Air System - Implement
- 4-3 Supply Components**
226349 Air Dryer
217734 Expello Valve

MASTER CHECK SHEET

wagner PARTS BOOK INDEX

DATE 12-1-88
REVISED 8-11-89

PAGE 3 of 6
MODEL L-90
SERIAL NO. 039293

AIR & BRAKE SYSTEMS

SECTION 4

- 4-4 Control Components**
201358 Regulator Valve
216615 Relay Valve
201352 Holdback Valve
211315 Relay Valve
214161 Relay Valve
216285 Relay Valve
216808 Relay Valve
214127 Rotary Valve
215085 Solenoid Valve
211369 Treadle Valve
218928 Brake Valve
227916 Remote Control Valve
207272 Push Button Valve
208707 Push Button Valve
215115 Control Valve Asm, HD/KO
- 4-5 Actuator Components**
536683 Transmission Control Air Cylinder
545336 Declutch Air Cylinder
219109 Implement Air Cylinder, Holddown & Kickoff
219110 Implement Air Cylinder, Hoist & Tilt
505238 Reach Air Cylinder
- 220267 Brake Actuator Assembly
222010 Brake Air Chamber, Service
217201 Brake Air Chamber, Parking
222331 Master Cylinder, Service Brake
----- Brake Caliper - See Section 3-4
561614 Parking Brake Installation
- 4-6 Miscellaneous**
207906 Air Horn
509574 Air Hose Kit

HYDRAULIC SYSTEM

SECTION 5

- 5-1 Systems/Circuits**
564628 Hydraulic System - Steering
542784 Hydraulic System - Hoist & Tilt
542784-1 Hoist Cylinder Plumbing
542784-2 Tilt Cylinder Plumbing
542784-3 Valve to Tank Plumbing

(Continued)

MASTER CHECK SHEET

wagner PARTS BOOK INDEX

PAGE 4 of 6
MODEL L-90
SERIAL NO. 039293

DATE 12-1-88
REVISED 8-11-89

HYDRAULIC SYSTEM (Continued)

SECTION 5

5-1 Systems/Circuits (Continued)
564627 Hydraulic System - Holddown & Kickoff
565016 Hydraulic System - Reach
564997 Boom Plumbing
565012 Carriage Hydraulics

5-2 Pumps
226539 Steering
226540 Holddown/Kickoff, R&LH

5-3 Valves
565568 Valve Module
224731 Steering Control Unit (Pilot)
226211 Steering Valve
225151 Hoist & Tilt Valve
223725 Holddown/Kickoff Valve, LH
223726 Holddown/Kickoff Valve, RH
562131 Reach Valve
227513 Relief Valve

5-4 Cylinders
800089 Hydraulic Cylinder Locations (Ref)
505619 Steering Cylinder
557499 Hoist Cylinder
564609 Tilt Cylinder
550431 Holddown Cylinder
534397 Kickoff Cylinder
564589 Reach Cylinder

5-5 Filters
228201 High Pressure Filter (100 GPM)
210092 Return Filter, Hoist & Tilt
509413 Return Strainer (In-Tank)
----- Transmission Filter - See Section 3-2

5-6 Miscellaneous
537587 Hydraulic Tube Coupling
80-60 O-Ring Service

MASTER CHECK SHEET

wagner PARTS BOOK INDEX

DATE 12-1-88

REVISED 8-11-89

*Back Order

PAGE 5 of 6

MODEL L-90

SERIAL NO. 039293

ELECTRICAL SYSTEM

SECTION 6

6-1 Systems/Circuits
560361 Audiovisual Engine Protection System
539396 Reverse Alarm Circuit
* Neutral Start Circuit

6-2 Components
560367 Cowl Wiring
560363 Chassis Wiring (Ref)
224207 Alternator
563052 Instrument Panel
560246 Instrument Panel Wiring
560191 Cowl Terminal Board
560085 Junction Box
----- Battery Box - See Section 8
800004 Lighting Components
550681 Halogen Light Bar
800008 Cab Warning Light

CAB & COWL

SECTION 7

559642 Cab Assembly
562569 Cowl Assembly
800006 Cowl Installation Hardware
559644 Door Assembly, LH
559643 Door Assembly, RH
559647 Door Latch, LH
559646 Door Latch, RH
554939 Cab & Cowl Insulation

564625 Engine & Transmission Controls
800005 Steering Wheel Components
211144 Steering Column

562407 Heater/Air Conditioner Installation
218869 Heater/Air Conditioner Assembly
550803 Air Conditioner Condenser Installation
214971 Cab Pressurizer
800007 Defroster
557651 Windshield Wipers, Front & Rear
553905 Seat Suspension
220900 Seat Assembly

MASTER CHECK SHEET

wagner PARTS BOOK INDEX

DATE 12-1-88
REVISED 8-11-89

PAGE 6 of 6
MODEL L-90
SERIAL NO. 039293

FRAME & ATTACHMENTS

SECTION 8

558676	Boom Assembly
564575	Carriage Assembly
564579	Reach Linkage
-----	Tailpost - See Section 3-4
800114	Pin & Bushing Composite
800097	Miscellaneous Chassis Parts
551550	Battery Box

ACCESSORIES & OPTIONS

SECTION 9

561627	Fire Suppression System
565015	Remote Lube (Carriage)

PARTS