

MASTER CHECK SHEET

wagner SERVICE BOOK INDEX

PAGE 1 of 4
MODEL L-90
SERIAL NO. 039293

DATE 12-1-88
REVISED 8-11-89

*Back Order

GENERAL INFORMATION

SECTION 1

----- Master Check Sheet
80-35 How to use your Master Check Sheet
80-103 Start & Stop Procedures
0081 Loctite Application
0130 Capscrew Grades & Torque Values
80-245 Manufacturer's Warranty

POWER UNIT

SECTION 2

2-1 **Engine**
----- CUMMINS Operation & Maintenance Manual (3379052)

2-2 **Controls**
----- Audiovisual Engine Protection System - See Section 6-1

2-3 **Lubrication**
556263 Lube Oil System - Bypass Filter

2-4 **Fuel System**
541761 Fuel System

2-5 **Air Intake & Exhaust**
80-45 Air Filter Service
0024 Service Gauge Operation

2-6 **Cooling**
0124 Radiator Fill
80-287 Radiator Service
524881 Deaeration System

2-7 **Miscellaneous**
80-196 Cold Start Operation & Service

MASTER CHECK SHEET

2 of 4

wagner SERVICE BOOK INDEX

PAGE _____

MODEL _____

SERIAL NO. _____

DATE 12-1-88REVISED 8-11-89

*Back Order

DRIVETRAIN**SECTION 3**

- 3-1 General**
564996 Drivetrain Installation
- 3-2 Transmission/Converter**
----- CLARK Transmission Service Manual (SM-54)
----- CLARK Converter Service Manual (SM-8000)
564943 Transmission Circuit
0017 Transmission Breather Maintenance
----- Transmission Filter Service - See Trans. Manual
- 3-3 Drivelines**
0054 Driveline Installation & Lube
0182 Driveline Torque Settings
- 3-4 Axles**
80-243 Axle Installation
----- CLARK Axle Service, 85,000 Series (DA-850)
80-119 Tailpost Installation
- 3-5 Wheels & Tires**
0179 Wheel & Tire Maintenance
0183 Rim & Tire Safety
80-67 Tire Pressures

AIR & BRAKE SYSTEM**SECTION 4**

- 4-1 Systems**
565165 Air System - Failsafe Brake
562505 Air System - Implement Controls
550154 Hydraulic Brake System
- 4-2 Modules**
- 4-3 Supply Components**
80-369 Air Dryer Service
80-194 Expello Valve Service
- 4-4 Control Components**

(Continued)

MASTER CHECK SHEET

wagner SERVICE BOOK INDEX

PAGE 3 of 4

MODEL L-90

DATE 12-1-88

SERIAL NO. 039293

REVISED 8-11-89

AIR & BRAKE SYSTEM (Continued)

SECTION 4

4-5 Actuator Components
80-174 Maxi Brake Operation
80-227 Disc Brake Service
80-258 Air Chamber Service
80-263 Master Cylinder Service

4-6 Miscellaneous
80-305 Basic Declutch Diagram
0154 Declutch System Troubleshooting

HYDRAULIC SYSTEM

SECTION 5

5-1 Systems/Circuits
563247 ANSI Hydraulic Schematic (Ref)
----- Lumberjack Power Beyond System - Color Coded Schematic
564628 Hydraulic System - Steering
542784 Hydraulic System - Hoist & Tilt
564627 Hydraulic System - Holddown & Kickoff
565016 Hydraulic System - Reach
0040 Flushing Systems
80-187 Troubleshooting Hydraulic Systems
130-8 Systems Pressures
80-336 Hydraulic Pressure Check Points

5-2 Pumps
80-286 HD/KO & Steering Pump Service
0079 Hydraulic Pump Failures

5-3 Valves
80-251 Steering Control Unit Service
80-252 Steering Valve Service
80-280 Hoist & Tilt Control Valve Service
80-284 Holddown & Kickoff Valve Service
----- Reach Valve Service (HU1881-1 & HU 1811)

5-4 Cylinders
80-44 Cylinder Service

5-5 Filters
80-244 High Pressure Filter Service
0137 Return Filter Service
----- Transmission Filter - See Section 3-2

5-6 Miscellaneous

MASTER CHECK SHEET

wagner SERVICE BOOK INDEX

DATE 12-1-88
REVISED 8-11-89

PAGE 4 of 4
MODEL L-90
SERIAL NO. 039293

*Back Order

ELECTRICAL SYSTEM

SECTION 6

6-1

Systems/Circuits

- * Electrical System Schematic
- 560361 Audiovisual Engine Protection System
- 539396 Reverse Alarm Circuit
- * Neutral Start Circuit

6-2

Components

- 80-92 Battery Maintenance
- 0161 Alternator Servicing Precautions
- 80-238 Alternator Service
- 80-140 Volt Guard Operation
- 563052 Instrument Panel
- 560246 Instrument Panel Wiring
- 80-180 Tachometer Service
- 80-333 Audiovisual Engine Protection System Maintenance

CAB & COWL

SECTION 7

- 0197 Cab Tilting Procedure
- 80-259 Heater/Air Conditioner Operation & Service

FRAME & ATTACHMENTS

SECTION 8

- Tailpost Installation - See Section 3-4

ACCESSORIES

SECTION 9

- 80-125 Fire Suppression System Service

MAINTENANCE & LUBRICATION

SECTION 10

- 80-229 Maintenance & Lubrication - General
- 0025 Initial Lubrication
- 80-24 Maintenance Check, Daily
- 80-25 Maintenance Check, 50, 250 & 500 Hrs.
- 80-26 Maintenance Check, 1000 & 2000 Hrs.
- L-90 Maintenance & Lubrication (Ref)
- 80-212 Systems Capacities