

**MASTER CHECK SHEET
PARTS BOOK INDEX**

PAGE: 1 of 5

DATE: 2-15-89

MODEL: L - 90

REVISED: 1-31-91

SERIAL NO: 039294

GENERAL INFORMATION**SECTION 1**

80-35 Master Check Sheet
80-7A How to use your Master Check Sheet

800081 Parts Ordering Procedure
533685 Quick Reference Filters & Belts, L-90 /039294
Structure Nomenclature
Decal Locations

POWER UNIT**SECTION 2**

2-1 **Engine**
564885 Power Unit
226062 Engine Specifications, CUMMINS NTA 855-C335 BC3 S/N 1156525

Engine Parts Catalog (3884235)

2-2 **Controls**

Engine Controls - See Section 7-2

Audiovisual Engine Protection System - See Section 6-1

2-3 **Lubrication**
556263 Lube Oil System - Bypass Filter

2-4 **Fuel**
541761 Fuel System

Fuel Filter - Engine Parts Catalog - See Section 2-1

2-5 **Air Intake & Exhaust**
562376 Air Intake System
217443 Air Cleaner
561607 Exhaust System

Exhaust Blankets - See Exhaust System

2-6 **Cooling**

Radiator & Shroud Installation - See Power Unit, Section 2-1
558405 Radiator & Shroud Asm
230479 Radiator

2-7 **Miscellaneous**
526723 Cold Start (Quick Start)

DRIVETRAIN**SECTION 3**

3-1 **General**
564996 Drivetrain Installation

DRIVETRAIN (Continued)**SECTION 3**

3-2	Transmission & Converter
-----	Converter Installation - See Section 2-1
226974	Converter, S/N HUSA 26723
W10659	Transmission Installation
226930	Transmission, S/N HUSA 26558
564943	Transmission Circuit
219271	Transmission Filter
-----	Transmission Shift Controls - See Section 7-2
-----	Transmission Air Cylinder - See Section 4-5
3-3	Drivelines
-----	Driveline Installation - See Section 3-1
530480	Converter/Transmission Driveline
528756	Transmission/Axle Driveline
3-4	Axles
547355	Drive Axle
544897	Tailpost (Rear Axle)
3-5	Wheels & Tires
547331	Front Wheel (Drive)
511427	Rear Wheel (Steer)
-----	Front Tires - 33.5 x 33 44PR L-3 LDNDLCM
-----	Rear Tires - 23.5 x 25 20PR L-3

AIR & BRAKE SYSTEMS**SECTION 4**

4-1	Systems
565165	Air System - Vehicle
565968	Air System - Implement
550154	Hydraulic Brake System
4-2	Modules
-----	Control Panel, LH - See Air System Implement, Section 4-1
-----	Control Panel, RH - See Air System Implement, Section 4-1
4-3	Supply Components
226349	Air Dryer
217734	Expello Valve

DATE: 2-15-89
REVISED: 1-31-91**AIR & BRAKE SYSTEMS (Continued)****SECTION 4**

4-4	Control Components
201358	Regulator Valve
216615	Relay Valve
201352	Holdback Valve
211315	Relay Valve
214161	Relay Valve
216285	Relay Valve
216808	Relay Valve
214127	Rotary Valve
215085	Solenoid Valve
211369	Treadle Valve
218928	Brake Valve
227984	Remote Control Valve
207272	Push Button Valve
208707	Push Button Valve
-----	Control Valve Assembly, HD/KO - See Air System Implement, Section 4-1
4-5	Actuator Components
536683	Transmission Control Air Cylinder
545336	Declutch Air Cylinder
219109	Implement Air Cylinder, Holddown & Kickoff
219110	Implement Air Cylinder, Hoist & Tilt
220267	Brake Actuator Assembly
222010	Brake Air Chamber, Service
217201	Brake Air Chamber, Parking
222331	Master Cylinder, Service Brake
-----	Brake Caliper - See Section 3-4
561614	Parking Brake Installation
4-6	Miscellaneous
207906	Air Horn
509574	Air Hose Kit

HYDRAULIC SYSTEM**SECTION 5**

5-1	Systems & Circuits
564628	Hydraulic System - Steering
542784	Hydraulic System - Hoist & Tilt
542784-1	Hoist Cylinder Plumbing
542784-2	Tilt Cylinder Plumbing
542784-3	Valve to Tank Plumbing
564627	Hydraulic System - Holddown & Kickoff
563278	Boom Plumbingc
563297	Carriage Hydraulics
5-2	Pumps
226539	Steering
226540	Holddown & Kickoff, LH & RH

HYDRAULIC SYSTEM (Continued)**SECTION 5**

5-3	Valves
565914	Valve Module
224731	Steering Control Unit (Pilot)
226211	Steering Valve
225151	Hoist & Tilt Valve
230669	Holddown/Kickoff Valve, LH
565604	Holddown/Kickoff Valve, RH
5-4	Cylinders
800089	Hydraulic Cylinder Locations
505619	Steering Cylinder
557499	Hoist Cylinder
538258	Tilt Cylinder
526164	Holddown Cylinder
526154	Kickoff Cylinder
5-5	Filters
228201	High Pressure Filter (100 GPM)
210092	Return Filter, Hoist & Tilt
509413	Return Strainer (In-Tank)
-----	Transmission Filter - See Section 3-2
5-6	Miscellaneous
-----	Hydraulic Tank Heater - See Section 9-1
537587	Hydraulic Tube Coupling
80-60	O-Ring Guide

ELECTRICAL SYSTEM**SECTION 6**

6-1	Systems & Circuits
560361	Audiovisual Engine Protection System
539396	Reverse Alarm Circuit
566261	Neutral Start Circuit
6-2	Components
560367	Cowl Wiring
560363	Chassis Wiring (Ref)
224207	Alternator
-----	Instrument Panel - SEE SECTION 7-2
560246	Instrument Panel Wiring
560191	Cowl Terminal Board
560085	Junction Box
-----	Battery Box - See Section 8-2
800004	Lighting Components
800008	Cab Warning Light

**MASTER CHECK SHEET
PARTS BOOK INDEX**

PAGE: 5 of 5
MODEL: L - 90
SERIAL NO: 039294

DATE: 2-15-89
REVISED: 1-31-91

CAB & COWL

SECTION 7

- 7-1 Basic Structure**
- 565450 Cab Assembly
- 562569 Cowl Assembly
- 800006 Cowl Installation Hardware
- 559644 Door Assembly, LH
- 559643 Door Assembly, RH
- 559647 Door Latch, LH
- 559646 Door Latch, RH
- 554939 Cab & Cowl Insulation

- 503052 → **7-2**
- 224174 → 564625
- 800005
- 211144

- Instruments & Controls**
- Engine & Transmission Controls
- Steering Wheel Components
- Steering Column

INSTRUMENT PANEL

Accelerator Pedal

- 7-3 Miscellaneous**
- 562407 Heater/Air Conditioner Installation
- 218869 Heater/Air Conditioner Assembly
- 550803 Air Conditioner Condenser Installation
- 214971 Cab Pressurizer
- 800007 Defroster
- 565443 Windshield Wipers, Front & Rear
- 553905 Seat Suspension
- 220900 Seat Assembly

FRAME & ATTACHMENTS

SECTION 8

- 8-1 Frame & Attachments**
- 558676 Boom Assembly
- 561058 Carriage Assembly
- Tallpost - See Section 3-4
- 800098 Pin & Bushing Composite
- 800097 Miscellaneous Chassis Parts

- 8-2 Miscellaneous**
- 551550 Battery Box

ACCESSORIES & OPTIONS

SECTION 9

- 9-1 Accessories & Options**
- 561627 Fire Suppression System