

GENERAL INFORMATION**SECTION 1**

-----	Master Check Sheet
80-35	How to use your Master Check Sheet
80-103	Start & Stop Procedures
0081	Loctite Application
0130	Capscrew Grades & Torque Values
80-245	Manufacturer's Warranty

POWER UNIT**SECTION 2**

2-1	Engine
-----	Cummins Engine Warranty
-----	Cummins Operation & Maintenance Manual (3379052)
2-2	Controls
-----	Audiovisual Engine Protection System - See Section 6-1
2-3	Lubrication
556263	Lube Oil System - Bypass Filter
2-4	Fuel
541761	Fuel System
2-5	Air Intake & Exhaust
80-45	Air Filter Service
0024	Air Gauge Service
2-6	Cooling
0124	Radiator Fill
80-287	Radiator Service
524881	Deaeration System
2-7	Miscellaneous
80-196	Cold Start (Quick Start) Service

DRIVETRAIN**SECTION 3**

3-1	General
564996	Drivetrain Installation
3-2	Transmission & Converter
-----	CLARK Transmission Service Manual (SM-54)
-----	CLARK Converter Service Manual (SM-8000)
564943	Transmission Circuit
0017	Transmission Breather Maintenance
-----	Transmission Filter Service - See Transmission Manual

DATE: 2-15-89

MODEL: L - 90

REVISED: 1-31-91

SERIAL NO: 039294

DRIVETRAIN (Continued)**SECTION 3**

3-3	Drivelines
0054	Driveline Installation & Lube
0182	Driveline Torque Settings
3-4	Axles
80-243	Axle Installation
-----	<i>U/L</i> CLARK Axle Service, 85,000 Series (DA-850)
80-119	Tailpost Installation
3-5	Wheels & Tires
0179	Wheel & Tire Maintenance
0183	Rim & Tire Safety
80-67	Tire Pressures

AIR & BRAKE SYSTEMS**SECTION 4**

4-1	Systems
565165	Air System - Vehicle
565968	Air System - Implement
550154	Hydraulic Brake System
4-2	Modules
4-3	Supply Components
80-369	Air Dryer Service
80-194	Expello Valve Service
4-4	Control Components
4-5	Actuator Components
80-174	Maxi Brake Operation
80-227	Disc Brake Service
80-258	Air Chamber Service
80-263	Master Cylinder Service
4-6	Miscellaneous
80-305	Basic Declutch Diagram
0154	Declutch Trouble Shooting

1 word

HYDRAULIC SYSTEM**SECTION 5**

5-1	Systems & Circuits
563247	ANSI Hydraulic Schematic
-----	Lumberjack Power Beyond System Diagram
564628	Hydraulic System - Steering
542784	Hydraulic System - Hoist & Tilt
564627	Hydraulic System - Holddown & Kickoff
0007 → 0040	Flushing Systems
80-187	Troubleshooting Hydraulic Systems - LUMBERJACK
130-8	Hydraulic Pressure Settings
80-336	Hydraulic Pressure Check Points

5-2	Pumps
80-286	Holddown/Kickoff & Steering Pump Service
0079	Hydraulic Pump Failures

5-3	Valves
80-251	Steering Control Unit Service
80-252	Steering Valve Service
80-280	Hoist & Tilt Valve Service
80-271	Holddown & Kickoff Valve Service

5-4	Cylinders
80-44	Cylinder Service

5-5	Filters
80-244	High Pressure Filter Service
0137	Return Filter Service
-----	Transmission Filter - See Section 3-2

ELECTRICAL SYSTEM**SECTION 6**

6-1	Systems & Circuits
560177	Electrical System Schematic (Ref)
560361	Audiovisual Engine Protection System
539396	Reverse Alarm Circuit
555269	Neutral Start Circuit
6-2	Components
80-92	Battery Maintenance
0161	Alternator Servicing Precautions
80-238	Alternator Service
80-140	Volt Guard Operation
563052	Instrument Panel
560246	Instrument Panel Wiring
80-180	Tachometer Service
80-333	Audiovisual Engine Protection System Maintenance

CAB & COWL

SECTION 7

- 7-1 **Basic Structure**
0197 Cab Tilting Procedure
- 7-2 **Instruments & Controls**
----- Instrument Panel - See Section 6-2
- 7-3 **Miscellaneous**
80-259 Heater/Air Conditioner Operation & Service

FRAME & ATTACHMENTS

SECTION 8

- 8-1 **Frame & Attachments**
----- Tailpost Installation - See Section 3-4

ACCESSORIES & OPTIONS

SECTION 9

- 9-1 **Accessories & Options**
80-125 Fire Suppression System Service

MAINTENANCE & LUBRICATION

SECTION 10

- 10-1 **Maintenance & Lubrication**
80-229 Maintenance & Lubrication
0025 Initial Lubrication
80-24 Maintenance Check, Daily
80-25 Maintenance Check, 50, 250 & 500 Hours
80-26 Maintenance Check, 1000 & 2000 Hours
----- L-90 Maintenance & Lubrication (Ref)
80-212 System Capacities