

MASTER CHECK SHEET

wagner SERVICE BOOK INDEX

1 of 4

PAGE _____

L-90

MODEL _____

039295

DATE 5-15-89

SERIAL NO. _____

REVISED 8-11-89

*Back Order

GENERAL INFORMATION

SECTION 1

----- Master Check Sheet
80-35 How to use your Master Check Sheet
80-103 Start & Stop Procedures
0081 Loctite Application
0130 Capscrew Grades & Torque Values
80-245 Manufacturer's Warranty

POWER UNIT

SECTION 2

2-1 **Engine**
----- CUMMINS Engine Warranty
----- Cummins Operation & Maintenance Manual (3379052)

2-2 **Controls**
----- Audiovisual Engine Protection System - See Section 6-1

2-3 **Lubrication**
556263 Lube Oil System - Bypass Filter

2-4 **Fuel System**
541761 Fuel System

2-5 **Air Intake & Exhaust**
80-45 Air Filter Service
0024 Service Gauge Operation

2-6 **Cooling**
0124 Radiator Fill
80-287 Radiator Service
524881 Deaeration System

2-7 **Miscellaneous**
80-196 Cold Start (Quick Start) Operation & Service

MASTER CHECK SHEET

wagner SERVICE BOOK INDEX

DATE 5-15-89

REVISED 8-11-89

PAGE 2 of 4

MODEL L-90

SERIAL NO. 039295

DRIVETRAIN

SECTION 3

- 3-1 General**
548182 Drivetrain Installation (Ref)
- 3-2 Transmission/Converter**
----- ALLISON Transmission Service Manual (SA-1547-B)
542380 Transmission Circuit
0017 Transmission Breather Maintenance
----- Transmission Filter Service - See Trans. Manual
- 3-3 Drivelines**
0054 Driveline Installation & Lube
0182 Driveline Torque Settings
- 3-4 Axles**
80-243 Axle Installation
----- CLARK Axle Service, 85,000 Series (DA-850)
80-119 Tailpost Installation
- 3-5 Wheels & Tires**
0179 Wheel & Tire Maintenance
0183 Rim & Tire Safety
80-67 Tire Pressures

AIR & BRAKE SYSTEM

SECTION 4

- 4-1 Systems**
561534 Air System - Failsafe Brake
542791 Air System - Implement Controls
542690 Air System - Auxiliary Holddown
550154 Hydraulic Brake System
- 4-2 Modules**
- 4-3 Supply Components**
80-242 Air Dryer Service
80-194 Expello Valve Service
- 4-4 Control Components**
- 4-5 Actuator Components**
80-174 Maxi Brake Operation
80-227 Disc Brake Service
80-258 Air Chamber Service
80-263 Master Cylinder Service
- 4-6 Miscellaneous**
80-305 Basic Declutch System Diagram
0154 Declutch System Troubleshooting

MASTER CHECK SHEET

wagner SERVICE BOOK INDEX

PAGE 3 of 4
MODEL L-90
SERIAL NO. 039295

DATE 5-15-89
REVISED 8-11-89

*Back Order

HYDRAULIC SYSTEM

SECTION 5

- 5-1 Systems/Circuits**
 - 563247 ANSI Hydraulic Schematic (Ref)
 - Lumberjack Power Beyond System - Color Coded Schematic
 - 566612 563929 Hydraulic System - Steering
 - *566611 Hydraulic System - Hoist & Tilt
 - 566632 563273 Hydraulic System - Holddown & Kickoff
 - 561689 Hydraulic System - Auxiliary Holddown
 - 0040 Flushing Systems
 - 80-187 Troubleshooting Hydraulic Systems
 - 130-8 Systems Pressures
 - 80-336 Hydraulic Pressure Check Points
- 5-2 Pumps**
 - Steering Pump Service (100-S7)
 - Holddown & Kickoff Pump Service (HS-19)
 - 80-197 Commercial Pump Rotation
 - 0079 Hydraulic Pump Failures
- 5-3 Valves**
 - Steering Valve Service (HGB 106)
 - 80-280 Hoist & Tilt Valve Service
 - Holddown & Kickoff Valve Service (HU1881-1 & HU1811)
- 5-4 Cylinders**
 - 80-44 Cylinder Service
- 5-5 Filters**
 - 80-244 High Pressure Filter Service
 - 0137 Return Filter Service
 - Transmission Filter - See Section 3-2
- 5-6 Miscellaneous**

ELECTRICAL SYSTEM

SECTION 6

- 6-1 Systems/Circuits**
 - 561509 Electrical System Schematic
 - 558500 Audiovisual Engine Protection System
 - 539396 Reverse Alarm Circuit
 - 555269 Neutral Start Circuit
- 6-2 Components**
 - 80-92 Battery Maintenance
 - 0161 Alternator Servicing Precautions
 - 80-140 Volt Guard Operation

(Continued)

MASTER CHECK SHEET

wagner SERVICE BOOK INDEX

4 of 4

PAGE _____

L-90

MODEL _____

039295

SERIAL NO. _____

DATE 5-15-89

REVISED 8-11-89

ELECTRICAL SYSTEM - (Continued)

SECTION 6

563052 Instrument Panel
560191 Instrument Panel Wiring
80-180 Tachometer Service
80-333 Audiovisual Engine Protection System Maintenance

CAB & COWL

SECTION 7

0197 Cab Tilting Procedure
80-259 Heater/Air Conditioner Operation & Service

FRAME & ATTACHMENTS

SECTION 8

----- Tailpost Installation - See Section 3-4

ACCESSORIES & OPTIONS

SECTION 9

80-125 Fire Suppression System Service

MAINTENANCE & LUBRICATION

SECTION 10

80-229 Maintenance & Lubrication - General
0025 Initial Lubrication
80-24 Maintenance Check, Daily
80-25 Maintenance Check, 50, 250 & 500 Hrs.
80-26 Maintenance Check, 1000 & 2000 Hrs.
----- L-90 Maintenance & Lubrication
80-212 Systems Capacities