

DATE: 7-17-89
REVISED: 1-31-91**GENERAL INFORMATION****SECTION 1**

----- Master Check Sheet
80-35 How to use your Master Check Sheet
80-103 Start & Stop Procedures
0081 Loctite Application
0130 Capscrew Grades & Torque Values
80-245 Manufacturer's Warranty

POWER UNIT**SECTION 2**

2-1 Engine
----- Cummins Engine Warranty
----- Cummins Operation & Maintenance Manual (3379052)

2-2 Controls
----- Audiovisual Engine Protection System - See Section 6-1

2-3 Lubrication
556263 Lube Oil System - Bypass Filter

2-4 Fuel
541761 Fuel System

2-5 Air Intake & Exhaust
80-45 Air Filter Service
0024 Air Gauge Service

2-6 Cooling
0124 Radiator Fill
80-287 Radiator Service

2-7 Miscellaneous
80-196 Cold Start (Quick Start) Service

DRIVETRAIN**SECTION 3**

3-1 General
548182 Drivetrain Installation

3-2 Transmission & Converter
----- ALLISON Transmission Service Manual (SA-1547-B)
542380 Transmission Circuit
0017 Transmission Breather Maintenance
----- Transmission Filter Service - See Transmission Manual

DATE: 7-17-89
REVISED: 1-31-91

DRIVETRAIN (Continued)

SECTION 3

- 3-3 Drivelines**
 - 0054 Driveline Installation & Lube
 - 0182 Driveline Torque Settings

- 3-4 Axles**
 - 80-243 Axle Installation
 - CLARK Axle Service, 85,000 Series (DA-850)
 - 80-119 Tailpost Installation

- 3-5 Wheels & Tires**
 - 0179 Wheel & Tire Maintenance
 - 0183 Rim & Tire Safety
 - 80-67 Tire Pressures

AIR & BRAKE SYSTEMS

SECTION 4

- 4-1 Systems**
 - 561534 Air System - Vehicle
 - 562505 Air System - Implement
 - 550154 Hydraulic Brake System

- 4-2 Modules**

- 4-3 Supply Components**
 - 80-242 Air Dryer Service
 - 80-194 Expello Valve Service

- 4-4 Control Components**

- 4-5 Actuator Components**
 - 80-174 Maxi Brake Operation
 - 80-227 Disc Brake Service
 - 80-258 Air Chamber Service
 - 80-263 Master Cylinder Service

- 4-6 Miscellaneous**
 - 80-305 Basic Declutch Diagram
 - 0154 Declutch Trouble Shooting

1 - word

HYDRAULIC SYSTEM**SECTION 5**

5-1	Systems & Circuits
563247	ANSI Hydraulic Schematic
-----	Lumberjack Power Beyond System Diagram
566680	Hydraulic System - Steering
542784	Hydraulic System - Hoist & Tilt (Ref)
563273	Hydraulic System - Holddown & Kickoff
565016	Hydraulic System - Reach
0040	Flushing Systems
80-187	Troubleshooting Hydraulic Systems - LUMBERJACK
130-8	Hydraulic Pressure Settings
80-336	Hydraulic Pressure Check Points

0007 →

← TROUBLESHOOTING HYDRAULIC SYSTEMS - GENERAL

5-2	Pumps
-----	Holddown/Kickoff Pump Service (HS-19)
80-286	Steering Pump Service
0079	Hydraulic Pump Failures

5-3	Valves
80-251	Steering Control Unit Service
80-252	Steering Valve Service
80-280	Hoist & Tilt Valve Service
80-271	Holddown & Kickoff Valve Service

5-4	Cylinders
80-44	Cylinder Service

5-5	Filters
80-244	High Pressure Filter Service
0137	Return Filter Service
-----	Transmission Filter - See Section 3-2

ELECTRICAL SYSTEM**SECTION 6**

6-1	Systems & Circuits
561509	Electrical System
550555	Audiovisual Engine Protection System
539396	Reverse Alarm Circuit
6-2	Components
566261	Neutral Start Installation
80-92	Battery Maintenance
0161	Alternator Servicing Precautions
80-140	Volt Guard Operation
560052	Instrument Panel
560246	Instrument Panel Wiring
80-180	Tachometer Service
80-333	Audiovisual Engine Protection System Maintenance

DATE: 7-17-89
REVISED: 1-31-91**CAB & COWL****SECTION 7**

- 7-1 **Basic Structure**
0197 Cab Tilting Procedure
- 7-2 **Instruments & Controls**
Instrument Panel - See Section 6-2
- 7-3 **Miscellaneous**
80-259 Heater/Air Conditioner Operation & Service

FRAME & ATTACHMENTS**SECTION 8**

- 8-1 **Frame & Attachments**
----- Tailpost Installation - See Section 3-4

ACCESSORIES & OPTIONS**SECTION 9**

- 9-1 **Accessories & Options**
80-125 Fire Suppression System Service

MAINTENANCE & LUBRICATION**SECTION 10**

- 10-1 **Maintenance & Lubrication**
80-229 Maintenance & Lubrication
0025 Initial Lubrication
80-24 Maintenance Check, Daily
80-25 Maintenance Check, 50, 250 & 500 Hours
80-26 Maintenance Check, 1000 & 2000 Hours
----- L-90 Maintenance & Lubrication (Ref)
80-212 System Capacities