

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

DATE 10-12-89

REVISED \_\_\_\_\_

PAGE 1 of 4

MODEL L-90

SERIAL NO. 039297

\*Back Order

## GENERAL INFORMATION

### SECTION 1

----- Master Check Sheet  
80-35 How to use your Master Check Sheet  
80-103 Start & Stop Procedures  
0081 Loctite Application  
0130 Capscrew Grades & Torque Values  
80-245 Manufacturer's Warranty

## POWER UNIT

### SECTION 2

2-1 **Engine**  
----- Cummins Engine Warranty  
----- CUMMINS Operation & Maintenance Manual (3379052)

2-2 **Controls**  
----- Audiovisual Engine Protection System-See Section 6-1

2-3 **Lubrication**  
556263 Lube Oil System - Bypass Filter

2-4 **Fuel System**  
541761 Fuel System

2-5 **Air Intake & Exhaust**  
80-45 Air Filter Service  
0024 Service Gauge Operation

2-6 **Cooling**  
0124 Radiator Fill  
80-287 Radiator Service  
524881 Deaeration System

2-7 **Miscellaneous**  
80-196 Cold Start Operation

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

PAGE 2 of 4  
MODEL L-90  
SERIAL NO. 039297

DATE 10-12-89  
REVISED \_\_\_\_\_

## DRIVETRAIN

## SECTION 3

- 3-1 General**  
564996 Drivetrain Installation
- 3-2 Transmission/Converter**  
----- CLARK Transmission Service Manual (SM-54)  
----- CLARK Converter Service Manual (SM-8000)  
564943 Transmission Circuit  
0017 Transmission Breather Maintenance  
----- Transmission Filter Service See Trans. Manual
- 3-3 Drivelines**  
0054 Driveline Installation & Lube  
0182 Driveline Torque Settings
- 3-4 Axles**  
80-243 Axle Installation  
----- CLARK Axle Service, 85,000 Series (DA-850)  
80-119 Tailpost Installation
- 3-5 Wheels & Tires**  
0179 Wheel & Tire Maintenance  
0183 Rim & Tire Safety  
80-67 Tire Pressures

## AIR & BRAKE SYSTEM

## SECTION 4

- 4-1 Systems**  
\*565165 Air System - Failsafe Brake  
562690 Air System - Implement Controls  
550154 Hydraulic Brake System
- 4-2 Modules**  
558554 Air Valve Module
- 4-3 Supply Components**  
80-369 Air Dryer Service  
80-194 Expello Valve Service

(Continued)

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

PAGE 3 of 4

MODEL L-90

DATE 10-12-89

SERIAL NO. 039297

REVISED \_\_\_\_\_

## AIR & BRAKE SYSTEM (Continued)

SECTION 4

### 4-4 Control Components

### 4-5 Actuator Components

80-174 Maxi Brake Operation  
80-227 Disc Brake Service  
80-258 Air Chamber Service  
80-263 Master Cylinder Service

### 4-6 Miscellaneous

80-305 Basic Declutch Diagram  
0154 Declutch System Troubleshooting

## HYDRAULIC SECTION

SECTION 5

### 5-1 Systems/Circuits

563247 ANSI Hydraulic Schematic (Ref)  
----- Lumberjack Power Beyond System - Color Coded Schematic  
\*566680 Hydraulic System - Steering  
\*566611 Hydraulic System - Hoist & Tilt  
567865 ~~564627~~ Hydraulic System - Holddown & Kickoff CHASSIS HYDRAULICS  
0040 Flushing Systems  
80-187 Troubleshooting Hydraulic Systems  
130-8 Systems Pressures  
80-336 Hydraulic Pressure Check Points

### 5-2 Pumps

80-286 HD/KO & Steering Pump Service  
0079 Hydraulic Pump Failures

### 5-3 Valves

80-251 Steering Control Unit Service  
80-252 Steering Valve Service  
80-280 Hoist & Tilt Control Valve Service  
----- Holddown & Kickoff Valve Service (HU 1881-1 & HU 1811)

### 5-4 Cylinders

80-44 Cylinder Service

### 5-5 Filters

80-244 High Pressure Filter Service  
0137 Return Filter Service  
----- Transmission Filter - See Section 3-2

### 5-6 Miscellaneous

# MASTER CHECK SHEET

**wagner** SERVICE BOOK INDEX

4 of 4

PAGE \_\_\_\_\_

MODEL L-90

DATE 10-12-89

SERIAL NO. 039297

REVISED \_\_\_\_\_

## ELECTRICAL SYSTEM

## SECTION 6

### 6-1

#### Systems/Circuits

- \* Electrical System Schematic
- 550555 Audiovisual Engine Protection System
- 539396 Reverse Alarm Circuit
- 555269 Neutral Start Circuit

### 6-2

#### Components

- 80-92 Battery Maintenance
- 0161 Alternator Servicing Precautions
- 80-238 Alternator Service
- 80-140 Volt Guard Operation
- 563052 Instrument Panel
- 560246 Instrument Panel Wiring
- 80-180 Tachometer Service
- 80-333 Audiovisual Engine Protection System Maintenance

## CAB & COWL

## SECTION 7

- 0197 Cab Tilting Procedure
- 80-259 Heater/Air Conditioner Operation & Service

## FRAME & ATTACHMENTS

## SECTION 8

- Tailpost Installation - See Section 3-4

## ACCESSORIES

## SECTION 9

## MAINTENANCE & LUBRICATION

## SECTION 10

- 0025 Initial Lubrication
- 80-229 Maintenance & Lubrication - General
- 80-24 Maintenance Check, Daily
- 80-25 Maintenance Check, 50, 250 & 500 Hrs.
- 80-26 Maintenance Check, 1000 & 2000 Hrs.
- L-90 Maintenance & Lubrication (Ref)
- 80-212 Systems Capacities