

**MASTER CHECK SHEET
SERVICE MANUAL INDEX**

PAGE: 1 of 4

DATE: 8-30-91

MODEL: L - 90

REVISED:

SERIAL NO: 039298

GENERAL INFORMATION**SECTION 1**

-----	Master Check Sheet
80-35	How to use your Master Check Sheet
80-103	Start & Stop Procedures
0081	Loctite Application
0130	Capscrew Grades & Torque Values
80-245	Manufacturer's Warranty

POWER UNIT**SECTION 2**

2-1	Engine
-----	Cummins Engine Warranty
-----	Cummins Operation & Maintenance Manual (3379052)
2-2	Controls
-----	Audiovisual Engine Protection System - See Section 6-1
2-3	Lubrication
556263	Lube Oil System - Bypass Filter
2-4	Fuel
541761	Fuel System
2-5	Air Intake & Exhaust
80-45	Air Filter Service
0024	Air Gauge Service
2-6	Cooling
0124	Radiator Fill
80-287	Radiator Service
524881	Deaeration System
2-7	Miscellaneous
80-196	Cold Start (Quick Start) Service

DRIVETRAIN**SECTION 3**

3-1	General
545182	Drivetrain Installation
3-2	Transmission & Converter
-----	Clark Transmission Service Manual (SM-8000)
-----	Clark Converter Service Manual (SM-8000)
569153	Transmission Circuit
0017	Transmission Breather Maintenance
-----	Transmission Filter Service - See Transmission Manual

DRIVETRAIN (Continued)**SECTION 3**

3-3	Drivelines
0054	Driveline Installation & Lube
0182	Driveline Torque Settings
3-4	Axles
80-243	Axle Installation
-----	Clark Axle Service, 85,000 Series (DA-850)
80-119	Tailpost Installation
3-5	Wheels & Tires
0179	Wheel & Tire Maintenance
0183	Rim & Tire Safety
80-67	Tire Pressures

AIR & BRAKE SYSTEMS**SECTION 4**

4-1	Systems
561534	Air System - Vehicle
542791	Air System - Implement
550154	Hydraulic Brake System
4-2	Modules
4-3	Supply Components
80-369	Air Dryer Service
80-194	Expello Valve Service
4-4	Control Components
4-5	Actuator Components
80-174	Maxi Brake Operation
80-227	Disc Brake Service
80-258	Air Chamber Service
80-263	Master Cylinder Service
4-6	Miscellaneous
80-305	Basic Declutch Diagram
0154	Declutch Troubleshooting

HYDRAULIC SYSTEM**SECTION 5**

5-1	Systems & Circuits
563247	ANSI Hydraulic Schematic
-----	Lumberjack Power Beyond System Diagram
566612	Hydraulic System - Steering
566611	Hydraulic System - Hoist & Tilt
* 569060	Chassis Hydraulics - Holddown & Kickoff
0040	Flushing Systems
0087	Troubleshooting Hydraulic Systems - General
80-187	Troubleshooting Hydraulic Systems - Lumberjack
130-8L	Hydraulic Pressure Settings
80-336	Hydraulic Pressure Check Points
5-2	Pumps
-----	Steering Pump Service (100-S7)
-----	Holddown & Kickoff Pump Service (HS-19)
80-197	Commercial Pump Rotation
0079	Hydraulic Pump Failures
5-3	Valves
-----	Steering Valve Service (HGB-106)
80-280	Hoist & Tilt Valve Service
80-271	Holddown & Kickoff Valve Service
5-4	Cylinders
80-44	Cylinder Service
5-5	Filters
80-244	High Pressure Filter Service
0137	Return Filter Service
-----	Transmission Filter - See Section 3-2

ELECTRICAL SYSTEM**SECTION 6**

6-1	Systems & Circuits
561509	Electrical System Schematic
558500	Audiovisual Engine Protection System
539396	Reverse Alarm Circuit
555269	Neutral Start Circuit
6-2	Components
80-92	Battery Maintenance
0161	Alternator Servicing Precautions
80-140	Volt Guard Operation
560191	Instrument Panel Wiring
80-180	Tachometer Service
80-333	Audiovisual Engine Protection System Maintenance

**MASTER CHECK SHEET
SERVICE MANUAL INDEX**

PAGE: 4 of 4

DATE: 8-30-91

MODEL: L - 90

REVISED:

SERIAL NO: 039298

CAB & COWL

SECTION 7

- | | |
|------------|--|
| 7-1 | Basic Structure |
| 0197 | Cab Tilting Procedure |
| 7-2 | Instruments & Controls |
| 563052 | Instrument Panel |
| 7-3 | Miscellaneous |
| 80-259 | Heater/Air Conditioner Operation & Service |

FRAME & ATTACHMENTS

SECTION 8

- | | |
|------------|---|
| 8-1 | Frame & Attachments |
| ----- | Tailpost Installation - See Section 3-4 |

ACCESSORIES & OPTIONS

SECTION 9

- | | |
|------------|----------------------------------|
| 9-1 | Accessories & Options |
| 80-125 | Fire Suppression System Service |

MAINTENANCE & LUBRICATION

SECTION 10

- | | |
|-------------|--|
| 10-1 | Maintenance & Lubrication |
| 0025 | Initial Lubrication |
| 80-229 | Maintenance & Lubrication |
| 80-24 | Maintenance Check, Daily |
| 80-25 | Maintenance Check, 50, 250 & 500 Hours |
| 80-26 | Maintenance Check, 1000 & 2000 Hours |
| ----- | L-90 Maintenance & Lubrication (Ref) |
| 80-212 | System Capacities |