

DATE: 01 SEP 92
REVISED: 20 AUG 96PAGE: 1 of 6
MODEL: L90S
SERIAL NO: 039299**GENERAL INFORMATION****SECTION 1**

80-35 Master Check Sheet
80-7A How to use your Master Check Sheet
800081 Parts Ordering Procedure
533685 Structure Nomenclature
800137 Decal Locations
Alphabetical Index

POWER UNIT**SECTION 2**

2-1 Engine
570102 Power Unit
226062 Engine Specifications, Cummins NTA 855-C335-BC3 S/N 16659708
----- Engine Parts Catalog (3884235)

2-2 Controls
----- Engine Controls - See Section 7-2
----- Audiovisual Engine Protection System - See Section 6-1

2-3 Lubrication
556263 Lube Oil System - Bypass Filter
566204 Dipstick Installation

2-4 Fuel
541761 Fuel System
----- Fuel Filter - Engine Parts Catalog - See Section 2-1

2-5 Air Intake & Exhaust
570041 Air Intake System
217443 Air Cleaner
561607 Exhaust System

2-6 Cooling
570080 Radiator & Shroud Asm
230479 Radiator

2-7 Miscellaneous
526723 Cold Start (Quick Start)
564927 Compressor Installation

DRIVETRAIN

SECTION 3

3-1	General
W10633	Drivetrain Installation
3-2	Transmission & Converter
-----	Converter Installation - See Section 3-1
235290	Converter S/N MUSA 58279
567423	Transmission Installation
226930	Transmission S/N MUSA 60367
570141	Transmission Circuit
219271	Transmission Filter
-----	Transmission Shift Controls - See Section 7-2
-----	Transmission Air Cylinder - See Section 4-5
3-3	Drivelines
-----	Driveline Installation - See Section 3-1
530480	Converter/Transmission Driveline
528756	Transmission/Axle Driveline
3-4	Axles
547355	Drive Axle S/N
544897	Tailpost (Rear Axle)
561614	Parking Brake Installation
3-5	Wheels & Tires
547331	Front Wheel (Drive)
511427	Rear Wheel (Steer)
-----	Front Tires - 33.5 x 33 - 44PR L-3 LDNDLCM
-----	Rear Tires - 23.5 x 25 - 20PR L-3

AIR & BRAKE SYSTEMS

SECTION 4

4-1	Systems
570020	Air System - Vehicle
565968	Air System - Implement
550154	Hydraulic Brake System
4-2	Modules
-----	Control Panel, LH - See Air System Implement, Section 4-1
-----	Control Panel, RH - See Air System Implement, Section 4-1
4-3	Supply Components
224794	Air Dryer
217734	Expello Valve

AIR & BRAKE SYSTEMS (Continued)**SECTION 4**

4-4	Control Components
201358	Regulator Valve
216615	Relay Valve
201352	Holdback Valve
214161	Relay Valve
216285	Relay Valve
214127	Rotary Valve
215085	Solenoid Valve
211369	Treadle Valve
218928	Brake Valve
227984	Remote Control Valve
207272	Push Button Valve
208707	Push Button Valve
215115	Control Valve Assembly

4-5	Actuator Components
536683	Transmission Control Air Cylinder
219109	Implement Air Cylinder, Holddown & Kickoff
219110	Implement Air Cylinder, Hoist & Tilt
220326	Air Cylinder
220267	Brake Actuator Assembly
222010	Brake Air Chamber, Service
217201	Brake Air Chamber, Parking
222331	Master Cylinder, Service Brake
-----	Brake Caliper - See Section 3-4

4-6	Miscellaneous
207906	Air Horn
509574	Air Hose Kit

HYDRAULIC SYSTEM**SECTION 5**

5-1	Systems & Circuits
569860	Hydraulic System - Steering
566611	Hydraulic System - Hoist & Tilt
567865	Chassis Hydraulics - Holddown & Kickoff
567085	Hydraulic System - Cooler Fan
569846	Boom Plumbing
563297	Carriage Hydraulics

DATE: 01 SEP 92
REVISED: 20 AUG 96PAGE: 4 of 6
MODEL: L90S
SERIAL NO: 039299**HYDRAULIC SYSTEM (Continued)****SECTION 5**

5-2 Pumps
229005 Piggyback Pump, Steering/Fan Motor
227310 Tandem Pump, Holddown & Kickoff, LH & RH

5-3 Valves
568887 Valve Module
234081 Steering Control Unit (Pilot)
234082 Steering Flow Amplifier Valve
225151 Hoist & Tilt Valve
230669 Holddown/Kickoff Valve, LH
565604 Holddown/Kickoff Valve, RH
218007 Relief Valve
236071 Solenoid Valve

5-4 Cylinders
W10670 Steering Cylinder
W10390 Hoist Cylinder
538258 Tilt Cylinder
526164 Holddown Cylinder
526154 Kickoff Cylinder

5-5 Filters
228201 High Pressure Filter (100 GPM)
228200 High Pressure Filter (40 GPM)
210092 Return Filter, Hoist & Tilt
509413 Return Strainer (In-Tank)
----- Transmission Filter - See Section 3-2

5-6 Miscellaneous
228120 Hydraulic Oil Cooler

ELECTRICAL SYSTEM**SECTION 6**

6-1 Systems & Circuits
560361 Audiovisual Engine Protection System
539396 Reverse Alarm Circuit
555269 Neutral Start Circuit

ELECTRICAL SYSTEM (Continued)

SECTION 6

6-2	Components
560367	Cowl Wiring
560363	Chassis Wiring (Ref)
224207	Alternator
-----	Instrument Panel - See Section 7-2
560246	Instrument Panel Wiring
560191	Cowl Terminal Board
560085	Junction Box
-----	Battery Box - See Section 8-2
W10775	Lighting Components
563659	Halogen Light Bar
508262	Cab Warning Light

CAB & COWL

SECTION 7

7-1	Basic Structure
565450	Cab Assembly
570089	Cowl Assembly
559644	Door Assembly, LH
559643	Door Assembly, RH
559647	Door Latch, LH
559646	Door Latch, RH
554939	Cab & Cowl Insulation
552519	Hi Visibility Cab
7-2	Instruments & Controls
563052	Instrument Panel
564625	Vehicle Controls
224174	Accelerator Pedal
211144	Steering Column
7-3	Miscellaneous
569939	Heater/Air Conditioner Installation
235615	Heater/Air Conditioner Assembly
-----	AC Compressor Installation - See Section 2-7
550803	AC Condenser Installation
800007	Defroster
565443	Windshield Wipers, Front & Rear
553905	Seat Suspension
220900	Seat Assembly
560664	Stereo/Cassette



MASTER CHECK SHEET PARTS BOOK INDEX

DATE: 01 SEP 92
REVISED: 20 AUG 96

PAGE: 6 of 6
MODEL: L90S
SERIAL NO: 039299

FRAME & ATTACHMENTS

SECTION 8

8-1	Frame & Attachments
569847	Boom Assembly
561058	Carriage Assembly
-----	Tailpost - See Section 3-4
800097	Miscellaneous Chassis Parts
8-2	Miscellaneous
551550	Battery Box

ACCESSORIES & OPTIONS

SECTION 9

9-1	Accessories & Options
561627	Fire Suppression System

PARTS