

DATE: 9-25-92

MODEL: L - 90

REVISED:

SERIAL NO: 039300

GENERAL INFORMATION**SECTION 1**

-----	Master Check Sheet
80-35	How to use your Master Check Sheet
80-103	Start & Stop Procedures
0081	Loctite Application
0130	Capscrew Grades & Torque Values
80-245	Manufacturer's Warranty

POWER UNIT**SECTION 2**

2-1	Engine
-----	Cummins Engine Warranty
-----	Cummins Operation & Maintenance Manual (3379052)
2-2	Controls
-----	Audiovisual Engine Protection System - See Section 6-1
2-3	Lubrication
556263	Lube Oil System - Bypass Filter
2-4	Fuel
541761	Fuel System
2-5	Air Intake & Exhaust
80-45	Air Filter Service
0024	Air Gauge Service
2-6	Cooling
0124	Radiator Fill
80-287	Radiator Service
524881	Deaeration System
2-7	Miscellaneous
80-196	Cold Start (Quick Start) Service

DRIVETRAIN**SECTION 3**

3-1	General
564996	Drivetrain Installation
3-2	Transmission & Converter
-----	Clark Transmission Service Manual (SM-54)
-----	Clark Converter Service Manual (SM-8000)
570043	Transmission Circuit
0017	Transmission Breather Maintenance
-----	Transmission Filter Service - See Transmission Manual

* backorder

DATE: 9-25-92

MODEL: L - 90

REVISED:

SERIAL NO: 039300

DRIVETRAIN (Continued)

SECTION 3

3-3	Drivelines
0054	Driveline Installation & Lube
0182	Driveline Torque Settings
3-4	Axles
80-243	Axle Installation
-----	Clark Axle Service, 85,000 Series (DA-850)
80-119	Tailpost Installation
3-5	Wheels & Tires
0179	Wheel & Tire Maintenance
0183	Rim & Tire Safety
80-67	Tire Pressures

AIR & BRAKE SYSTEMS

SECTION 4

4-1	Systems
570020	Air System - Vehicle
542791	Air System - Implement
550154	Hydraulic Brake System
4-2	Modules
4-3	Supply Components
80-242	Air Dryer Service
80-194	Expello Valve Service
4-4	Control Components
4-5	Actuator Components
80-174	Maxi Brake Operation
80-227	Disc Brake Service
80-258	Air Chamber Service
80-263	Master Cylinder Service
4-6	Miscellaneous
80-305	Basic Declutch Diagram
0154	Declutch Troubleshooting

* backorder

HYDRAULIC SYSTEM**SECTION 5**

5-1	Systems & Circuits
*	ANSI Hydraulic Schematic
-----	Lumberjack Power Beyond System Diagram
569860	Hydraulic System - Steering
566611	Hydraulic System - Hoist & Tilt
567865	Chassis Hydraulics - Holddown & Kickoff
567085	Hydraulic System - Cooler Fan
0040	Flushing Systems
0087	Troubleshooting Hydraulic Systems - General
80-187	Troubleshooting Hydraulic Systems - Lumberjack
80-421	Danfoss Steering System Operation & Troubleshooting
130-8L	Hydraulic Pressure Settings
80-336	Hydraulic Pressure Check Points
5-2	Pumps
80-286	Holddown & Kickoff Pump Service
80-318	Cooler Fan Pump Service
0079	Hydraulic Pump Failures
5-3	Valves
80-423	Steering Control Unit Service
80-422	Steering Flow Amplifier Valve Service
80-280	Hoist & Tilt Valve Service
80-271	Holddown & Kickoff Valve Service
5-4	Cylinders
80-44	Cylinder Service
5-5	Filters
80-244	High Pressure Filter Service
0137	Return Filter Service
-----	Transmission Filter - See Section 3-2

ELECTRICAL SYSTEM**SECTION 6**

6-1	Systems & Circuits
560177	Electrical System Schematic
560363	Audiovisual Engine Protection System
539396	Reverse Alarm Circuit
555269	Neutral Start Circuit
6-2	Components
80-92	Battery Maintenance
0161	Alternator Servicing Precautions
80-238	Alternator Service
80-140	Volt Guard Operation
560191	Instrument Panel Wiring
80-180	Tachometer Service
80-333	Audiovisual Engine Protection System Maintenance

* backorder

DATE: 9-25-92

MODEL: L - 90

REVISED:

SERIAL NO: 039300

CAB & COWL**SECTION 7**

- 7-1** **Basic Structure**
0197 Cab Tilting Procedure

- 7-2** **Instruments & Controls**
563052 Instrument Panel

- 7-3** **Miscellaneous**
* Heater/Air Conditioner Operation & Service

FRAME & ATTACHMENTS**SECTION 8**

- 8-1** **Frame & Attachments**
----- Tailpost Installation - See Section 3-4

ACCESSORIES & OPTIONS**SECTION 9**

- 9-1** **Accessories & Options**
80-125 Fire Suppression System Service

MAINTENANCE & LUBRICATION**SECTION 10**

- 10-1** **Maintenance & Lubrication**
0025 Initial Lubrication
- 80-229 Maintenance & Lubrication
- 80-24 Maintenance Check, Daily
- 80-25 Maintenance Check, 50, 250 & 500 Hours
- 80-26 Maintenance Check, 1000 & 2000 Hours
- L-90 Maintenance & Lubrication (Ref)
- 80-212 System Capacities

* backorder