

MASTER CHECK SHEET PARTS BOOK INDEX

DATE: 20 OCT 94
REVISED: 20 NOV 95

PAGE: 1 of 6
MODEL: L90S
SERIAL NO: 039301

GENERAL INFORMATION

SECTION 1

----- Master Check Sheet
80-35 How to use your Master Check Sheet
80-7A Parts Ordering Procedure
----- Quick Reference Filters & Belts, L-90 "Standard" w/ Cummins & Clark
800081 Structure Nomenclature
800151 Hydraulic Cylinder with Pin & Bushing Composite
533685 Decal Locations

POWER UNIT

SECTION 2

2-1 Engine
570102 Power Unit
226062 Engine Specifications, Cummins NTA 855-C335 BC3 S/N 11735924
----- Engine Parts Catalog (3884235)

2-2 Controls
----- Engine Controls - See Section 7-2
----- Audiovisual Engine Protection System - See Section 2-1 & 7-2

2-3 Lubrication
556263 Lube Oil System - Bypass Filter
566204 Dipstick Installation

2-4 Fuel
541761 Fuel System
----- Fuel Filter - Engine Parts Catalog - See Section 2-1

2-5 Air Intake & Exhaust
570041 Air Intake System
217443 Air Cleaner
561607 Exhaust System

2-6 Cooling
570080 Radiator & Shroud
230479 Radiator

2-7 Miscellaneous
526723 Cold Start (Quick Start)
572673 A/C Compressor Installation

DRIVETRAIN

SECTION 3

- 3-1** **General**
W10633 Drivetrain Installation

- 3-2** **Transmission & Converter**

235290 Converter Installation - See Section 3-1
567423 Converter
226930 Transmission Installation
570141 Transmission
219271 Transmission Circuit

 Transmission Filter

 Transmission Shift Controls - See Section 7-2

 Transmission Air Cylinder - See Section 4-5

- 3-3** **Drivelines**

530480 Driveline Installation - See Section 3-1
528756 Converter/Transmission Driveline
 Transmission/Axle Driveline

- 3-4** **Axles**
547355 Drive Axle
544897 Tailpost (Rear Axle)
561614 Parking Brake

- 3-5** **Wheels & Tires**
547331 Front Wheel (Drive)
511427 Rear Wheel (Steer)

 Front Tires - 33.5 x 33 - 44PR L-3 LDNDLCM

 Rear Tires - 23.5 x 25 - 20PR L-3

AIR & BRAKE SYSTEMS

SECTION 4

- 4-1** **Systems**
572644 Air System - Vehicle
565968 Air System - Implement
550154 Hydraulic Brake System

- 4-2** **Modules**

 Control Panel, LH - See Air System Implement, Section 4-1
 Control Panel, RH - See Air System Implement, Section 4-1

- 4-3** **Supply Components**
226349 Air Dryer
217734 Expello Valve

AIR & BRAKE SYSTEMS (Continued)

SECTION 4

| | |
|------------|---------------------------|
| 4-4 | Control Components |
| 201358 | Regulator Valve |
| 216615 | Relay Valve |
| 201352 | Holdback Valve |
| 211315 | Relay Valve |
| 214161 | Relay Valve |
| 216285 | Relay Valve |
| 214127 | Rotary Valve |
| 215085 | Solenoid Valve |
| 211369 | Treadle Valve |
| 218928 | Brake Valve |
| 208707 | Push Button Valve |
| 227984 | Control Valve Assembly |
| 207272 | Push Button Valve |

| | |
|------------|--------------------------------------------|
| 4-5 | Actuator Components |
| 536683 | Transmission Control Air Cylinder |
| 220326 | Declutch Air Cylinder |
| 219109 | Implement Air Cylinder, Holddown & Kickoff |
| 219110 | Implement Air Cylinder, Hoist & Tilt |
| 220267 | Brake Actuator Assembly |
| 222010 | Brake Air Chamber, Service |
| 217201 | Brake Air Chamber, Parking |
| 222331 | Master Cylinder, Service Brake |
| ----- | Brake Caliper - See Section 3-4 |

| | |
|------------|----------------------|
| 4-6 | Miscellaneous |
| 207906 | Air Horn |
| 509574 | Air Hose Kit |

HYDRAULIC SYSTEM

SECTION 5

| | |
|------------|---------------------------------|
| 5-1 | Systems & Circuits |
| 569860 | Hydraulic System - Steering |
| 566611 | Hydraulic System - Hoist & Tilt |
| 573183 | Chassis Hydraulics w/ Cooler |
| 569846 | Boom Plumbing |
| 569364 | Carriage Hydraulics |

DATE: 20 OCT 94
REVISED: 20 NOV 95PAGE: 4 of 6
MODEL: L90S
SERIAL NO: 039301**HYDRAULIC SYSTEM (Continued)****SECTION 5**

5-2 Pumps
229005 Piggyback Pump, Steering/Fan Motor
227310 Tandem Pump, Holddown & Kickoff, LH & RH

5-3 Valves
573243 Valve Module
234081 Steering Control Unit (Pilot)
234082 Steering Flow Amplifier Valve
225151 Hoist & Tilt Valve
230669 Holddown/Kickoff Valve, LH
565604 Holddown/Kickoff Valve, RH
218007 Relief Valve
236071 Solenoid Valve

5-4 Cylinders
----- Hydraulic Cylinder Locations - See Section 1
W10670 Steering Cylinder
W10390 Hoist Cylinder
W6882 Tilt Cylinder
W5162 Holddown Cylinder
W5161 Kickoff Cylinder

5-5 Filters
228201 High Pressure Filter (100 GPM)
228200 High Pressure Filter (40 GPM)
210092 Return Filter, Hoist & Tilt (Ref)
509413 Return Strainer (In-Tank) (Ref)
----- Transmission Filter - See Section 3-2

5-6 Miscellaneous
573249 Hydraulic Oil Cooler Installation
566262 Oil Cooler
537587 Hydraulic Tube Coupling
80-60 O-Ring Selection Guide

ELECTRICAL SYSTEM**SECTION 6**

6-1 Systems & Circuits
539396 Reverse Alarm Circuit
555269 Neutral Start Circuit

**MASTER CHECK SHEET
PARTS BOOK INDEX**

DATE: 20 OCT 94
REVISED: 20 NOV 95

PAGE: 5 of 6
MODEL: L90S
SERIAL NO: 039301

ELECTRICAL SYSTEM (Continued)

SECTION 6

| | |
|------------|------------------------------------|
| 6-2 | Components |
| 573190 | Cowl Wiring |
| 573188 | Chassis Wiring |
| 224207 | Alternator |
| ----- | Instrument Panel - See Section 7-2 |
| 560246 | Instrument Panel Wiring |
| 560191 | Cowl Terminal Board |
| 560085 | Junction Box |
| ----- | Battery Box - See Section 8-2 |
| W10776 | Lighting Components |

CAB & COWL

SECTION 7

| | |
|------------|-------------------------------------------|
| 7-1 | Basic Structure |
| 565450 | Cab Assembly |
| 573189 | Cowl Assembly |
| 559644 | Door Assembly, LH |
| 559643 | Door Assembly, RH |
| 559647 | Door Latch, LH |
| 559646 | Door Latch, RH |
| W5660 | Cab & Cowl Insulation |
| 7-2 | Instruments & Controls |
| 563052 | Instrument Panel |
| 564625 | Vehicle Controls |
| 224174 | Accelerator Pedal |
| 800005 | Steering Wheel Components |
| 211144 | Steering Column |
| 7-3 | Miscellaneous |
| 572872 | Heater/Air Conditioner Installation |
| 238382 | Heater/Air Conditioner Assembly |
| ----- | Compressor Installation - see Section 2-7 |
| 800007 | Defroster |
| W10655 | Windshield Wipers |
| 231500 | Seat Suspension |
| 233048 | Seat Assembly |
| W5179 | Rear View Mirror |

DATE: 20 OCT 94
REVISED: 20 NOV 95

PAGE: 6 of 6
MODEL: L90S
SERIAL NO: 039301

FRAME & ATTACHMENTS

SECTION 8

| | |
|------------|-----------------------------------------|
| 8-1 | Frame & Attachments |
| 572647 | Boom Assembly |
| 561058 | Carriage Assembly |
| ----- | Tailpost - See Section 3-4 |
| 800132 | Pin & Bushing Composite - See Section 1 |

| | |
|------------|----------------------|
| 8-2 | Miscellaneous |
| 551550 | Battery Box |

ACCESSORIES & OPTIONS

SECTION 9

| | |
|------------|----------------------------------|
| 9-1 | Accessories & Options |
| 561627 | Fire Suppression System |
| 568086 | Remote Lube - Carriage |

DRAFT