

**MASTER CHECK SHEET
PARTS BOOK INDEX**DATE: 24 Mar 95
REVISED: 12 Dec 95PAGE: 1 of 6
MODEL: L90S
SERIAL NO: 039302**GENERAL INFORMATION****SECTION 1**

80-35 Master Check Sheet
80-7A How to use your Master Check Sheet

800081 Parts Ordering Procedure
533685 Quick Reference Filters & Belts, L90 "Standard" w/ Cummins & Clark
800137 Structure Nomenclature
800152 Decal Locations
Alphabetical Index
Hydraulic Cylinder Location with Pin & Bushing Composite

POWER UNIT**SECTION 2**

2-1 Engine
573476 Power Unit
237944 Engine Specifications, Cummins NTA 855-C335 BC3 SN 11751772

Engine Parts Catalog (3884235)

2-2 Controls

Engine Controls - See Section 7-2

Audiovisual Engine Protection System - See Section 6-1

2-3 Lubrication
556263 Lube Oil System - Bypass Filter
566204 Dipstick Installation

2-4 Fuel
541761 Fuel System

Fuel Filter - Engine Parts Catalog - See Section 2-1

2-5 Air Intake & Exhaust
573433 Air Intake System
217443 Air Cleaner
561607 Exhaust System
* Exhaust Blankets

2-6 Cooling
570080 Radiator & Shroud Asm
230470 Radiator

2-7 Miscellaneous
526723 Cold Start (Quick Start)
572873 A/C Compressor Installation

* Back Order

DRIVETRAIN

SECTION 3

3-1	General
W10633	Drivetrain Installation
567423	Transmission Installation
3-2	Transmission & Converter
-----	Converter Installation - See Section 3-1
235290	Converter
234050	Transmission
573518	Transmission Circuit
219271	Transmission Filter
-----	Transmission Shift Controls - See Section 7-2
-----	Transmission Air Cylinder - See Section 4-5
3-3	Drivelines
-----	Driveline Installation - See Section 3-1
530480	Converter/Transmission Driveline
528756	Transmission/Axle Driveline
3-4	Axles
W11032	Drive Axle (Ref)
544897	Tailpost (Rear Axle)
561614	Parking Brake Installation
3-5	Wheels & Tires
547331	Front Wheel (Drive)
511427	Rear Wheel (Steer)
-----	Front Tires - 33.5 x 33 - 44PR L-3 LDNDLCM
-----	Rear Tires - 28.5 x 25 - 20PR L-3

AIR & BRAKE SYSTEMS

SECTION 4

4-1	Systems
573522	Air System - Vehicle
573118	Air System - Implement
573490	Hydraulic Brake System
4-2	Modules
-----	Control Panel, LH - See Air System Implement, Section 4-1
-----	Control Panel, RH - See Air System Implement, Section 4-1
4-3	Supply Components
226349	Air Dryer
217734	Expello Valve

DATE: 24 Mar 95
REVISED: 12 Dec 95PAGE: 3 of 6
MODEL: L90S
SERIAL NO: 039302**AIR & BRAKE SYSTEMS (Continued)****SECTION 4**

4-4 Control Components
562230 Air Valve
211315 Relay Valve
216615 Relay Valve
214161 Relay Valve
216285 Relay Valve
201352 Holdback Valve
201358 Regulator Valve
206997 Float Valve
239444 Solenoid Valve
233035 Treadle Valve
218928 Brake Valve
215115 Control Valve Assembly
227916 Remote Control

4-5 Actuator Components
220326 Air Cylinder
219110 Air Cylinder
219109 Air Cylinder
220267 Brake Actuator Assembly
222010 Brake Air Chamber, Service
217201 Brake Air Chamber, Parking
222331 Master Cylinder, Service Brake
----- Brake Caliper - See Section 3-4
----- Parking Brake Air Chamber Installation - See Section 3-4

4-6 Miscellaneous
509574 Air Hose Kit

HYDRAULIC SYSTEM**SECTION 5**

5-1 Systems & Circuits
569860 Hydraulic System - Steering
566611 Hydraulic System - Hoist & Tilt
573384 Chassis Hydraulics with Cooler
569846 Boom Plumbing
569364 Carriage Hydraulics

DATE: 24 Mar 95
REVISED: 12 Dec 95

HYDRAULIC SYSTEM (Continued)

SECTION 5

5-2 Pumps
229005 Piggyback Pump, Steering/Fan Motor
229604 Tandem Pump, Holddown & Kickoff, LH & RH

5-3 Valves
573243 Valve Module
234081 Steering Control Unit (Pilot)
234082 Steering Flow Amplifier Valve
225151 Hoist & Tilt Valve
230669 Holddown/Kickoff Valve, LH
565604 Holddown/Kickoff Valve, RH
218007 Relief Valve
236071 Solenoid Valve

5-4 Cylinders
----- Hydraulic Cylinder Locations - See Section 1
W10670 Steering Cylinder
W10390 Hoist Cylinder
W6882 Tilt Cylinder
526164 Holddown Cylinder
526154 Kickoff Cylinder

5-5 Filters
228201 High Pressure Filter (100 GPM)
228200 High Pressure Filter (40 GPM)
509413 Return Strainer (In-Tank) (Ref)
----- Transmission Filter - See Section 3-2

5-6 Miscellaneous
573249 Hydraulic Oil Cooler Installation
228120 Oil Cooler
80-60 O-Ring Guide

ELECTRICAL SYSTEM

SECTION 6

6-1 Systems & Circuits
539396 Reverse Alarm Circuit
555269 Neutral Start Circuit

DATE: 24 Mar 95
REVISED: 12 Dec 95PAGE: 5 of 6
MODEL: L90S
SERIAL NO: 039302**ELECTRICAL SYSTEM (Continued)****SECTION 6**

6-2	Components
572174	Chassis Wiring
224207	Alternator
-----	Instrument Panel - See Section 7-2
572597	Cowl Terminal Board
572887	Junction Box
-----	Battery Box - See Section 8-2
W10915	Lighting Components
569156	Light Bar

CAB & COWL**SECTION 7**

7-1	Basic Structure
573279	Cab Assembly
573441	Cowl Assembly
570746	Door Assembly, LH
570743	Door Assembly, RH
568431	Door Latch, LH
568456	Door Latch, RH
570421	Cab & Cowl Insulation
7-2	Instruments & Controls
572545	Instrument Panel
570404	Instrument Panel Dash
573507	Vehicle Controls
224174	Accelerator Pedal
800005	Steering Wheel Components
573442	Steering Column
7-3	Miscellaneous
573459	Air Conditioner Installation
236812	Air Conditioner Assembly
-----	Compressor Installation - See Section 2-7
573474	Heater Installation
238781	Heater
573463	Defroster
W10822	Windshield Wipers, Front
W10821	Windshield Wipers, Rear
231800	Seat Suspension
236982	Seat Assembly without Arms

DATE: 24 Mar 95
REVISED: 12 Dec 95

FRAME & ATTACHMENTS

SECTION 8

8-1	Frame & Attachments
569847	Boom Assembly
573350	Carriage Assembly
-----	Tailpost - See Section 3-4
-----	Pin & Bushing Composite - See Section 1
* 573222	Miscellaneous Chassis Parts
8-2	Miscellaneous
551550	Battery Box
573406	Hose Guard Installation

ACCESSORIES & OPTIONS

SECTION 9

9-1	Accessories & Options
573506	Fire Suppression System
571239	Fire Detection System

DRAFT

* Back Order