

DATE: 27 OCT 95
REVISED: 21 FEB 97PAGE: 1 of 6
MODEL: L90S
SERIAL NO: 039303**GENERAL INFORMATION****SECTION 1**

80-35 Master Check Sheet
80-7A How to use your Master Check Sheet

800081 Parts Ordering Procedure
533685 Quick Reference Filters & Belts - L90S 303
800137 Structure Nomenclature
800149 Decal Locations (Ref)
Alphabetical Index
Hydraulic Cylinder Location with Pin & Bushing Composite

POWER UNIT**SECTION 2**

2-1 Engine
574121 Power Unit
240165 Engine Specifications Caterpillar 3406 DIT 325 HP
Serial Number: 6TB15002
Arrangement Number: 4W-3791
Performance Number: OT-4498

Engine Parts Catalog (SEBP1434)

2-2 Controls

Engine Controls - See Section 7-2

Audiovisual Engine Protection System - See power Unit & Cab, Section 2-1 & 7-1

2-3 Lubrication
556263 Lube Oil System - Bypass Filter
566012 Dipstick Installation
572915 Engine Oil Fill

2-4 Fuel
558024 Fuel System

Fuel Filter - See Engine Parts Catalog, Section 2-1

2-5 Air Intake & Exhaust
573433 Air Intake System
217443 Air Cleaner
561607 Exhaust System

Exhaust Blankets - See Exhaust System

2-6 Cooling
574033 Radiator & Shroud Asm
239916 Radiator

2-7 Miscellaneous
526723 Cold Start (Quick Start)
572690 A/C Compressor Installation
569673 Alternator Installation

DRIVETRAIN

SECTION 3

3-1	General
W10633	Drivetrain Installation
567423	Transmission Installation
3-2	Transmission & Converter
-----	Converter Installation - See Section 3-1
573628	Converter
234050	Transmission
573518	Transmission Circuit
219271	Transmission Filter
-----	Transmission Shift Controls - See Section 7-2
-----	Transmission Air Cylinder - See Section 4-5
3-3	Drivelines
-----	Driveline Installation - See Section 3-1
530480	Converter/Transmission Driveline
528756	Transmission/Axle Driveline
3-4	Axles
574000	Drive Axle
564217	Tailpost (Rear Axle)
561614	Parking Brake Installation
3-5	Wheels & Tires
540664	Front Wheel (Drive)
511427	Rear Wheel (Steer)
-----	Front Tires - 37.5 x 33 Bridgestone VKT
-----	Rear Tires - 23.5 x 25 Bridgestone VMT

AIR & BRAKE SYSTEMS

SECTION 4

4-1	Systems
573999	Air System - Vehicle
573118	Air System - Implement
574002	Hydraulic Brake System
4-2	Modules
-----	Control Panel, LH - See Air System Implement, Section 4-1
-----	Control Panel, RH - See Air System Implement, Section 4-1
4-3	Supply Components
226349	Air Dryer
217734	Expello Valve

DATE: 27 OCT 95
REVISED: 21 FEB 97PAGE: 3 of 6
MODEL: L90S
SERIAL NO: 039303**AIR & BRAKE SYSTEMS (Continued)****SECTION 4**

4-4	Control Components
201358	Regulator Valve
216615	Relay Valve
201352	Holdback Valve
211315	Relay Valve
214161	Relay Valve
216285	Relay Valve
239444	Solenoid Valve
233035	Treadle Valve
218928	Brake Valve
208707	Push Button Valve
562230	Control Valve Assembly (HD & KO)
227916	Remote Control Valve
4-5	Actuator Components
220326	Declutch Air Cylinder
219109	Implement Air Cylinder, Holddown & Kickoff
219110	Implement Air Cylinder, Hoist & Tilt
505238	Implement Air Cylinder, Reach
220267	Brake Actuator Assembly
222010	Brake Air Chamber, Service
217201	Brake Air Chamber, Parking
222331	Master Cylinder, Service Brake
-----	Brake Caliper - See Section 3-4
-----	Parking Brake Air Chamber Installation - See Section 3-4
4-6	Miscellaneous
207906	Air Horn
509574	Air Hose Kit

HYDRAULIC SYSTEM**SECTION 5**

5-1	Systems & Circuits
569860	Hydraulic System - Steering
566611	Hydraulic System - Hoist & Tilt
574068	Hydraulic System - Carriage
574294	Chassis Hydraulics
574115	Boom Plumbing

HYDRAULIC SYSTEM (Continued)**SECTION 5**

5-2	Pumps
234517	Piggyback Pump, Steering
229604	Tandem Pump, Holddown & Kickoff
5-3	Valves
573725	Valve Module
234081	Steering Control Unit (Pilot)
234082	Steering Flow Amplifier Valve
225151	Hoist & Tilt Valve
230669	Holddown/Kickoff Valve, LH
565604	Holddown/Kickoff Valve, RH
227513	Relief Valve
562131	Hydraulic Valve
5-4	Cylinders
-----	Hydraulic Cylinder Locations - See Section 1-1
W10970	Steering Cylinder
W10390	Hoist Cylinder
W6882	Tilt Cylinder
526164	Holddown, Kickoff, and Aux Holddown Cylinders
5-5	Filters
228201	High Pressure Filter (100 GPM)
210092	Filter
509413	Return Strainer (In-Tank)
-----	Transmission Filter - See Section 3-2
5-6	Miscellaneous
537587	Hydraulic Tube Coupling
80-60	O-Ring Guide

ELECTRICAL SYSTEM**SECTION 6**

6-1	Systems & Circuits
539396	Reverse Alarm Circuit
555269	Neutral Start Circuit

DATE: 27 OCT 95
REVISED: 21 FEB 97PAGE: 5 of 6
MODEL: L90S
SERIAL NO: 039303**ELECTRICAL SYSTEM (Continued)****SECTION 6**

6-2	Components
572174	Chassis Wiring
234183	Alternator
-----	Instrument Panel - See Section 7-2
570666	Cowl Terminal Board
570671	Junction Box
-----	Battery Box - See Section 8-2
W10915	Lighting Components
569156	Light Bar
570031	Light Amber Flashing
236720	Linear Actuator

CAB & COWL**SECTION 7**

7-1	Basic Structure
573705	Cab Assembly
574060	Cowl Assembly
572039	Door Assembly, LH
572038	Door Assembly, RH
568431	Door Latch, LH
568456	Door Latch, RH
570421	Cab & Cowl Insulation
570581	Floor Mat Installation
7-2	Instruments & Controls
574062	Instrument Panel
570404	Instrument Panel, Dash
573507	Vehicle Controls
224174	Accelerator Pedal
573442	Steering Column
570645	Control Handle
7-3	Miscellaneous
575286	Heater/Air Conditioner Installation
238382	Heater/Air Conditioner Assembly
-----	Air Conditioner Compressor Installation - See Section 2-7
573463	Defroster
W10822	Windshield Wipers, Front
W10821	Windshield Wipers, Rear
231800	Seat Suspension
236982	Seat Assembly without Arms

DATE: 27 OCT 95
REVISED: 21 FEB 97

FRAME & ATTACHMENTS

SECTION 8

8-1	Frame & Attachments
570709	Boom Assembly
573761	Carriage Assembly
-----	Tailpost - See Section 3-4
-----	Pin & Bushing Composite - See Section 1-1
573781	Auxiliary Holddown Arms
564345	Auxiliary Step
8-2	Miscellaneous
551550	Battery Box

ACCESSORIES & OPTIONS

SECTION 9

9-1	Accessories & Options
573506	Fire Suppression System
571239	Fire Detection System
574126	Remote Lube

PARTS