



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 5 MAY 00

REVISED: 9 OCT 00

Revision Level: G

PAGE: 1 of 4

MODEL: L90S

SERIAL NO: 039313

GENERAL INFORMATION

SECTION 1

- | | |
|------------|--|
| 1-1 | General |
| 80-245 | Manufacturer's Warranty |
| 80-035 | How to Read Your Master Check Sheet |
|
 | |
| 1-2 | Operation |
| 80-103 | Heavy Lift Vehicle Start & Stop Procedures |
|
 | |
| 1-3 | Service |
| 0130 | Capscrew Grades & Torque Ratings |
| E0081 | "Loctite" Usage and Application |
|
 | |
| 1-4 | Safety |
| 80-508 | Safety |

POWER UNIT

SECTION 2

- | | |
|-------------|---|
| 2-1 | Engine |
| SEBU6336-02 | Operation & Maintenance Manual, 3406B & 3406C |
|
 | |
| 2-5 | Air Intake & Exhaust |
| 80-045A | Air Intake System (Service) |
|
 | |
| 2-6 | Cooling |
| 80-287 | Radiator & Oil Cooler Service |
| E0124 | Radiator Fill Procedures |
|
 | |
| 2-7 | Miscellaneous |
| 80-196 | Quick Start Operation & Troubleshooting Guide |

**MASTER CHECK SHEET
SERVICE MANUAL INDEX**

DATE: 5 MAY 00

REVISED: 9 OCT 00

Revision Level: G

PAGE: 2 of 4

MODEL: L90S

SERIAL NO: 039313

DRIVETRAIN**SECTION 3**

3-2	Transmission and Converter
SMC8000	Maintenance & Service Manual - C8000 Converter
SM54	Maintenance & Service Manual - 5000 Transmission
80-487	Electric Shift Control - Plumbing Diagram
80-486	Engine Flywheel Indicator Set-Ups
80-469	Transmission Circuit Plumbing
E0017	Breather Maint for Converters & Trans.
3-3	Drivelines
E0054	Driveline Installation & Lubricants
80-627	Driveline Service & Maintenance
3-4	Axles
DA850	Maintenance & Service Manual - 85,000 Series Axle
80-227	Disc Brake Service
80-119	Tailpost Installation
3-5	Wheels & Tires
80-510	Wheels & Tires

AIR & BRAKE SYSTEM**SECTION 4**

4-1	Systems
574002	Hydraulic System - Brakes
4-3	Supply Components
80-369	Service - AD-4 Air Dryers
80-194	Expello Valve Service
4-5	Actuator Components
80-314	Maxi-Brake Spring Brake Service
80-263	Master Cylinder Service
80-258	Air Chamber Service (Rotochamber)

DATE: 5 MAY 00
REVISED: 9 OCT 00

Revision Level: G

PAGE: 3 of 4
MODEL: L90S
SERIAL NO: 039313**HYDRAULIC SYSTEM****SECTION 5**

- 5-1 Systems & Circuits**
80-421 DanFoss Steering System Operation & Troubleshooting
80-187 Basic Lumberjack Hydraulic Troubleshooting
574908 Hydraulic Schematic
574294 Hydraulic System - Chassis
0087 Troubleshooting Hydraulic Systems
- 5-2 Pumps**
WSB0079 Gear Pump Failures
80-630 Gear Pump Service & Assembly
- 5-3 Valves**
80-568 Service - Husco Port Relief/Anti-Cav
80-423 Steering Control Unit Service
80-422 Flow Amplifier Service
80-280 Control Valve Service
80-271 Service Manual for HUSCO Control Valves
- 5-4 Cylinders**
80-044 Hydraulic Cylinder Repair
- 5-5 Hydraulic Filters**
80-244 High Pressure Filter Service
0137 Filter Element Replacement - Gresen
- 5-6 Miscellaneous**
80-236 Pressurized Hydraulic Tank Warning

ELECTRICAL SYSTEM**SECTION 6**

- 6-1 Systems & Circuits**
577712 Electrical Schematic
- 6-2 Components**
80-612 PLC Basics
80-333 Audio/Visual Engine Protection Service
80-238 Alternator Troubleshooting & Repair Procedures
80-092 Battery Maintenance
575133 Chassis Wiring
E0161 Alternator Servicing Precautions



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 5 MAY 00

REVISED: 9 OCT 00

Revision Level: G

PAGE: 4 of 4

MODEL: L90S

SERIAL NO: 039313

CAB & COWL

SECTION 7

7-3 **Miscellaneous**
80-512 Service – RED DOT HVAC

FRAME & ATTACHMENTS

SECTION 8

ACCESSORIES & OPTIONS

SECTION 9

9-1 **Accessories & Options**
80-646 Electric Fire Detection and Actuation System Service

MAINTENANCE & LUBRICATION

SECTION 10

10-1 **Maintenance and Lubrication**
80-257 Lubricant Selection & Specifications
80-541 Wagner Lubrication (L-90)