



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 12-Sep-00
REVISED: 09-May-02

Revision Level : M

PAGE: 1 of 6
MODEL: L90S
SERIAL NO: 039315

GENERAL INFORMATION

SECTION 1

1-1	General
80-035	How to Read Your Master Check Sheet
-----	Master Check Sheet
1-2	Operation
80-007A	Procedure For Ordering Parts

POWER UNIT

SECTION 2

2-1	Engine
577733	Power Unit
245119	Engine, CAT 3406 DITA
	S/N: 3ER03251
	Perf Spec.: 2T-7797
	Arrangement #. 124-7634
2-3	Lubrication
576917	Dipstick & Housing Installation
572915	Engine Oil Fill
2-4	Fuel
558024	Fuel System Plumbing
2-5	Air Intake & Exhaust
578378	Air Cleaner Installation
561607	Exhaust System
224214	Air Cleaner
2-6	Cooling
568851	Radiator Assembly
239917	Radiator
2-7	Miscellaneous
572690	A/C Compressor Installation
569673	Alternator Installation
526723	Cold Start Installation
214748	Cold Start Kit

DRIVETRAIN

SECTION 3

3-1	General
577763	Drivetrain Installation



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 12-Sep-00

REVISED: 16-Apr-02

Revision Level : M

PAGE: 2 of 6

MODEL: L90S

SERIAL NO: 039315

DRIVETRAIN

SECTION 3

3-2	Transmission and Converter
578292	Transmission Circuit
578286	Transmission Installation
244178	Transmission
239794	Converter
232904	Shift Valve Module - 24V
219271	Transmission Filter
3-3	Drivelines
243568	Driveline Assembly
243560	Driveline Assembly
3-4	Axles
577696	Tailfork Installation
576742	Drive Axle Installation
570733	Disc Brake Caliper Assembly
569926	Disc Brake Caliper Assembly
561614	Parking Brake Installation
240438	Differential & Carrier
239696	Wheel End and Differential Kit
211953	Planet Carrier Assembly
201087	Parking Brake
3-5	Wheels & Tires
540664	Front Wheel
511427	Wheel Assembly, Rear

AIR & BRAKE SYSTEMS

SECTION 4

4-1	Systems
578071	Air System - Vehicle
574002	Hydraulic System - Brakes
4-2	Modules
577399	Air Valve Module
574071	Air Tank Module III
572646	Air Dryer Module
572227	Treadle Module
570028	Brake Relay Module, LH
570027	Brake Relay Module, RH
544996	Air Governor & Fittings
543583	Brake Valve Module



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 12-Sep-00

REVISED: 16-Apr-02

Revision Level : M

PAGE: 3 of 6

MODEL: L90S

SERIAL NO: 039315

AIR & BRAKE SYSTEMS

SECTION 4

4-3	Supply Components
570023	Air Tank Assembly, II
545557	Air Tank Assembly
226349	Air Dryer
217734	Expello Valve (12V)
4-4	Control Components
233035	Treadle Valve
218928	Brake Valve
216615	Relay Valve
211315	Relay Valve
4-5	Actuator Components
222331	Master Cylinder
222010	Air Brake Chamber, Service
220267	Brake Actuator Assembly
217201	Brake Air Chamber, Parking
4-6	Miscellaneous
509574	Air Hose Kit

HYDRAULIC SYSTEM

SECTION 5

5-1	Systems & Circuits
577744	Hydraulic System - Chassis
576380	Hydraulic System - Seat Mounted Controls
575661	Hydraulic System - Boom
574699	Hydraulic System - Cowl To Valves
574507	Hydraulic System - Carriage
569860	Hydraulic System - Steering
566611	Hydraulic System - Hoist & Tilt
5-2	Pumps
245290	Hydraulic Pump
245289	Tandem Pump
239790	Pump, Brake/Pilot



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 12-Sep-00
REVISED: 16-Apr-02

Revision Level : M

PAGE: 4 of 6
MODEL: L90S
SERIAL NO: 039315

HYDRAULIC SYSTEM

SECTION 5

5-3	Valves
577743	Valve Module
566303	Holddown/Kickoff Valve
239798	Remote Control Valve
237237	Valve, Control
234082	Steering Flow Amplifier
234081	Steering Control Unit
230905	Solenoid Valve
229439	Hoist & Tilt Valve
5-4	Cylinders
W6882	Hydraulic Cylinder
W10970	Steering Cylinder
W10390	Hydraulic Cylinder, Hoist
558685	Hydraulic Cylinder
526164	Hydraulic Cylinder, HD & KO
5-5	Filters
243457	Return Filter (In-Tank)
228201	High Pressure Filter (100 Gpm)
228200	High Pressure Filter (40 Gpm)

ELECTRICAL SYSTEM

SECTION 6

6-1	Systems & Circuits
539396	Reverse Alarm Circuit
6-2	Components
578073	Terminal Panel Assembly
577583	Junction Box Assembly
576827	Carriage Lights
576826	Rear Cab Lights
576825	Cab Lights
576822	Light Bar Installation
575133	Chassis Wiring
574276	Linear Actuator, Rotating Platform
234183	Alternator



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 12-Sep-00

REVISED: 16-Apr-02

Revision Level : M

PAGE: 5 of 6

MODEL: L90S

SERIAL NO: 039315

CAB & COWL

SECTION 7

7-1	Basic Structure
578376	Cowl Assembly
576357	Cab Assembly
572039	Door Assembly, LH
572038	Door Assembly, RH
570581	Floor Mat Installation
570421	Cab & Cowl Insulation
568456	Door Latch, RH
568431	Door Latch, LH
7-2	Instruments & Controls
577626	Speed Selector Assembly
577625	Steering Column
577584	Instrument Panel Assembly
572604	Instrument Panel - Dash
572426	Pedal Assembly
567756	Engine Controls
224174	Accelerator Pedal
7-3	Miscellaneous
W10822	Windshield Wiper Installation, Front
578265	Air Conditioner/Heater Installation
576663	Windshield Wiper Installation
573463	Defroster Fan Installation
243290	Seat Suspension
239727	Seat w/ Lumbar Support
238382	Air Conditioner/Heater

FRAME & ATTACHMENTS

SECTION 8

8-1	Frame & Attachments
577738	Chassis Assembly
577734	Carriage Assembly
570709	Boom Assembly
564345	Auxiliary Step
8-2	Miscellaneous
551550	Battery Box



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 12-Sep-00

REVISED: 16-Apr-02

Revision Level : M

PAGE: 6 of 6

MODEL: L90S

SERIAL NO: 039315

ACCESSORIES & OPTIONS

SECTION 9

9-1

574848

561627

Accessories & Options

Remote Lube, Carriage

Fire Suppression System