



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 12-Sep-00
REVISED: 09-May-02

Revision Level : M

PAGE: 1 of 4
MODEL: L90S
SERIAL NO: 039315

GENERAL INFORMATION

SECTION 1

| | |
|------------|--|
| 1-1 | General |
| 80-035 | How to Read Your Master Check Sheet |
| ----- | Master Check Sheet |
| 1-2 | Operation |
| 80-103 | Heavy Lift Vehicle Start & Stop Procedures |
| 1-3 | Service |
| E0081 | Loctite Usage and Application |
| 0130 | Capscrew Grades & Torque Ratings |
| 1-4 | Safety |
| 80-508 | Safety |

POWER UNIT

SECTION 2

| | |
|-------------|---|
| 2-1 | Engine |
| SEBU6336-02 | Operation & Maintenance Manual, 3406B & 3406C |
| 2-5 | Air Intake & Exhaust |
| 80-045A | Air Intake System (Service) |
| 2-6 | Cooling |
| E0124 | Radiator Fill Procedures |
| 80-287 | Radiator & Oil Cooler Service |
| 2-7 | Miscellaneous |
| 80-196 | Quick Start Operation & Troubleshooting Guide |

DRIVETRAIN

SECTION 3

| | |
|------------|--|
| 3-2 | Transmission and Converter |
| SMC8000 | Maintenance & Service Manual - C8000 Converter |
| SM64 | Maintenance & Service Manual - 6000 Transmission |
| E0017 | Breather Maint for Converters & Trans. |
| 80-487 | Electric Shift Control - Plumbing Diagram |
| 80-486 | Engine Flywheel Indicator Set-Ups |
| 80-469 | Transmission Circuit Plumbing |
| 3-3 | Drivelines |
| E0054 | Driveline Installation & Lubricants |
| 80-627 | Driveline Service & Maintenance |



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 12-Sep-00

REVISED: 16-Apr-02

Revision Level : M

PAGE: 2 of 4

MODEL: L90S

SERIAL NO: 039315

DRIVETRAIN

SECTION 3

| | |
|------------|---|
| 3-4 | Axles |
| DA850 | Maintenance & Service Manual - 85,000 Series Axle |
| 80-227 | Disc Brake Service |
| 80-119 | Tailpost Service & Inspection |
| 3-5 | Wheels & Tires |
| 80-510 | Wheels & Tires |

AIR & BRAKE SYSTEMS

SECTION 4

| | |
|------------|-----------------------------------|
| 4-1 | Systems |
| 574002 | Hydraulic System - Brakes |
| 4-3 | Supply Components |
| 80-369 | Service - AD-4 Air Dryers |
| 80-194 | Expello Valve Service |
| 4-5 | Actuator Components |
| 80-314 | Maxi-Brake Spring Brake Service |
| 80-263 | Master Cylinder Service |
| 80-258 | Air Chamber Service (Rotochamber) |

HYDRAULIC SYSTEM

SECTION 5

| | |
|------------|---|
| 5-1 | Systems & Circuits |
| 80-421 | DANFOSS Steering System Operation & Troubleshooting |
| 80-187 | Basic Lumberjack Hydraulic Troubleshooting |
| 578574 | ANSI Hydraulic Schematic |
| 569860 | Hydraulic System - Steering |
| 0087 | Troubleshooting Hydraulic Systems |
| 5-2 | Pumps |
| WSB0079 | Gear Pump Failures |
| HS-19 | Service Manual Pump/Motors |
| 80-390 | Hydraulic Pump Service |



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 12-Sep-00

REVISED: 16-Apr-02

Revision Level : M

PAGE: 3 of 4

MODEL: L90S

SERIAL NO: 039315

HYDRAULIC SYSTEM

SECTION 5

| | |
|------------|---|
| 5-3 | Valves |
| 80-423 | Steering Control Unit Service |
| 80-422 | Flow Amplifier Service |
| 80-280 | Control Valve Service |
| 80-271 | Service Manual for HUSCO Control Valves |
| 80-241 | Remote Control Valve Service |
| 5-4 | Cylinders |
| 80-044 | Hydraulic Cylinder Repair |
| 5-5 | Filters |
| 80-553 | Hydraulic In-Tank Return Filter - Maintenance |
| 80-244 | High Pressure Filter Service |
| 5-6 | Miscellaneous |
| 80-236 | Pressurized Hydraulic Tank Warning |

ELECTRICAL SYSTEM

SECTION 6

| | |
|------------|--|
| 6-1 | Systems & Circuits |
| 578364 | Electrical Schematic |
| 6-2 | Components |
| E0161 | Alternator Servicing Precautions |
| 80-612 | PLC Basics |
| 80-333 | Audio/Visual Engine Protection Service |
| 80-238 | Alternator Troubleshooting and Repair Procedures |
| 80-092 | Battery Maintenance |
| 575133 | Chassis Wiring |

CAB & COWL

SECTION 7

| | |
|------------|------------------------|
| 7-3 | Miscellaneous |
| 80-512 | Service - RED DOT HVAC |

ACCESSORIES & OPTIONS

SECTION 9

| | |
|------------|--|
| 9-1 | Accessories & Options |
| 80-646 | Electric Fire Detection and Actuation System Service |



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 12-Sep-00

REVISED: 16-Apr-02

Revision Level : M

PAGE: 4 of 4

MODEL: L90S

SERIAL NO: 039315

MAINTENANCE & LUBRICATION**SECTION 10**

10-1

80-638

80-257

Maintenance and Lubrication

Wagner Lubrication (L90) Standard w/Clark Trans

Lubricant Selection & Specifications