



# MASTER CHECK SHEET PARTS MANUAL INDEX

DATE:  
REVISED: 17-Apr-02

Revision Level : J

PAGE: 1 of 6  
MODEL: L90S  
SERIAL NO: 039316

---

## GENERAL INFORMATION

SECTION 1

<b>1-1</b>	<b>General</b>
80-035	How to Read Your Master Check Sheet
-----	Master Check Sheet
<b>1-2</b>	<b>Operation</b>
80-007A	Procedure For Ordering Parts
579497	Decal Location / Finis List

---

## POWER UNIT

SECTION 2

<b>2-1</b>	<b>Engine</b>
579496	Power Unit, CAT 3406-325HP-24V
240748	Engine, Caterpillar 3406 DITA
	Serial Number: 3ER07205
	Perf. Spec.: 2T-7796
	Arrangement Number: 124-7563
<b>2-3</b>	<b>Lubrication</b>
572915	Engine Oil Fill
566012	Dipstick & Housing Installation
<b>2-4</b>	<b>Fuel</b>
558024	Fuel System Plumbing
<b>2-5</b>	<b>Air Intake &amp; Exhaust</b>
579690	Exhaust Installation
579680	Air Cleaner Installation
224214	Air Cleaner
<b>2-6</b>	<b>Cooling</b>
574033	Radiator & Shroud Assembly
239916	Radiator
<b>2-7</b>	<b>Miscellaneous</b>
579618	A/C Compressor Installation
526723	Cold Start Installation
214748	Cold Start Kit

---

## DRIVETRAIN

SECTION 3

<b>3-1</b>	<b>General</b>
579619	Drivetrain Installation



# MASTER CHECK SHEET PARTS MANUAL INDEX

DATE:  
REVISED: 17-Apr-02

Revision Level : J

PAGE: 2 of 6  
MODEL: L90S  
SERIAL NO: 039316

---

## DRIVETRAIN

SECTION 3

<b>3-2</b>	<b>Transmission and Converter</b>
579581	Transmission
579580	Transmission Installation
578292	Transmission Circuit
235291	Converter
232904	Shift Valve Module - 24V
219271	Transmission Filter
<b>3-3</b>	<b>Drivelines</b>
243568	Driveline Assembly
243561	Driveline Assembly
<b>3-4</b>	<b>Axles</b>
577696	Tailfork Installation
576742	Drive Axle Installation
570733	Disc Brake Caliper Assembly
569926	Disc Brake Caliper Assembly
561614	Parking Brake Installation
240438	Differential & Carrier
239696	Wheel End and Differential Kit
211953	Planet Carrier Assembly
201087	Parking Brake
<b>3-5</b>	<b>Wheels &amp; Tires</b>
561173	Rear Wheel Assembly (Steer)
540664	Front Wheel
	Rear Tires: 26.5 X 25 Bridgestone VMT
	Front Tires: 37.5 X 33, Unit Shipping w/ Used Tires

---

## AIR & BRAKE SYSTEMS

SECTION 4

<b>4-1</b>	<b>Systems</b>
579555	Air System - Implement Controls
577532	Air System - Vehicle
574002	Hydraulic System - Brakes



# MASTER CHECK SHEET PARTS MANUAL INDEX

DATE:

REVISED: 17-Apr-02

Revision Level : J

PAGE: 3 of 6

MODEL: L90S

SERIAL NO: 039316

---

## AIR & BRAKE SYSTEMS

## SECTION 4

<b>4-2</b>	<b>Modules</b>
577742	Air Tank Assembly
577533	Air Valve Module
574470	Air Tank Module II
572646	Air Dryer Module
572227	Treadle Module
570028	Brake Relay Module, LH
570027	Brake Relay Module, RH
544996	Air Governor & Fittings
543583	Brake Valve Module
<b>4-3</b>	<b>Supply Components</b>
545557	Air Tank Assembly
232914	Expello Valve - 24V
226349	Air Dryer
<b>4-4</b>	<b>Control Components</b>
572376	Air Valve Assembly
239444	Valve, Solenoid 24V
233035	Treadle Valve
227916	Remote Control Valve
218928	Brake Valve
216615	Relay Valve
215400	5-Spool Valve
211315	Relay Valve
201358	Regulator Valve
201352	Holdback Valve
<b>4-5</b>	<b>Actuator Components</b>
222331	Master Cylinder
222010	Air Brake Chamber, Service
220267	Brake Actuator Assembly
217201	Brake Air Chamber, Parking
<b>4-6</b>	<b>Miscellaneous</b>
509574	Air Hose Kit



# MASTER CHECK SHEET PARTS MANUAL INDEX

DATE:  
REVISED: 17-Apr-02

Revision Level : J

PAGE: 4 of 6  
MODEL: L90S  
SERIAL NO: 039316

---

## HYDRAULIC SYSTEM

SECTION 5

<b>5-1</b>	<b>Systems &amp; Circuits</b>
579483	Hydraulic System - Chassis
579468	Hydraulic System, Carriage
577535	Hydraulic System - Boom
574701	Hydraulic System - Steering
566611	Hydraulic System - Hoist & Tilt
<b>5-2</b>	<b>Pumps</b>
246399	Hydraulic Pump
229604	Hydraulic Pump
<b>5-3</b>	<b>Valves</b>
579484	Valve Module
573843	HD & KO Valve, LH & RH
244795	Holddown & Kickoff Valve, LH & RH
234082	Steering Flow Amplifier
234081	Steering Control Unit
225151	Valve, Hoist & Tilt
<b>5-4</b>	<b>Cylinders</b>
W6882	Hydraulic Cylinder
W10970	Steering Cylinder
W10390	Hydraulic Cylinder, Hoist
574867	Hydraulic Cylinder
569848	Hydraulic Cylinder
558685	Hydraulic Cylinder
526164	Hydraulic Cylinder, HD & KO
<b>5-5</b>	<b>Filters</b>
243457	Return Filter (In-Tank)
228201	High Pressure Filter (100 Gpm)

---

## ELECTRICAL SYSTEM

SECTION 6

<b>6-1</b>	<b>Systems &amp; Circuits</b>
539396	Reverse Alarm Circuit



# MASTER CHECK SHEET PARTS MANUAL INDEX

DATE:  
REVISED: 17-Apr-02

Revision Level : J

PAGE: 5 of 6  
MODEL: L90S  
SERIAL NO: 039316

---

## ELECTRICAL SYSTEM

SECTION 6

<b>6-2</b>	<b>Components</b>
577585	Terminal Panel Assembly
577583	Junction Box Assembly
576827	Carriage Lights
576826	Rear Cab Lights
576825	Cab Lights
576822	Light Bar Installation
575133	Chassis Wiring
574276	Linear Actuator, Rotating Platform
570031	Cab Warning Light, Amber - 24V
234183	Alternator

---

## CAB & COWL

SECTION 7

<b>7-1</b>	<b>Basic Structure</b>
579495	Cowl Assembly
576357	Cab Assembly
572039	Door Assembly, LH
572038	Door Assembly, RH
570581	Floor Mat Installation
570421	Cab & Cowl Insulation
568456	Door Latch, RH
568431	Door Latch, LH
<b>7-2</b>	<b>Instruments &amp; Controls</b>
577625	Steering Column
575682	Instrument Panel
573507	Vehicle Controls
570404	Ignition Panel Assembly
224174	Accelerator Pedal
<b>7-3</b>	<b>Miscellaneous</b>
W10822	Windshield Wiper Installation, Front
579590	Air Conditioner/Heater Installation
576663	Windshield Wiper Installation
573463	Defroster Fan Installation
570875	Training Seat Installation
238382	Air Conditioner/Heater
236982	Seat Assembly
231800	Seat Suspension



# MASTER CHECK SHEET PARTS MANUAL INDEX

DATE:  
REVISED: 17-Apr-02

Revision Level : J

PAGE: 6 of 6  
MODEL: L90S  
SERIAL NO: 039316

---

## FRAME & ATTACHMENTS

**SECTION 8**

<b>8-1</b>	<b>Frame &amp; Attachments</b>
579444	Carriage Assembly
577738	Chassis Assembly
577526	Boom Assembly
564345	Auxiliary Step
<b>8-2</b>	<b>Miscellaneous</b>
579305	Battery Box Installation

---

## ACCESSORIES & OPTIONS

**SECTION 9**

<b>9-1</b>	<b>Accessories &amp; Options</b>
579469	Remote Lube System, Carriage
561627	Fire Suppression System