



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE:
REVISED: 19-Feb-04

Revision Level : C

PAGE: 1 of 3
MODEL: L90C
SERIAL NO: 039317

GENERAL INFORMATION

SECTION 1

1-1	General
-----	Master Check Sheet
80-245	Manufacturer's Warranty
80-035	How to Read Your Master Check Sheet
1-2	Operation
80-103	Heavy Lift Vehicle Start & Stop Procedures
1-3	Service
E0081	Loctite Usage and Application
1-4	Safety
80-508	Safety

POWER UNIT

SECTION 2

2-1	Engine
SEBU7517-01	Operation & Maintenance Manual, Cat C15/C16 Engines
SEBU6251-06	Caterpillar Diesel Engine Fluid Recommendations
2-5	Air Intake & Exhaust
80-045A	Air Intake System (Service)
2-6	Cooling
E0124	Radiator Fill Procedures
80-287	Radiator & Oil Cooler Service

DRIVETRAIN

SECTION 3

3-2	Transmission and Converter
SMC8000	Maintenance & Service Manual - C8000 Converter
SM64	Maintenance & Service Manual - 6000 Transmission
E0017	Breather Maint for Converters & Trans.
80-723	Transmission Filter Service Instructions
80-487	Electric Shift Control - Plumbing Diagram
80-486	Engine Flywheel Indicator Set-Ups
80-469	Transmission Circuit Plumbing
3-3	Drivelines
E0054	Driveline Installation & Lubricants
80-627	Driveline Service & Maintenance



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE:
REVISED: 19-Feb-04

Revision Level : C

PAGE: 2 of 3
MODEL: L90C
SERIAL NO: 039317

DRIVETRAIN

SECTION 3

3-4	Axles
DA850	Maintenance & Service Manual - 85,000 Series Axle
80-538	Differential Service - 25D
80-227	Disc Brake Service
80-119	Tailpost Service & Inspection
3-5	Wheels & Tires
80-510	Wheels & Tires

AIR & BRAKE SYSTEMS

SECTION 4

4-3	Supply Components
80-194	Expello Valve Service
4-5	Actuator Components
80-248	Park Brake Caliper Service

HYDRAULIC SYSTEM

SECTION 5

5-1	Systems & Circuits
80-421	DANFOSS Steering System Operation & Troubleshooting
80-187	Basic Lumberjack Hydraulic Troubleshooting
580243	Hydraulic Schematic
575131	Hydraulic System - Steering
574939	Hydraulic System - Hoist And Tilt
5-2	Pumps
WSB0079	Gear Pump Failures
80-722	Hydraulic Pump Service, PVM Series
80-679	Hydraulic Pump Service Instructions
5-3	Valves
80-568	Service - Husco Port Relief / Anti-Cav
80-423	Steering Control Unit Service
80-422	Flow Amplifier Service
80-271	Service Manual for HUSCO Control Valves
5-4	Cylinders
W10615	Hoist Cylinder Installation
80-044	Hydraulic Cylinder Repair



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE:
REVISED: 19-Feb-04

Revision Level : C

PAGE: 3 of 3
MODEL: L90C
SERIAL NO: 039317

HYDRAULIC SYSTEM

SECTION 5

5-5	Filters
80-553	Hydraulic In-Tank Return Filter - Maintenance
80-244	High Pressure Filter Service
5-6	Miscellaneous
80-236	Pressurized Hydraulic Tank Warning

ELECTRICAL SYSTEM

SECTION 6

6-1	Systems & Circuits
580244	Electrical Schematic
6-2	Components
E0161	Alternator Servicing Precautions
80-612	PLC Basics
80-333	Audio/Visual Engine Protection Service
80-238	Alternator Troubleshooting and Repair Procedures
80-092	Battery Maintenance
575133	Chassis Wiring

CAB & COWL

SECTION 7

7-1	Basic Structure
80-512	Service Manual - HD Vehical HVAC Systems

ACCESSORIES & OPTIONS

SECTION 9

9-1	Accessories & Options
80-646	Electric Fire Detection and Actuation System Service

MAINTENANCE & LUBRICATION

SECTION 10

10-1	Maintenance and Lubrication
80-638	Wagner Lubrication (L90) Standard w/Clark Trans
80-257	Lubricant Selection & Specifications