



# MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 31-Jan-04  
REVISED: 23-May-05

Revision Level : K

PAGE: 1 of 3  
MODEL: L90S  
SERIAL NO: 039318

---

## GENERAL INFORMATION

## SECTION 1

<b>1-1</b>	<b>General</b>
-----	Master Check Sheet
80-245	Manufacturer's Warranty (Wagner)
80-035	How to Read Your Master Check Sheet
<b>1-2</b>	<b>Operation</b>
80-103	Heavy Lift Vehicle Start & Stop Procedures
<b>1-4</b>	<b>Safety</b>
80-508	Safety

---

## POWER UNIT

## SECTION 2

<b>2-1</b>	<b>Engine</b>
3666423-00	Cummins QSX15 Operation & Maintenance Manual
<b>2-5</b>	<b>Air Intake &amp; Exhaust</b>
80-045A	Air Intake System (Service)
<b>2-6</b>	<b>Cooling</b>
E0124	Radiator Fill Procedures
80-287	Radiator & Oil Cooler Service

---

## DRIVETRAIN

## SECTION 3

<b>3-2</b>	<b>Transmission and Converter</b>
SMC8000	Maintenance & Service Manual - C8000 Converter
SM64	Maintenance & Service Manual - 6000 Transmission
E0017	Breather Maint for Converters & Trans.
80-487	Electric Shift Control - Plumbing Diagram
80-486	Engine Flywheel Indicator Set-Ups
80-469	Transmission Circuit Plumbing
<b>3-3</b>	<b>Drivelines</b>
E0054	Driveline Installation & Lubricants
80-627	Driveline Service & Maintenance
<b>3-4</b>	<b>Axles</b>
DA850	Maintenance & Service Manual - 85,000 Series Axle
80-538	Differential Service - 25D
80-227	Disc Brake Service
80-119	Tailpost Service & Inspection



# MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 31-Jan-04  
REVISED: 23-May-05

Revision Level : K

PAGE: 2 of 3  
MODEL: L90S  
SERIAL NO: 039318

---

## DRIVETRAIN

SECTION 3

**3-5**                      **Wheels & Tires**  
80-510                      Wheels & Tires

---

## AIR & BRAKE SYSTEMS

SECTION 4

**4-3**                      **Supply Components**  
80-705                      Service - AD-9 Air Dryers  
80-194                      Expello Valve Service

**4-5**                      **Actuator Components**  
80-767                      SCL25 Dry Disc Park Brake Calipers Maint Manual

---

## HYDRAULIC SYSTEM

SECTION 5

**5-1**                      **Systems & Circuits**  
80-421                      DANFOSS Steering System Operation & Troubleshooting  
80-187                      Basic Lumberjack Hydraulic Troubleshooting  
580968                      Hydraulic Schematic

**5-2**                      **Pumps**  
WSB0378                      Brake Pump Replacement - 239790& 248990  
WSB0079                      Gear Pump Failures  
HS-19                      Service Manual Pump/Motors  
80-722                      Hydraulic Pump Service, PVM Series  
80-679                      Hydraulic Pump Service Instructions

**5-3**                      **Valves**  
80-568                      Service - Husco Port Relief / Anti-Cav  
80-423                      Steering Control Unit Service  
80-422                      Flow Amplifier Service  
80-280                      Control Valve Service  
80-271                      Service Manual for HUSCO Control Valves

**5-4**                      **Cylinders**  
80-044                      Hydraulic Cylinder Repair

**5-5**                      **Filters**  
80-553                      Hydraulic In-Tank Return Filter - Maintenance  
80-244                      High Pressure Filter Service



# MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 31-Jan-04  
REVISED: 23-May-05

Revision Level : K

PAGE: 3 of 3  
MODEL: L90S  
SERIAL NO: 039318

---

## HYDRAULIC SYSTEM

SECTION 5

<b>5-6</b>	<b>Miscellaneous</b>
E0087	Troubleshooting Hydraulic Systems
80-236	Pressurized Hydraulic Tank Warning

---

## ELECTRICAL SYSTEM

SECTION 6

<b>6-1</b>	<b>Systems &amp; Circuits</b>
580819	Electrical Schematic
<b>6-2</b>	<b>Components</b>
E0161	Alternator Servicing Precautions
80-612	PLC Basics
80-333	Audio/Visual Engine Protection Service
80-238	Alternator Troubleshooting and Repair Procedures
80-092	Battery Maintenance

---

## CAB & COWL

SECTION 7

<b>7-1</b>	<b>Basic Structure</b>
80-512	Service Manual - HD Vehicle HVAC Systems

---

## MAINTENANCE & LUBRICATION

SECTION 10

<b>10-1</b>	<b>Maintenance and Lubrication</b>
80-638	Wagner Lubrication (L90) Standard w/Clark Trans
80-257	Lubricant Selection & Specifications