



MASTER CHECK SHEET SERVICE MANUAL INDEX

PAGE: 1 of 3
MODEL: L90C
SERIAL NO: 039320

DATE:
REVISED: 01-Jul-05

Revision Level : G

GENERAL INFORMATION

SECTION 1

1-1	General
-----	Master Check Sheet
80-245	Manufacturer's Warranty (Wagner)
80-035	How to Read Your Master Check Sheet
1-2	Operation
80-103	Heavy Lift Vehicle Start & Stop Procedures
1-4	Safety
80-508	Safety

POWER UNIT

SECTION 2

2-1	Engine
3666423-00	Cummins QSX15 Operation & Maintenance Manual
2-5	Air Intake & Exhaust
80-045A	Air Intake System (Service)
2-6	Cooling
E0124	Radiator Fill Procedures
80-287	Radiator & Oil Cooler Service

DRIVETRAIN

SECTION 3

3-2	Transmission and Converter
SMC8000	Maintenance & Service Manual - C8000 Converter
SM64	Maintenance & Service Manual - 6000 Transmission
E0017	Breather Maint for Converters & Trans.
80-487	Electric Shift Control - Plumbing Diagram
80-486	Engine Flywheel Indicator Set-Ups
80-469	Transmission Circuit Plumbing
3-3	Drivelines
E0054	Driveline Installation & Lubricants
80-627	Driveline Service & Maintenance
3-4	Axles
DA850	Maintenance & Service Manual - 85,000 Series Axle
80-538	Differential Service - 25D
80-227	Disc Brake Service
80-119	Tailpost Service & Inspection



MASTER CHECK SHEET SERVICE MANUAL INDEX

PAGE: 2 of 3
MODEL: L90C
SERIAL NO: 039320

DATE:
REVISED: 01-Jul-05

Revision Level : G

DRIVETRAIN

SECTION 3

3-5 **Wheels & Tires**
80-510 Wheels & Tires

AIR & BRAKE SYSTEMS

SECTION 4

4-3 **Supply Components**
80-194 Expello Valve Service

4-5 **Actuator Components**
80-767 SCL25 Dry Disc Park Brake Calipers Maint Manual

HYDRAULIC SYSTEM

SECTION 5

5-1 **Systems & Circuits**
E0087 Troubleshooting Hydraulic Systems
80-421 DANFOSS Steering System Operation & Troubleshooting
80-187 Basic Lumberjack Hydraulic Troubleshooting
580243 Hydraulic Schematic
575131 Hydraulic System - Steering
574939 Hydraulic System - Hoist And Tilt

5-2 **Pumps**
WSB0378 Brake Pump Replacement - 239790& 248990
WSB0079 Gear Pump Failures
80-722 Hydraulic Pump Service, PVM Series
80-679 Hydraulic Pump Service Instructions

5-3 **Valves**
80-568 Service - Husco Port Relief / Anti-Cav
80-423 Steering Control Unit Service
80-422 Flow Amplifier Service
80-271 Service Manual for HUSCO Control Valves

5-4 **Cylinders**
W10615 Hoist Cylinder Installation
80-044 Hydraulic Cylinder Repair

5-5 **Filters**
80-553 Hydraulic In-Tank Return Filter - Maintenance
80-244 High Pressure Filter Service



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE:
REVISED: 01-Jul-05

Revision Level : G

PAGE: 3 of 3
MODEL: L90C
SERIAL NO: 039320

HYDRAULIC SYSTEM

SECTION 5

5-6 **Miscellaneous**
80-236 Pressurized Hydraulic Tank Warning

ELECTRICAL SYSTEM

SECTION 6

6-1 **Systems & Circuits**
581953 Electrica Schematic

6-2 **Components**
E0161 Alternator Servicing Precautions
80-612 PLC Basics
80-333 Audio/Visual Engine Protection Service
80-238 Alternator Troubleshooting and Repair Procedures
80-092 Battery Maintenance
575133 Chassis Wiring

CAB & COWL

SECTION 7

7-1 **Basic Structure**
80-512 Service Manual - HD Vehicle HVAC Systems

ACCESSORIES & OPTIONS

SECTION 9

9-1 **Accessories & Options**
80-646 Electric Fire Detection and Actuation System Service

MAINTENANCE & LUBRICATION

SECTION 10

10-1 **Maintenance and Lubrication**
80-638 Wagner Lubrication (L90) Standard w/Clark Trans
80-257 Lubricant Selection & Specifications