

DATE: 21 JUL 95  
REVISED:

PAGE: 1 of 4  
MODEL: CD1000  
SERIAL NO: 068122

---

**GENERAL INFORMATION**

---

**SECTION 1**

- 1-1 General**
  - Master Check Sheet
  - 80-35 How to use your Master Check Sheet
  - 80-245 Manufacturer's Warranty
  
- 1-2 Operation**
  - 80-103 Start & Stop Procedures
  
- 1-3 Service**
  - 0081 Loctite Application
  - 0130 Capscrew Grades & Torque Values
  
- 1-4 Safety**
  - 80-508 Safety Precautions

---

**POWER UNIT**

---

**SECTION 2**

- 2-1 Engine**
  - Cummins Operation & Maintenance Manual (3379052)
  
- 2-2 Controls**
  - \* Audiovisual Engine Protection System
  
- 2-3 Lubrication**
  - Lube Oil System - See Engine Manual, Section 2-1
  
- 2-4 Fuel**
  - 568963 Fuel System
  
- 2-5 Air Intake & Exhaust**
  - 80-45 Air Filter Service
  - 0024 Air Gauge Service
  
- 2-6 Cooling**
  - 0124 Radiator Fill
  - 80-267 Radiator Service
  
- 2-7 Miscellaneous**
  - 80-196 Cold Start (Quick Start) Service

---

**DRIVETRAIN**

---

**SECTION 3**

- 3-1 General**
  - 568863-1 Drivetrain Installation

\* Back Order

DATE: 21 JUL 95  
REVISED:**DRIVETRAIN (Continued)****SECTION 3**

- 3-2 Transmission & Converter**  
----- Clark Transmission Service Manual (SM-84)  
----- Clark Converter Service Manual (SM-8000)  
568863-2 Transmission Circuit  
0017 Transmission Breather Maintenance  
----- Transmission Filter Service - See Transmission Manual
- 3-3 Drivelines**  
0054 Driveline Installation & Lube  
0182 Driveline Torque Settings
- 3-4 Axles**  
----- Clark Axle Service, 70,000 Series (SM 21D)  
----- No-Spin Service Manual (1014)
- 3-5 Wheels & Tires**  
80-510 Wheel & Tires

**AIR & BRAKE SYSTEMS****SECTION 4**

- 4-1 Systems**  
568852 Air System - Vehicle
- 4-2 Modules**
- 4-3 Supply Components**
- 4-4 Control Components**
- 4-5 Actuator Components**  
80-120 Brake Service  
80-174 Maxi-Brake Actuator Operation  
80-314 Maxi-Brake Service
- 4-6 Miscellaneous**

**HYDRAULIC SYSTEM****SECTION 5**

- 5-1 Systems & Circuits**  
568955 ANSI Hydraulic Schematic (Engineering Print)  
569803 Hydraulic System - Chassis/Steering  
569802 Hydraulic System - Bogie/Bucket  
0040 Flushing Systems  
0087 Troubleshooting Hydraulic Systems  
80-421 Danfoss Steering System Operation & Troubleshooting  
130-33 Hydraulic Pressure Settings

DATE: 21 JUL 95  
REVISED: 10 AUG 95**HYDRAULIC SYSTEM (continued)****SECTION 5**

- 5-2 Pumps**  
80-286 Steering/Implement Pump Service  
80-318 Pilot Pump Service  
0079 Hydraulic Pump Failures
- 5-3 Valves**  
80-423 Steering Control Unit Service  
80-422 Steering Flow Amplifier Valve Service  
80-271 Hoist & Dump/Side Tilt Valve Service
- 5-4 Cylinders**  
80-44 Cylinder Service
- 5-5 Filters**  
80-244 High Pressure Filter Service  
----- Transmission Filter - See Section 3-2
- 5-6 Miscellaneous**  
80-236 Pressurized Hydraulic Tank

**ELECTRICAL SYSTEM****SECTION 6**

- 6-1 Systems & Circuits**  
573272 Electrical System Schematic (Engineering Print)
- 6-2 Components**  
80-92 Battery Maintenance  
0161 Alternator Servicing Precautions  
80-238 Alternator Service  
80-140 Volt Guard Operation  
80-180 Tachometer Service  
80-333 Audiovisual Engine Protection System Maintenance  
80-525 Auxiliary Lighting Package

**CAB & COWL****SECTION 7**

- 7-1 Cab & Cowl**  
80-512 Heater/Air Conditioner Service

DATE: 21 JUL 95  
REVISED: 10 AUG 95

---

**FRAME & ATTACHMENTS**

---

**SECTION 8**

8-1                    **Frame & Attachments**  
80-222                Swivel Hinge Adjustment Procedure

---

**ACCESSORIES & OPTIONS**

---

**SECTION 9**

9-1                    **Accessories & Options**

---

**MAINTENANCE & LUBRICATION**

---

**SECTION 10**

10-1                    **Maintenance & Lubrication**  
0025                    Initial Lubrication  
80-497                    CB1000 Maintenance & Lubrication

cb1000