

# MASTER CHECK SHEET SERVICE MANUAL INDEX

PAGE: 1 of 4  
MODEL: CD1000  
SERIAL NO: 068123

DATE: 08 NOV 96  
REVISED: 28 JAN 97

---

**GENERAL INFORMATION**

---

**SECTION 1**

- 1-1 General**
  - Master Check Sheet
  - 80-35 How to use your Master Check Sheet
  - 80-245 Manufacturer's Warranty
  
- 1-2 Operation**
  - 80-103 Start & Stop Procedures
  
- 1-3 Service**
  - 0081 Loctite Application
  - 0130 Capscrew Grades & Torque Values
  
- 1-4 Safety**
  - 80-508 Safety Precautions

---

**POWER UNIT**

---

**SECTION 2**

- 2-1 Engine**
  - Cummins Operation & Maintenance Manual (3666013)
  
- 2-2 Controls**
  
- 2-3 Lubrication**
  - Lube Oil System - See Engine Manual
  
- 2-4 Fuel**
  - 568963 Fuel System
  
- 2-5 Air Intake & Exhaust**
  - 80-45 Air Filter Service
  - 0024 Air Gauge Service
  
- 2-6 Cooling**
  - 0124 Radiator Fill
  - 80-287 Radiator Service
  
- 2-7 Miscellaneous**
  - 80-196 Cold Start (Quick Start) Service

---

**DRIVETRAIN**

---

**SECTION 3**

- 3-1 General**
  - 575289 Drivetrain Installation

DATE: 08 NOV 96  
REVISED: 28 JAN 97

**DRIVETRAIN (Continued)**

**SECTION 3**

- 3-2 Transmission & Converter**
  - Clark Transmission Service Manual (SM-84)
  - Clark Converter Service Manual (SM-8000)
  - 0017 Transmission Breather Maintenance
  - Transmission Filter Service - See Transmission Manual
  
- 3-3 Drivelines**
  - 0054 Driveline Installation & Lube
  - 0182 Driveline Torque Settings
  
- 3-4 Axles**
  - Clark Axle Service, 70,000 Series (SM21D)
  - No- Spin Service Manual (1014)
  
- 3-5 Wheels & Tires**
  - 80-510 Wheel & Tires

**AIR & BRAKE SYSTEM**

**SECTION 4**

- 4-1 Systems**
  - 574774 Hydraulic Brake System
  
- 4-2 Modules**
  
- 4-3 Supply Components**
  
- 4-4 Control Components**
  
- 4-5 Actuator Components**

**HYDRAULIC SYSTEM**

**SECTION 5**

- 5-1 Systems & Circuits**
  - 575276 ANSI Hydraulic Schematic
  - 574986 Hydraulic System - Steering
  - 575089 Hydraulic System - Chassis
  - 571669 Hydraulic System - Bogie/Bucket
  - 0040 Flushing Systems
  - 0087 Troubleshooting Hydraulic Systems
  - 80-421 Danfoss Steering System Operation & Troubleshooting

DATE: 08 NOV 96  
REVISED: 28 JAN 97

---

**HYDRAULIC SYSTEM**

---

**SECTION 5**

- 5-2**            **Pumps**  
0079            Hydraulic Pump Failures
  
- 5-3**            **Valves**  
80-423        Steering Control Unit Service  
80-422        Steering Flow Amplifier Valve Service
  
- 5-4**            **Cylinders**  
80-44         Cylinder Service
  
- 5-5**            **Filters**  
80-244        High Pressure Filter Service  
80-553        Hydraulic In Tank Filter Service  
-----        Transmission Filter - See Section 3-2
  
- 5-6**            **Miscellaneous**  
80-236        Pressurized Hydraulic Tank

---

**ELECTRICAL SYSTEM**

---

**SECTION 6**

- 6-1**            **Systems & Circuits**  
575311        Electrical Schematic
  
- 6-2**            **Systems & Circuits**  
80-92         Battery Maintenance  
0161         Alternator Servicing Precautions  
80-238        Alternator Service  
80-140        Volt Guard Operation  
80-180        Tachometer Service  
80-333        Audiovisual Engine Protection System Maintenance  
80-525        Auxiliary Lighting Package

---

**CAB & COWL**

---

**SECTION 7**

- 7-1**            **Basic Structure**  
80-512        Heater/Air Conditioner Service

DATE: 08 NOV 96  
REVISED: 28 JAN 97

---

**FRAME & ATTACHMENTS**

---

**SECTION 8**

8-1                    **Frame & Attachments**  
80-222                Swivel Hinge Adjustment Procedure

---

**ACCESSORIES & OPTIONS**

---

**SECTION 9**

9-1                    **Accessories & Options**

---

**MAINTENANCE & LUBRICATION**

---

**SECTION 10**

10-1                    **Maintenance & Lubrication**  
0025                    Initial Lubrication  
80-547                    CD1000 Maintenance & Lubrication