



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 14 June 95
REVISED: 8 October 99

Revision Level: C

PAGE: 1 of 4
MODEL: L4115C
SERIAL NO: 109245

GENERAL INFORMATION

SECTION 1

- 1-1** **General**
 - Master Check Sheet
 - 80-35 How to use your Master Check Sheet
 - 80-245 Manufacturer's Warranty

- 1-2** **Operation**
 - 80-103 Start & Stop Procedures

- 1-3** **Service**
 - 0081 Loctite Application
 - 0130 Capscrew Grades & Torque Values

- 1-4** **Safety**
 - 80-508 Safety Precautions

POWER UNIT

SECTION 2

- 2-1** **Engine**
 - SEBU6336-02 Operation & Maintenance Manual, 3406B & 3406C

- 2-5** **Air Intake & Exhaust**
 - 80-045A Air Intake System (Service)

- 2-6** **Cooling**
 - 80-287 Radiator & Oil Cooler Service
 - 0124 Radiator Fill Procedures

- 2-7** **Miscellaneous**
 - 80-196 Quick Start Operation & Troubleshooting Guide

DATE: 14 June 95
REVISED: 8 October 99

Revision Level: C

PAGE: 2 of 4
MODEL: L4115C
SERIAL NO: 109245**DRIVETRAIN****SECTION 3**

3-2	Transmission and Converter
SMC8000	Maintenance & Service Manual - C8000 Converter
SM84	Maintenance & Service Manual - 8000 Transmission
80-487	Electric Shift Control - Plumbing Diagram
80-486	Engine Flywheel Indicator Set-Ups
80-469	Transmission Circuit Plumbing
0017	Breather Maint for Converters & Trans.
3-3	Drivelines
80-571	Driveline Flange Orientation L4115 and L4100
0054	Driveline Installation & Lubricants
3-4	Axles
SM21D	Maintenance & Service Manual - 21D Series Axle
DA850	Maintenance & Service Manual - 85,000 Series Axle
80-370	Front Axle Install (Duals)
80-227	Disc Brake Service
3-5	Wheels & Tires
80-510	Wheels & Tires

AIR & BRAKE SYSTEM**SECTION 4**

4-3	Supply Components
80-369	Service - AD-4 Air Dryers
80-194	Expello Valve Service
4-5	Actuator Components
80-314	Maxi-Brake Spring Brake Service
80-263	Master Cylinder Service
80-258	Air Chamber Service (Rotochamber)
4-6	Miscellaneous
80-305	Basic Declutch System w/ Magnetic Pickup

DATE: 14 June 95

REVISED: 8 October 99

Revision Level: C

PAGE: 3 of 4

MODEL: L4115C

SERIAL NO: 109245

HYDRAULIC SYSTEM**SECTION 5**

- 5-1 Systems & Circuits**
80-421 DanFoss Steering System Operation & Troubleshooting
80-187 Basic Lumberjack Hydraulic Troubleshooting
572844 Hydraulic Schematic - ANSI
0087 Troubleshooting Hydraulic Systems
- 5-2 Pumps**
80-318 Gear Pump Service Instructions
80-286 Roller Bearing Pumps Service Instructions
0079 Hydraulic Pump Failures
- 5-3 Valves**
80-568 Service - Husco Port Relief / Anti-Cav
80-423 Steering Control Unit Service
80-422 Flow Amplifier Service
80-280 Control Valve Service
80-271 Service Manual for HUSCO Control Valves
- 5-4 Cylinders**
80-044 Hydraulic Cylinder Repair
- 5-5 Filters**
80-553 Hydraulic In-Tank Return Filter - Maintenance
80-244 High Pressure Filter Service
- 5-6 Miscellaneous**
80-509 Hydraulic Load Indicator
80-236 Pressurized Hydraulic Tank Warning

ELECTRICAL SYSTEM**SECTION 6**

- 6-1 Systems & Circuits**
80-384 Electrical Schematic - Forward and Reverse Controls
573233 Electrical Schematic
- 6-2 Components**
80-333 Audio/Visual Engine Protection Service
80-238 Alternator Troubleshooting and Repair Procedures
80-092 Battery Maintenance
0161 Alternator Servicing Precautions



MASTER CHECK SHEET SERVICE MANUAL INDEX

PAGE: 4 of 4
MODEL: L4115C
SERIAL NO: 109245

DATE: 14 June 95
REVISED: 8 October 99

Revision Level: C

CAB & COWL**SECTION 7**

7-3 **Miscellaneous**
80-512 Service - RED DOT HVAC

FRAME & ATTACHMENTS**SECTION 8**

8-1 **Frame & Attachments**
80-222 Center Swivel Bearing Adjustment Procedure

ACCESSORIES & OPTIONS**SECTION 9**

9-1 **Accessories & Options**
80-584 Fire Suppression System Service
80-527 Electric Fire Detection and Actuation System Service

MAINTENANCE & LUBRICATION**SECTION 10**

10-1 **Maintenance and Lubrication**
80-507 Maintenance & Lube Manual, L4115
80-257 Lubricant Selection & Specifications