



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 15 JUL 97
REVISED: 13 DEC 99

Revision Level: G

PAGE: 1 of 6
MODEL: L4115C
SERIAL NO: 109246

GENERAL INFORMATION

SECTION 1

----- Master Check Sheet
80-35 How to use your Master Check Sheet
80-7A Parts Ordering Procedure
800137 Alphabetical Index
573093 Decal Location

POWER UNIT

SECTION 2

2-1 Engine
574849 Power Unit
240749 Engine Specifications, Cat 3406
Serial Number 3ER00589
Arrangement Number 130-4571

2-2 Controls
----- Engine Control s - See Section 7-2
----- Audiovisual Engine Protection System - See Power Unit & Cab Section 2-1 & 7-1

2-3 Lubrication
572915 Engine Oil Fill
566012 Dipstick & Housing Installation

2-4 Fuel
566513 Fuel System
----- Fuel Filter -See Engine Parts Catalog

2-5 Air Intake & Exhaust
573246 Air Intake System
224214 Air Cleaner
572395 Air Filter Indicator (In Cab)
572877 Exhaust System

2-6 Cooling
568851 Radiator Assembly
239917 Radiator
572947 Radiator Shutters

2-7 Miscellaneous
526723 Cold Start (Quick Start)
214748 Cold Start Kit
572949 Engine Block Heater Installation
569673 Alternator Installation
572690 Compressor Installation, A/C



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 15 JUL 97
REVISED: 13 DEC 99

Revision Level: G

PAGE: 2 of 6
MODEL: L4115C
SERIAL NO: 109246

DRIVETRAIN

SECTION 3

3-1	General
572324	Drivetrain Installation (Front Axle) - Also, See Section 3-3
3-2	Transmission & Converter
-----	Converter Installation - See Section 2-1
573256	Transmission Install with Disconnect
239530	Transmission
232904	Shift Valve Module
239794	Converter
572167	Transmission Circuit
219271	Transmission Filter
-----	Transmission Shift Controls - See Section 7-2
3-3	Drivelines
-----	Driveline Installation, Front Axle - See Section 3-1
575437	Driveline Installation, Rear Axle
563718	Converter/Transmission Driveline
572494	Transmission/Front Axle Driveline
574255	Transmission/Intermediate Driveline
543382	Hinge Driveline
543383	Hinge/Rear Axle Driveline
3-4	Axles
575907	Drive Axle, Front
570733	Disc Brake Caliper
569923	Disc Brake Caliper
240438	Differential & Carrier Assembly, Front
211953	Planet Carrier Assembly, Front
574426	Rear Axle Installation
574427	Drive Axle, Rear
574811	Differential & Carrier Assembly, Rear
212866	Planet Carrier Assembly, Rear
225989	Brake Assembly, Rear
201087	Parking Brake
3-5	Wheels & Tires
229546	Front Wheel (Drive)
566707	Rear Wheel (Steer)
-----	Front Tires - 24.0 x 35 Goodyear RL-4J Radials
-----	Rear Tires - 29.5 x 25 Goodyear GP-2B Radials



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 15 JUL 97
REVISED: 13 DEC 99

Revision Level: G

PAGE: 3 of 6
MODEL: L4115C
SERIAL NO: 109246

AIR & BRAKE SYSTEMS

SECTION 4

- 4-1 Systems**
 - 572577 Air System - Vehicle
 - 574650 Air System - Bogie Brake (Rear)
 - 572572 Hydraulic Brake System
- 4-2 Modules**
- 4-3 Supply Components**
 - 233095 Air Dryer
 - 232914 Expello Valve
- 4-4 Control Components**
 - 201358 Regulator Valve
 - 216615 Relay Valve
 - 201352 Holdback Valve
 - 211315 Relay Valve
 - 214161 Relay Valve
 - 216285 Relay Valve
 - 238184 Solenoid Valve
 - 233035 Treadle Valve
 - 218928 Brake Valve
- 4-5 Actuator Components**
 - 220326 Declutch Air Cylinder
 - 220267 Brake Actuator Assembly
 - 222010 Brake Air Chamber, Service
 - 222331 Master Cylinder, Service Brake
 - 210777 Brake Air Chamber
 - 217201 Brake Air Chamber, Parking
 - 566492 Parking Brake Actuator Installation
- 4-6 Miscellaneous**
 - 509574 Air Hose Kit

HYDRAULIC SYSTEM

SECTION 5

- 5-1 Systems & Circuits**
 - 572168 Hydraulic System - Steering
 - 572170 Hydraulic System - Hoist & Tilt
 - 572571 Hydraulic System - Cowl to Valves
 - 572842 Hydraulic System - Seat Mounted Controls
 - 572506 Hydraulic System - Pilot Controls
 - 572325 Chassis Hydraulics
 - Boom Plumbing - See Section 8-1
 - 572165 Carriage Hydraulics (Holddown/Kickoff)
- 5-2 Pumps**
 - 237948 Tandem Pump, Holddown & Kickoff, LH & RH
 - 237947 Implement/Steering Pump



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 15 JUL 97
REVISED: 13 DEC 99

Revision Level: G

PAGE: 4 of 6
MODEL: L4115C
SERIAL NO: 109246

HYDRAULIC SYSTEM (Continued)

SECTION 5

5-3	Valves
572169	Valve Module
234291	Steering Control Unit (Pilot Valve)
234082	Steering Valve (Flow Amplifier)
229773	Remote Control Valve, Hoist & Tilt
229439	Hoist & Tilt Valve
236764	Remote Control Valve, Holddown & Kickoff
236721	Holddown/Kickoff
572071	Pressure Relief Valve
5-4	Cylinders Continued
W9361	Steering Cylinder
W11019	Hoist Cylinder
574812	Tilt Cylinder Installation
574541	Tilt Cylinder Assembly
574637	Holddown Cylinder
574863	Kickoff Cylinder
558313	Auxiliary Holddown Cylinder
5-5	Filters
228201	High Pressure Filter (100 GPM)
228200	High Pressure Filter (40 GPM)
224350	Return Filter (In-Tank)
-----	Transmission Filter - See Section 3-2
5-6	Miscellaneous
552658	Hydraulic Tank Heater
572881	Hydraulic Load Indicator

ELECTRICAL SYSTEM

SECTION 6

6-1	Systems & Circuits
-----	Electrical System Schematic - See Wiring Diagram, Service Manual Section 6-1
570164	Reverse Alarm Circuit
6-2	Components
-----	Cowl Wiring - See Section 7-1
572684	Chassis Wiring
-----	Alternator Installation - See Section 2-7
234183	Alternator
574276	Linear Actuator, Rotating Platform
-----	Instrument Panel - See Section 7-2
572743	Terminal Panel
570624	Junction Box
W10915	Lighting Components
572879	Warning Light Installation
569156	Lighting Components, Light Bar
-----	Battery Box - See Section 8-2



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 15 JUL 97
REVISED: 13 DEC 99

Revision Level: G

PAGE: 5 of 6
MODEL: L4115C
SERIAL NO: 109246

CAB & COWL

SECTION 7

7-1	Basic Structure
572607	Cab Assembly
574466	Cowl Assembly
572039	Door Assembly, LH
572038	Door Assembly, RH
568431	Door Latch LH
568456	Door Latch, RH
570421	Cab & Cowl Insulation
570581	Floor Mat Installation
7-2	Instruments & Controls
573026	Instrument Panel
572980	Ignition Panel
567756	Engine Controls
570645	Control Handle, Electric Shift
-----	Shift Valve Module - See Section 3-2
567739	Rear Axle Disconnect Controls
224174	Accelerator Pedal
573442	Steering Column
561565	Low Air Buzzer
-----	Air Filter Indicator (In Cab) - See Section 2-5
-----	Seat Mounted Controls - See Section 5-1
7-3	Miscellaneous
572683	Air Conditioner Installation
236812	Air Conditioner Assembly
W10822	Windshield Wiper Installation, Front
W10821	Windshield Wiper Installation, Rear
231800	Seat Suspension
236982	Seat Assembly
574023	Bearing
570875	Seat Traning
-----	Cab Pressurizer - See Heater/Air Conditioner
-----	A/C Compressor Installation - See Section 2-7
573234	Stereo Cassette Installation
572726	Heater Installation
238781	Heater Assembly, Cab
238782	Heater Assembly, Auxiliary



MASTER CHECK SHEET PARTS MANUAL INDEX

DATE: 15 JUL 97

REVISED: 13 DEC 99

Revision Level: G

PAGE: 6 of 6

MODEL: L4115C

SERIAL NO: 109246

FRAME & ATTACHMENTS

SECTION 8

8-1	Frame & Attachments
572578	Boom Assembly
574636	Carriage Assembly
572144	Auxiliary Holddown Installation
572883	Swivel Box Installation
-----	Pin & Bushing Composite - See Section 1
572470	Chassis Assembly
8-2	Miscellaneous
551550	Battery Box

ACCESSORIES & OPTIONS

SECTION 9

9-1	Accessories & Options
572878	Fire Suppression System, Chassis
575669	Fire Suppression System, Cab
573023	Cig Lighter Installation
572880	Remote Lube System