

**MASTER CHECK SHEET
SERVICE MANUAL INDEX**

DATE: 15 JUL 97

REVISED:

Revision Level: F

PAGE: 1 of 4

MODEL: L4115C

SERIAL NO: 109246

GENERAL INFORMATION**SECTION 1**

1-1	General
-----	Master Check Sheet
80-35	How to use your Master Check Sheet
79-11	Manufacturer's Warranty
1-2	Operation
80-103	Start & Stop Procedures
1-3	Service
0081	Loctite Application
0130	Capscrew Grades & Torque Values
1-4	Safety
80-508	Safety Precautions

POWER UNIT**SECTION 2**

2-1	Engine
SEBU6336-01	Cat 3406 Operation & Maintenance Manual
2-2	Controls
-----	Audiovisual Eng Protection System - See Power Unit, Cab, Cowl Sect 2-1 & 7-1
2-3	Lubrication
-----	Lube Oil System - See Engine Manual
2-4	Fuel
566513	Fuel System
2-5	Air Intake & Exhaust
80-45A	Air Filter Service
0024	Air Gauge Service
2-6	Cooling
0124	Radiator Fill
80-287	Radiator Service
2-7	Miscellaneous
80-196	Cold Start (Quick Start) Service

DRIVETRAIN**SECTION 3**

3-1	General
572324	Drivetrain Installation

DATE: 15 JUL 97

MODEL: L4115C

REVISED: Revision Level: F

SERIAL NO: 109246

DRIVETRAIN (Continued)

SECTION 3

- 3-2 Transmission & Converter**
SM-84 Clark Transmission Service Manual
SMC-8000 Clark Converter Service Manual
572167 Transmission Circuit
0017 Transmission Breather Maintenance
----- Transmission Filter Service - See Transmission Manual
- 3-3 Drivelines**
575437 Driveline Installation - Rear Axle
0054 Driveline Installation & Lube
- 3-4 Axles**
DA-850 Clark Axle Service, 85,000 Series
SM 21D Clark Axle Service, 70,000 Series
80-370 Front Axle Installation
- 3-5 Wheels & Tires**
80-510 Wheels & Tires

AIR & BRAKE SYSTEM

SECTION 4

- 4-1 Systems**
572577 Air System - Vehicle
574650 Air System - Bogie Brake (Rear)
572572 Hydraulic Brake System
- 4-2 Modules**
- 4-3 Supply Components**
80-369 Air Dryer Service
80-194 Expello Valve Service
- 4-4 Control Components**
- 4-5 Actuator Components**
80-174 Maxi Brake Operation
80-227 Disc Brake Service
80-258 Air Chamber Service
80-263 Master Cylinder Service
- 4-6 Miscellaneous**
80-305 Basic Declutch Diagram
0154 Declutch Troubleshooting

DATE: 15 JUL 97

REVISED:

Revision Level: F

PAGE: 3 of 4

MODEL: L4115C

SERIAL NO: 109246

HYDRAULIC SYSTEM**SECTION 5**

5-1	Systems & Circuits
572844	ANSI Hydraulic Schematic
80-421	Danfoss Steering System - Operation & Troubleshooting
572168	Hydraulic System - Steering
572170	Hydraulic System - Hoist & Tilt
572571	Hydraulic System - Cowl to Valves
572842	Hydraulic System - Seat Mounted Controls
572506	Hydraulic System - Pilot Controls
572325	Chassis Hydraulics
572165	Carriage Hydraulics
0040	Flushing Systems
0087	Troubleshooting Hydraulic Systems - General
80-187	Troubleshooting Hydraulic Systems - Lumberjack
80-336	Hydraulic Pressure Check Points
5-2	Pumps
80-286	Holddown/Kickoff & Steering Pump Service
0079	Hydraulic Pump Failures
80-318	Gear Pump Service
5-3	Valves
80-423	Steering Control Unit Service
80-422	Steering Valve (Flow Amplifier) Service
80-280	Hoist & Tilt Valve Service
80-271	Holddown & Kickoff Valve Service
80-568	Service - Husco Port Relief / Anti-Cav
5-4	Cylinders
80-044	Cylinder Service
5-5	Filters
80-244	High Pressure Filter Service
80-553	Hydraulic In Tank Return Filter Maintenance
-----	Transmission Filter - See Section 3-2

ELECTRICAL SYSTEM**SECTION 6**

6-1	Systems & Circuits
573233	Electrical System Schematic
570164	Reverse Alarm Circuit
80-384	Fwd & Rev Electrical
6-2	Components
80-92	Battery Maintenance
0161	Alternator Servicing Precautions
80-238	Alternator Service
80-140	Volt Guard Operation
80-333	Audiovisual Engine Protection System Maintenance

MASTER CHECK SHEET SERVICE MANUAL INDEX

PAGE: 4 of 4

DATE: 15 JUL 97

MODEL: L4115C

REVISED: Revision Level: F

SERIAL NO: 109246

CAB & COWL

SECTION 7

7-1 **Basic Structure**
80-512 Heater/Air Conditioner Service

FRAME & ATTACHMENTS

SECTION 8

8-1 **Frame & Attachments**
80-222 Swivel Hinge Adjustment Procedure

ACCESSORIES & OPTIONS

SECTION 9

9-1 **Accessories & Options**
80-125 Fire Suppression System Service

MAINTENANCE & LUBRICATION

SECTION 10

10-1 **Maintenance & Lubrication**
0025 Initial Lubrication
80-507 L4115 Maintenance & Lubrication