



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 19 AUG 1999
REVISED: 13 JAN 2000

Revision Level: J

PAGE: 1 of 4
MODEL: L4115E
SERIAL NO: 109248

GENERAL INFORMATION

SECTION 1

1-1	General
-----	Master Check Sheet
80-035	How to Read Your Master Check Sheet
79-011	Manufacturer's Warranty
1-2	Operation
80-103	Start & Stop Procedures
1-3	Service
0081	"Loctite" Usage & Application
0130	Capscrew Grades & Torque Values
1-4	Safety
80-508	Safety Precautions

POWER UNIT

SECTION 2

2-1	Engine
SEBU6959-01	Operation and Maintenance Manual, 3406E & 3456
SEBU6103-05	Maintenance Management Schedule
2-5	Air Intake & Exhaust
80-045A	Air Intake System (Service)
2-6	Cooling
80-287	Radiator & Oil Cooler Service
0124	Radiator Fill Procedures



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 19 AUG 1999
REVISED: 13 JAN 2000

Revision Level: J

PAGE: 2 of 4
MODEL: L4115E
SERIAL NO: 109248

DRIVETRAIN

SECTION 3

3-2	Transmission and Converter
SMC8000	Maintenance & Service Manual - C8000 Converter
SM84	Maintenance & Service Manual - 8000 Transmission
80-487	Electric Shift Control - Plumbing Diagram
80-486	Engine Flywheel Indicator Set-Ups
80-469	Transmission Circuit Plumbing
0017	Breather Maintenance for Converters & Transmissions
3-3	Drivelines
80-627	Driveline Service & Maintenance
80-571	Driveline Flange Orientation L4115 and L4100
0054	Driveline Installation & Lubricants
3-4	Axles
SM21D	Maintenance & Service Manual - 21D Series Axle
DA850	Maintenance & Service Manual - 85,000 Series Axle
80-227	Disc Brake Service
3-5	Wheels & Tires
80-510	Wheels & Tires

AIR & BRAKE SYSTEM

SECTION 4

4-3	Supply Components
80-369	Service - AD-4 Air Dryers
80-194	Expello Valve Service
4-5	Actuator Components
80-314	Maxi-Brake Spring Brake Service



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 19 AUG 1999

REVISED: 13 JAN 2000

Revision Level: J

PAGE: 3 of 4

MODEL: L4115E

SERIAL NO: 109248

HYDRAULIC SYSTEM

SECTION 5

5-1	Systems & Circuits
80-421	DanFoss Steering System Operation & Troubleshooting
80-187	Basic Lumberjack Hydraulic Troubleshooting
576937	Hydraulic Schematic
572571	Hydraulic System - Cowl to Valves
572168	Hydraulic System - Steering
0087	Troubleshooting Hydraulic Systems
5-2	Pumps
80-286	Roller Bearing Pumps Service Instructions
0079	Gear Pump Failures
5-3	Valves
80-568	Service - Husco Port Relief / Anti-Cav
80-423	Steering Control Unit Service
80-422	Flow Amplifier Service
80-280	Control Valve Service
80-271	Service Manual for HUSCO Control Valves
80-241	Remote Control Valve Service
5-4	Cylinders
80-044	Hydraulic Cylinder Repair
5-5	Filters
80-553	Hydraulic In-Tank Return Filter - Maintenance
80-244	High Pressure Filter Service
5-6	Miscellaneous
80-509	Hydraulic Load Indicator
80-236	Pressurized Hydraulic Tank Warning

ELECTRICAL SYSTEM

SECTION 6

6-1	Systems & Circuits
577264	Electrical Schematic
6-2	Components
80-333	Audio/Visual Engine Protection Service
80-238	Alternator Troubleshooting and Repair Procedures
80-092	Battery Maintenance
0161	Alternator Servicing Precautions



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 19 AUG 1999
REVISED: 13 JAN 2000

Revision Level: J

PAGE: 4 of 4
MODEL: L4115E
SERIAL NO: 109248

CAB & COWL

SECTION 7

7-3 **Miscellaneous**
80-512 Service - RED DOT HVAC

FRAME & ATTACHMENTS

SECTION 8

8-1 **Frame & Attachments**
80-222 Center Swivel Bearing Adjustment Procedure

ACCESSORIES & OPTIONS

SECTION 9

9-1 **Accessories & Options**
80-584 Fire Suppression System Service
80-527 Electric Fire Detection and Actuation System Service

MAINTENANCE & LUBRICATION

SECTION 10

10-1 **Maintenance and Lubrication**
80-257 Lubricant Selection & Specifications
80-507 L4115 Maintenance & Lubrication