



# MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 23 October 00

REVISED: 15 May 01

Revision Level: G

PAGE: 1 of 4

MODEL: L4115E

SERIAL NO: 109249

---

## GENERAL INFORMATION

SECTION 1

<b>1-1</b>	<b>General</b>
-----	Master Check Sheet
80-035	How to Read Your Master Check Sheet
79-011	Manufacturer's Warranty
<b>1-2</b>	<b>Operation</b>
80-103	Start & Stop Procedures
<b>1-3</b>	<b>Service</b>
0081	"Loctite" Usage & Application
0130	Capscrew Grades & Torque Values
<b>1-4</b>	<b>Safety</b>
80-508	Safety Precautions

---

## POWER UNIT

SECTION 2

<b>2-1</b>	<b>Engine</b>
SEBU6959-01	Operation and Maintenance Manual, 3406E & 3456
SEBU6103-05	Maintenance Management Schedules
<b>2-5</b>	<b>Air Intake &amp; Exhaust</b>
80-045A	Air Intake System (Service)
<b>2-6</b>	<b>Cooling</b>
E0124	Radiator Fill Procedures
80-287	Radiator & Oil Cooler Service



# MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 23 October 00

REVISED: 15 May 01

Revision Level: G

PAGE: 2 of 4

MODEL: L4115E

SERIAL NO: 109249

---

## DRIVETRAIN

## SECTION 3

- 3-2 Transmission and Converter**  
SMC8000 Maintenance & Service Manual - C8000 Converter  
SM84 Maintenance & Service Manual - 8000 Transmission  
E0017 Breather Maint for Converters & Trans.  
80-487 Electric Shift Control - Plumbing Diagram  
80-486 Engine Flywheel Indicator Set-Ups  
80-469 Transmission Circuit Plumbing
- 3-3 Drivelines**  
E0054 Driveline Installation & Lubricants  
80-627 Driveline Service & Maintenance  
80-571 Driveline Flange Orientation L4115 and L4100
- 3-4 Axles**  
SM21D Maintenance & Service Manual - 21D Series Axle  
DA850 Maintenance & Service Manual - 85,000 Series Axle  
80-227 Disc Brake Service
- 3-5 Wheels & Tires**  
80-510 Wheels & Tires

---

## AIR & BRAKE SYSTEM

## SECTION 4

- 4-3 Supply Components**  
80-194 Expello Valve Service
- 4-5 Actuator Components**  
80-248 Park Brake Caliper Service



# MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 23 October 00

REVISED: 15 May 01

Revision Level: G

PAGE: 3 of 4

MODEL: L4115E

SERIAL NO: 109249

---

## HYDRAULIC SYSTEM

SECTION 5

- 5-1 Systems & Circuits**  
80-421 DANFOSS Steering System Operation & Troubleshooting  
80-187 Basic Lumberjack Hydraulic Troubleshooting  
578032 Hydraulic Schematic  
0087 Troubleshooting Hydraulic Systems
- 5-2 Pumps**  
WSB0079 Gear Pump Failures  
80-390 Hydraulic Pump Service
- 5-3 Valves**  
80-568 Service - Husco Port Relief / Anti-Cav  
80-423 Steering Control Unit Service  
80-422 Flow Amplifier Service  
80-280 Control Valve Service  
80-271 Service Manual for HUSCO Control Valves  
80-241 Remote Control Valve Service
- 5-4 Cylinders**  
80-044 Hydraulic Cylinder Repair
- 5-5 Filters**  
80-553 Hydraulic In-Tank Return Filter - Maintenance  
80-244 High Pressure Filter Service
- 5-6 Miscellaneous**  
80-509 Hydraulic Load Indicator  
80-236 Pressurized Hydraulic Tank Warning

---

## ELECTRICAL SYSTEM

SECTION 6

- 6-1 Systems & Circuits**  
577740 Electrical Schematic
- 6-2 Components**  
E0161 Alternator Servicing Precautions  
80-333 Audio/Visual Engine Protection Service  
80-238 Alternator Troubleshooting and Repair Procedures  
80-092 Battery Maintenance



# MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 23 October 00

REVISED: 15 May 01

Revision Level: G

PAGE: 4 of 4

MODEL: L4115E

SERIAL NO: 109249

---

## CAB & COWL

SECTION 7

**7-3**                    **Miscellaneous**  
80-512                Service - RED DOT HVAC

---

## FRAME & ATTACHMENTS

SECTION 8

**8-1**                    **Frame & Attachments**  
80-222                Center Swivel Bearing Adjustment Procedure

---

## ACCESSORIES & OPTIONS

SECTION 9

**9-1**                    **Accessories & Options**  
80-584                Fire Suppression System Service  
80-646                Electric Fire Detection and Actuation System Service

---

## MAINTENANCE & LUBRICATION

SECTION 10

**10-1**                  **Maintenance and Lubrication**  
80-507                Maintenance & Lube Manual, L4115  
80-257                Lubricant Selection & Specifications