



# MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 19-Oct-04  
REVISED: 15-Sep-05

Revision Level : L

PAGE: 1 of 3  
MODEL: L4115E  
SERIAL NO: 109250

---

## GENERAL INFORMATION

SECTION 1

<b>1-1</b>	<b>General</b>
-----	Master Check Sheet
80-035	How to Read Your Master Check Sheet
<b>1-2</b>	<b>Operation</b>
80-103	Heavy Lift Vehicle Start & Stop Procedures
79-11	Manufacturer's Warranty
<b>1-4</b>	<b>Safety</b>
80-508	Safety

---

## POWER UNIT

SECTION 2

<b>2-1</b>	<b>Engine</b>
SEBU7517-01	Operation & Maintenance Manual, Cat C15/C16 Engines
SEBU6251-06	Caterpillar Diesel Engine Fluid Recommendations
<b>2-5</b>	<b>Air Intake &amp; Exhaust</b>
80-045A	Air Intake System (Service)
<b>2-6</b>	<b>Cooling</b>
E0124	Radiator Fill Procedures
80-691	Transmission Cooler Tube Removal & Replacement
80-287	Radiator & Oil Cooler Service

---

## DRIVETRAIN

SECTION 3

<b>3-2</b>	<b>Transmission and Converter</b>
SMC8000	Maintenance & Service Manual - C8000 Converter
SM84	Maintenance & Service Manual - 8000 Transmission
E0017	Breather Maint for Converters & Trans.
80-487	Electric Shift Control - Plumbing Diagram
80-486	Engine Flywheel Indicator Set-Ups
80-469	Transmission Circuit Plumbing
<b>3-3</b>	<b>Drivelines</b>
E0054	Driveline Installation & Lubricants
80-627	Driveline Service & Maintenance
80-571	Driveline Flange Orientation L4115 and L4100



# MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 19-Oct-04  
REVISED: 15-Sep-05

Revision Level : L

PAGE: 2 of 3  
MODEL: L4115E  
SERIAL NO: 109250

---

## DRIVETRAIN

## SECTION 3

<b>3-4</b>	<b>Axles</b>
DA850	Maintenance & Service Manual - 85,000 Series Axle
80-538	Differential Service - 25D
80-227	Disc Brake Service
<b>3-5</b>	<b>Wheels &amp; Tires</b>
80-510	Wheels & Tires

---

## AIR & BRAKE SYSTEMS

## SECTION 4

<b>4-3</b>	<b>Supply Components</b>
80-194	Expello Valve Service
<b>4-5</b>	<b>Actuator Components</b>
80-767	SCL25 Dry Disc Park Brake Calipers Maint Manual

---

## HYDRAULIC SYSTEM

## SECTION 5

<b>5-1</b>	<b>Systems &amp; Circuits</b>
80-421	DANFOSS Steering System Operation & Troubleshooting
80-187	Basic Lumberjack Hydraulic Troubleshooting
581104	ANSI Hydraulic Schematic
<b>5-2</b>	<b>Pumps</b>
WSB0378	Brake Pump Replacement - 239790& 248990
WSB0079	Gear Pump Failures
80-722	Hydraulic Pump Service, PVM Series
80-679	Hydraulic Pump Service Instructions
<b>5-3</b>	<b>Valves</b>
80-568	Service - Husco Port Relief / Anti-Cav
80-423	Steering Control Unit Service
80-422	Flow Amplifier Service
80-280	Control Valve Service
80-271	Service Manual for HUSCO Control Valves
80-241	Remote Control Valve Service
<b>5-4</b>	<b>Cylinders</b>
80-044	Hydraulic Cylinder Repair



# MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 19-Oct-04  
REVISED: 15-Sep-05

Revision Level : L

PAGE: 3 of 3  
MODEL: L4115E  
SERIAL NO: 109250

---

## HYDRAULIC SYSTEM

SECTION 5

<b>5-5</b>	<b>Filters</b>
80-553	Hydraulic In-Tank Return Filter - Maintenance
80-244	High Pressure Filter Service
<b>5-6</b>	<b>Miscellaneous</b>
80-236	Pressurized Hydraulic Tank Warning

---

## ELECTRICAL SYSTEM

SECTION 6

<b>6-1</b>	<b>Systems &amp; Circuits</b>
581105	Electrical Schematic
<b>6-2</b>	<b>Components</b>
E0161	Alternator Servicing Precautions
80-612	PLC Basics
80-333	Audio/Visual Engine Protection Service
80-238	Alternator Troubleshooting and Repair Procedures
80-092	Battery Maintenance

---

## CAB & COWL

SECTION 7

<b>7-1</b>	<b>Basic Structure</b>
80-512	Service Manual - HD Vehicle HVAC Systems

---

## FRAME & ATTACHMENTS

SECTION 8

<b>8-1</b>	<b>Frame &amp; Attachments</b>
80-222	Center Swivel Bearing Adjustment Procedure

---

## ACCESSORIES & OPTIONS

SECTION 9

<b>9-1</b>	<b>Accessories &amp; Options</b>
80-646	Electric Fire Detection and Actuation System Service

---

## MAINTENANCE & LUBRICATION

SECTION 10

<b>10-1</b>	<b>Maintenance and Lubrication</b>
80-683	Maintenance & Lube Manual, Logstackers
80-257	Lubricant Selection & Specifications