



# MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE:  
REVISED: 09-Aug-05

Revision Level : H

PAGE: 1 of 3  
MODEL: L4115E  
SERIAL NO: 109251

---

## GENERAL INFORMATION

## SECTION 1

|            |  |
|------------|--|
| <b>1-1</b> | <b>General</b>                             |
| -----      | Master Check Sheet                         |
| 80-035     | How to Read Your Master Check Sheet        |
| <b>1-2</b> | <b>Operation</b>                           |
| 80-103     | Heavy Lift Vehicle Start & Stop Procedures |
| 79-11      | Manufacturer's Warranty                    |
| <b>1-4</b> | <b>Safety</b>                              |
| 80-508     | Safety                                     |

---

## POWER UNIT

## SECTION 2

|             |   |
|-------------|---|
| <b>2-1</b>  | <b>Engine</b>                                       |
| SEBU7517-01 | Operation & Maintenance Manual, Cat C15/C16 Engines |
| SEBU6251-06 | Caterpillar Diesel Engine Fluid Recommendations     |
| <b>2-5</b>  | <b>Air Intake &amp; Exhaust</b>                     |
| 80-045A     | Air Intake System (Service)                         |
| <b>2-6</b>  | <b>Cooling</b>                                      |
| E0124       | Radiator Fill Procedures                            |
| 80-691      | Transmission Cooler Tube Removal & Replacement      |
| 80-287      | Radiator & Oil Cooler Service                       |

---

## DRIVETRAIN

## SECTION 3

|            |  |
|------------|--|
| <b>3-2</b> | <b>Transmission and Converter</b>                |
| SMC8000    | Maintenance & Service Manual - C8000 Converter   |
| SM84       | Maintenance & Service Manual - 8000 Transmission |
| E0017      | Breather Maint for Converters & Trans.           |
| 80-487     | Electric Shift Control - Plumbing Diagram        |
| 80-486     | Engine Flywheel Indicator Set-Ups                |
| 80-469     | Transmission Circuit Plumbing                    |
| <b>3-3</b> | <b>Drivelines</b>                                |
| E0054      | Driveline Installation & Lubricants              |
| 80-627     | Driveline Service & Maintenance                  |
| 80-571     | Driveline Flange Orientation L4115 and L4100     |



# MASTER CHECK SHEET SERVICE MANUAL INDEX

PAGE: 2 of 3  
MODEL: L4115E  
SERIAL NO: 109251

DATE:  
REVISED: 09-Aug-05

Revision Level : H

---

## DRIVETRAIN

SECTION 3

|            |   |
|------------|---|
| <b>3-4</b> | <b>Axles</b>                                      |
| DA850      | Maintenance & Service Manual - 85,000 Series Axle |
| 80-538     | Differential Service - 25D                        |
| 80-227     | Disc Brake Service                                |
| <b>3-5</b> | <b>Wheels &amp; Tires</b>                         |
| 80-510     | Wheels & Tires                                    |

---

## AIR & BRAKE SYSTEMS

SECTION 4

|            |   |
|------------|---|
| <b>4-3</b> | <b>Supply Components</b>                        |
| 80-194     | Expello Valve Service                           |
| <b>4-5</b> | <b>Actuator Components</b>                      |
| 80-767     | SCL25 Dry Disc Park Brake Calipers Maint Manual |

---

## HYDRAULIC SYSTEM

SECTION 5

|            |   |
|------------|---|
| <b>5-1</b> | <b>Systems &amp; Circuits</b>                       |
| 80-421     | DANFOSS Steering System Operation & Troubleshooting |
| 80-187     | Basic Lumberjack Hydraulic Troubleshooting          |
| 581104     | ANSI Hydraulic Schematic                            |
| <b>5-2</b> | <b>Pumps</b>  |
| WSB0378    | Brake Pump Replacement - 239790& 248990             |
| WSB0079    | Gear Pump Failures                                  |
| 80-722     | Hydraulic Pump Service, PVM Series                  |
| 80-679     | Hydraulic Pump Service Instructions                 |
| <b>5-3</b> | <b>Valves</b>                                       |
| 80-568     | Service - Husco Port Relief / Anti-Cav              |
| 80-423     | Steering Control Unit Service                       |
| 80-422     | Flow Amplifier Service                              |
| 80-271     | Service Manual for HUSCO Control Valves             |
| 80-241     | Remote Control Valve Service                        |
| <b>5-4</b> | <b>Cylinders</b>                                    |
| 80-044     | Hydraulic Cylinder Repair                           |
| <b>5-5</b> | <b>Filters</b>                                      |
| 80-553     | Hydraulic In-Tank Return Filter - Maintenance       |
| 80-244     | High Pressure Filter Service                        |



# MASTER CHECK SHEET SERVICE MANUAL INDEX

PAGE: 3 of 3  
MODEL: L4115E  
SERIAL NO: 109251

DATE:  
REVISED: 09-Aug-05

Revision Level : H

---

## HYDRAULIC SYSTEM

SECTION 5

**5-6**                      **Miscellaneous**  
80-236                    Pressurized Hydraulic Tank Warning

---

## ELECTRICAL SYSTEM

SECTION 6

**6-1**                      **Systems & Circuits**  
582116                    Electrical Schematic

**6-2**                      **Components**  
E0161                    Alternator Servicing Precautions  
80-612                    PLC Basics  
80-333                    Audio/Visual Engine Protection Service  
80-092                    Battery Maintenance

---

## CAB & COWL

SECTION 7

**7-1**                      **Basic Structure**  
80-512                    Service Manual - HD Vehicle HVAC Systems

---

## FRAME & ATTACHMENTS

SECTION 8

**8-1**                      **Frame & Attachments**  
80-222                    Center Swivel Bearing Adjustment Procedure

---

## ACCESSORIES & OPTIONS

SECTION 9

**9-1**                      **Accessories & Options**  
80-646                    Electric Fire Detection and Actuation System Service

---

## MAINTENANCE & LUBRICATION

SECTION 10

**10-1**                    **Maintenance and Lubrication**  
80-683                    Maintenance & Lube Manual, Logstackers  
80-257                    Lubricant Selection & Specifications