



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE:
REVISED: 27-Feb-06

Revision Level : B

PAGE: 1 of 3
MODEL: L4115E
SERIAL NO: 109252

GENERAL INFORMATION

SECTION 1

1-1	General
-----	Master Check Sheet
80-035	How to Read Your Master Check Sheet
1-2	Operation
80-103	Heavy Lift Vehicle Start & Stop Procedures
1-3	Service
WSB0130	Capscrew Grades & Torque Ratings
1-4	Safety
80-508	Safety

POWER UNIT

SECTION 2

2-5	Air Intake & Exhaust
80-045A	Air Intake System (Service)

DRIVETRAIN

SECTION 3

3-2	Transmission and Converter
SMC8000	Maintenance & Service Manual - C8000 Converter
SM84	Maintenance & Service Manual - 8000 Transmission
E0017	Breather Maint for Converters & Trans.
80-487	Electric Shift Control - Plumbing Diagram
80-486	Engine Flywheel Indicator Set-Ups
80-469	Transmission Circuit Plumbing
3-3	Drivelines
E0054	Driveline Installation & Lubricants
80-627	Driveline Service & Maintenance
80-571	Driveline Flange Orientation L4115 and L4100
3-4	Axles
SM25D	Maintenance & Service Manual - 25D Series Axle
80-538	Differential Service - 25D
80-227	Disc Brake Service
3-5	Wheels & Tires
80-510	Wheels & Tires



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE:
REVISED: 27-Feb-06

Revision Level : B

PAGE: 2 of 3
MODEL: L4115E
SERIAL NO: 109252

AIR & BRAKE SYSTEMS

SECTION 4

- | | |
|----------------------|---|
| 4-3
80-194 | Supply Components
Expello Valve Service |
| 4-5
80-767 | Actuator Components
SCL25 Dry Disc Park Brake Calipers Maint Manual |

HYDRAULIC SYSTEM

SECTION 5

- | | |
|--|---|
| 5-1
E0087
80-421
80-187
582298 | Systems & Circuits
Troubleshooting Hydraulic Systems
DANFOSS Steering System Operation & Troubleshooting
Basic Lumberjack Hydraulic Troubleshooting
ANSI Hydraulic Schematic |
| 5-2
WSB0079
80-722
80-679 | Pumps
Gear Pump Failures
Hydraulic Pump Service, PVM Series
Hydraulic Pump Service Instructions |
| 5-3
80-568
80-423
80-422
80-271
80-241 | Valves
Service - Husco Port Relief / Anti-Cav
Steering Control Unit Service
Flow Amplifier Service
Service Manual for HUSCO Control Valves
Remote Control Valve Service |
| 5-4
80-044 | Cylinders
Wagner Hydraulic Cylinder Repair |
| 5-5
80-553
80-244 | Filters
Hydraulic In-Tank Return Filter - Maintenance
High Pressure Filter Service |
| 5-6
80-236 | Miscellaneous
Pressurized Hydraulic Tank Warning |

ELECTRICAL SYSTEM

SECTION 6

- | | |
|----------------------|---|
| 6-1
582425 | Systems & Circuits
ANSI Schematic, Electric 24V |
|----------------------|---|



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE:
REVISED: 27-Feb-06

Revision Level : B

PAGE: 3 of 3
MODEL: L4115E
SERIAL NO: 109252

ELECTRICAL SYSTEM

SECTION 6

6-2	Components
E0161	Alternator Servicing Precautions
80-612	PLC Basics
80-333	Audio/Visual Engine Protection Service
80-092	Battery Maintenance

CAB & COWL

SECTION 7

7-1	Basic Structure
80-512	Service Manual - HD Vehicle HVAC Systems

FRAME & ATTACHMENTS

SECTION 8

8-1	Frame & Attachments
80-222	Center Swivel Bearing Adjustment Procedure

ACCESSORIES & OPTIONS

SECTION 9

9-1	Accessories & Options
80-813	LVS Fire Suppression System
80-646	Electric Fire Detection and Actuation System Service
80-584	Fire Suppression System Service

MAINTENANCE & LUBRICATION

SECTION 10

10-1	Maintenance and Lubrication
80-683	Maintenance & Lube Manual, Logstackers
80-257	Lubricant Selection & Specifications