



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE:
REVISED: 28-Feb-07

Revision Level : C

PAGE: 1 of 3
MODEL: L4115CTL
SERIAL NO: 109253

GENERAL INFORMATION

SECTION 1

1-1	General
-----	Master Check Sheet
80-035	How to Read Your Master Check Sheet
79-11	Manufacturer's Warranty
1-2	Operation
80-103	Heavy Lift Vehicle Start & Stop Procedures
1-3	Service
WSB0130	Capscrew Grades & Torque Ratings
1-4	Safety
80-508	Safety

POWER UNIT

SECTION 2

2-1	Engine
SEBU7517-01	Operation & Maintenance Manual, Cat C15/C16 Engines
SEBU6251-06	Caterpillar Diesel Engine Fluid Recommendations
2-5	Air Intake & Exhaust
80-045A	Air Intake System (Service)
2-6	Cooling
E0124	Radiator Fill Procedures
80-287	Radiator & Oil Cooler Service

DRIVETRAIN

SECTION 3

3-2	Transmission and Converter
SMC8000	Maintenance & Service Manual - C8000 Converter
SM84	Maintenance & Service Manual - 8000 Transmission
E0017	Breather Maint for Converters & Trans.
80-487	Electric Shift Control - Plumbing Diagram
80-486	Engine Flywheel Indicator Set-Ups
80-469	Transmission Circuit Plumbing
3-3	Drivelines
E0054	Driveline Installation & Lubricants
80-627	Driveline Service & Maintenance
80-571	Driveline Flange Orientation L4115 and L4100



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE:
REVISED: 28-Feb-07

Revision Level : C

PAGE: 2 of 3
MODEL: L4115CTL
SERIAL NO: 109253

DRIVETRAIN

SECTION 3

3-4	Axles
SM25D	Maintenance & Service Manual - 25D Series Axle
80-538	Differential Service - 25D
80-227	Disc Brake Service
3-5	Wheels & Tires
80-510	Wheels & Tires

AIR & BRAKE SYSTEMS

SECTION 4

4-3	Supply Components
80-194	Expello Valve Service
4-5	Actuator Components
80-767	SCL25 Dry Disc Park Brake Calipers Maint Manual

HYDRAULIC SYSTEM

SECTION 5

5-1	Systems & Circuits
E0087	Troubleshooting Hydraulic Systems
80-421	DANFOSS Steering System Operation & Troubleshooting
80-187	Basic Lumberjack Hydraulic Troubleshooting
582298	ANSI Hydraulic Schematic
5-2	Pumps
WSB0079	Gear Pump Failures
80-722	Hydraulic Pump Service, PVM Series
80-679	Hydraulic Pump Service Instructions
5-3	Valves
80-568	Service - Husco Port Relief / Anti-Cav
80-423	Steering Control Unit Service
80-422	Flow Amplifier Service
80-271	Service Manual for HUSCO Control Valves
80-241	Remote Control Valve Service
5-4	Cylinders
80-044	Wagner Hydraulic Cylinder Repair
5-5	Filters
80-553	Hydraulic In-Tank Return Filter - Maintenance
80-244	High Pressure Filter Service



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE:
REVISED: 28-Feb-07

Revision Level : C

PAGE: 3 of 3
MODEL: L4115CTL
SERIAL NO: 109253

HYDRAULIC SYSTEM

SECTION 5

5-6 **Miscellaneous**
80-236 Pressurized Hydraulic Tank Warning

ELECTRICAL SYSTEM

SECTION 6

6-1 **Systems & Circuits**
582425 ANSI Schematic, Electric 24V

6-2 **Components**
E0161 Alternator Servicing Precautions
80-612 PLC Basics
80-333 Audio/Visual Engine Protection Service
80-092 Battery Maintenance

CAB & COWL

SECTION 7

7-1 **Basic Structure**
80-512 Service Manual - HD Vehicle HVAC Systems

FRAME & ATTACHMENTS

SECTION 8

8-1 **Frame & Attachments**
80-222 Center Swivel Bearing Adjustment Procedure

ACCESSORIES & OPTIONS

SECTION 9

9-1 **Accessories & Options**
80-813 LVS Fire Suppression System
80-646 Electric Fire Detection and Actuation System Service
80-584 Fire Suppression System Service

MAINTENANCE & LUBRICATION

SECTION 10

10-1 **Maintenance and Lubrication**
80-683 Maintenance & Lube Manual, Logstackers
80-257 Lubricant Selection & Specifications