

DATE: 17 JUNE 98**MODEL:** LL600**REVISED:** 10 SEPT 98

Revision Level: L

SERIAL NO: 116621**GENERAL INFORMATION****SECTION 1**

- | | |
|------------|--|
| 1-1 | General |
| 79-11 | Manufacturer's Warranty |
| 80-035 | How to Read Your Master Check Sheet |
| 1-2 | Operation |
| 80-103 | Heavy Lift Vehicle Start & Stop Procedures |
| 1-3 | Service |
| 0130 | Capscrew Grades & Torque Ratings |
| 0081 | "Loctite" Usage and Application |
| 1-4 | Safety |
| 80-508 | Safety |

POWER UNIT**SECTION 2**

- | | |
|-------------|--|
| 2-1 | Engine |
| SEBU6336-01 | Operation & Maintenance Manual, 3406 Series Engine |
| 2-5 | Air Intake & Exhaust |
| 80-045A | Air Intake System (Service) |
| 2-6 | Cooling |
| 80-287 | Radiator & Oil Cooler Service |
| 0124 | Radiator Fill Procedures |

DRIVETRAIN**SECTION 3**

- | | |
|------------|--|
| 3-2 | Transmission and Converter |
| SMC8000 | Maintenance & Service Manual - C8000 Converter |
| SM64 | Maintenance & Service Manual - 6000 Transmission |
| 80-487 | Electric Shift Control - Plumbing Diagram |
| 80-486 | Engine Flywheel Indicator Set-Ups |
| 80-469 | Transmission Circuit Plumbing |
| 3-4 | Axles |
| SM21D | Maintenance & Service Manual - 21D Series Axle |
| 80-227 | Disc Brake Service |

MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 17 JUNE 98

REVISED: 10 SEPT 98

Revision Level: L

PAGE: 2 of 3

MODEL: LL600

SERIAL NO: 116621

AIR & BRAKE SYSTEM

SECTION 4

HYDRAULIC SYSTEM

SECTION 5

- | | |
|------------|---|
| 5-1 | Systems & Circuits |
| 575850 | Hydraulic Schematic (Engr Print) |
| 5-2 | Pumps |
| 80-286 | Roller Bearing Pumps Service Instructions |
| 80-390 | Hydraulic Pump Service |
| 5-3 | Valves |
| 80-360 | Hydraulic Valve Service |
| 5-5 | Filters |
| 80-553 | Hydraulic In-Tank Return Filter - Maintenance |
| 80-244 | High Pressure Filter Service |

ELECTRICAL SYSTEM

SECTION 6

- | | |
|------------|--|
| 6-1 | Systems & Circuits |
| 575849 | Electrical Schematic (Engr Print) |
| 6-2 | Components |
| 80-238 | Alternator Troubleshooting and Repair Procedures |

CAB & COWL

SECTION 7

FRAME & ATTACHMENTS

SECTION 8

- | | |
|------------|---|
| 8-1 | Frame & Attachments |
| 80-222 | Center Swivel Bearing Adjustment Procedures |



MASTER CHECK SHEET SERVICE MANUAL INDEX

DATE: 17 JUNE 98

REVISED: 10 SEPT 98

Revision Level: L

PAGE: 3 of 3

MODEL: LL600

SERIAL NO: 116621

ACCESSORIES & OPTIONS

SECTION 9

9-1	Accessories & Options
80-584	Fire Suppression System Service
80-527	Electric Fire Detection and Actuation System Service

MAINTENANCE & LUBRICATION

SECTION 10

10-1	Maintenance & Lubrication
80-257	Lubricant Selection & Specifications